


BLOCK DIAGRAM—ÉLANSC400 MICROCONTROLLER

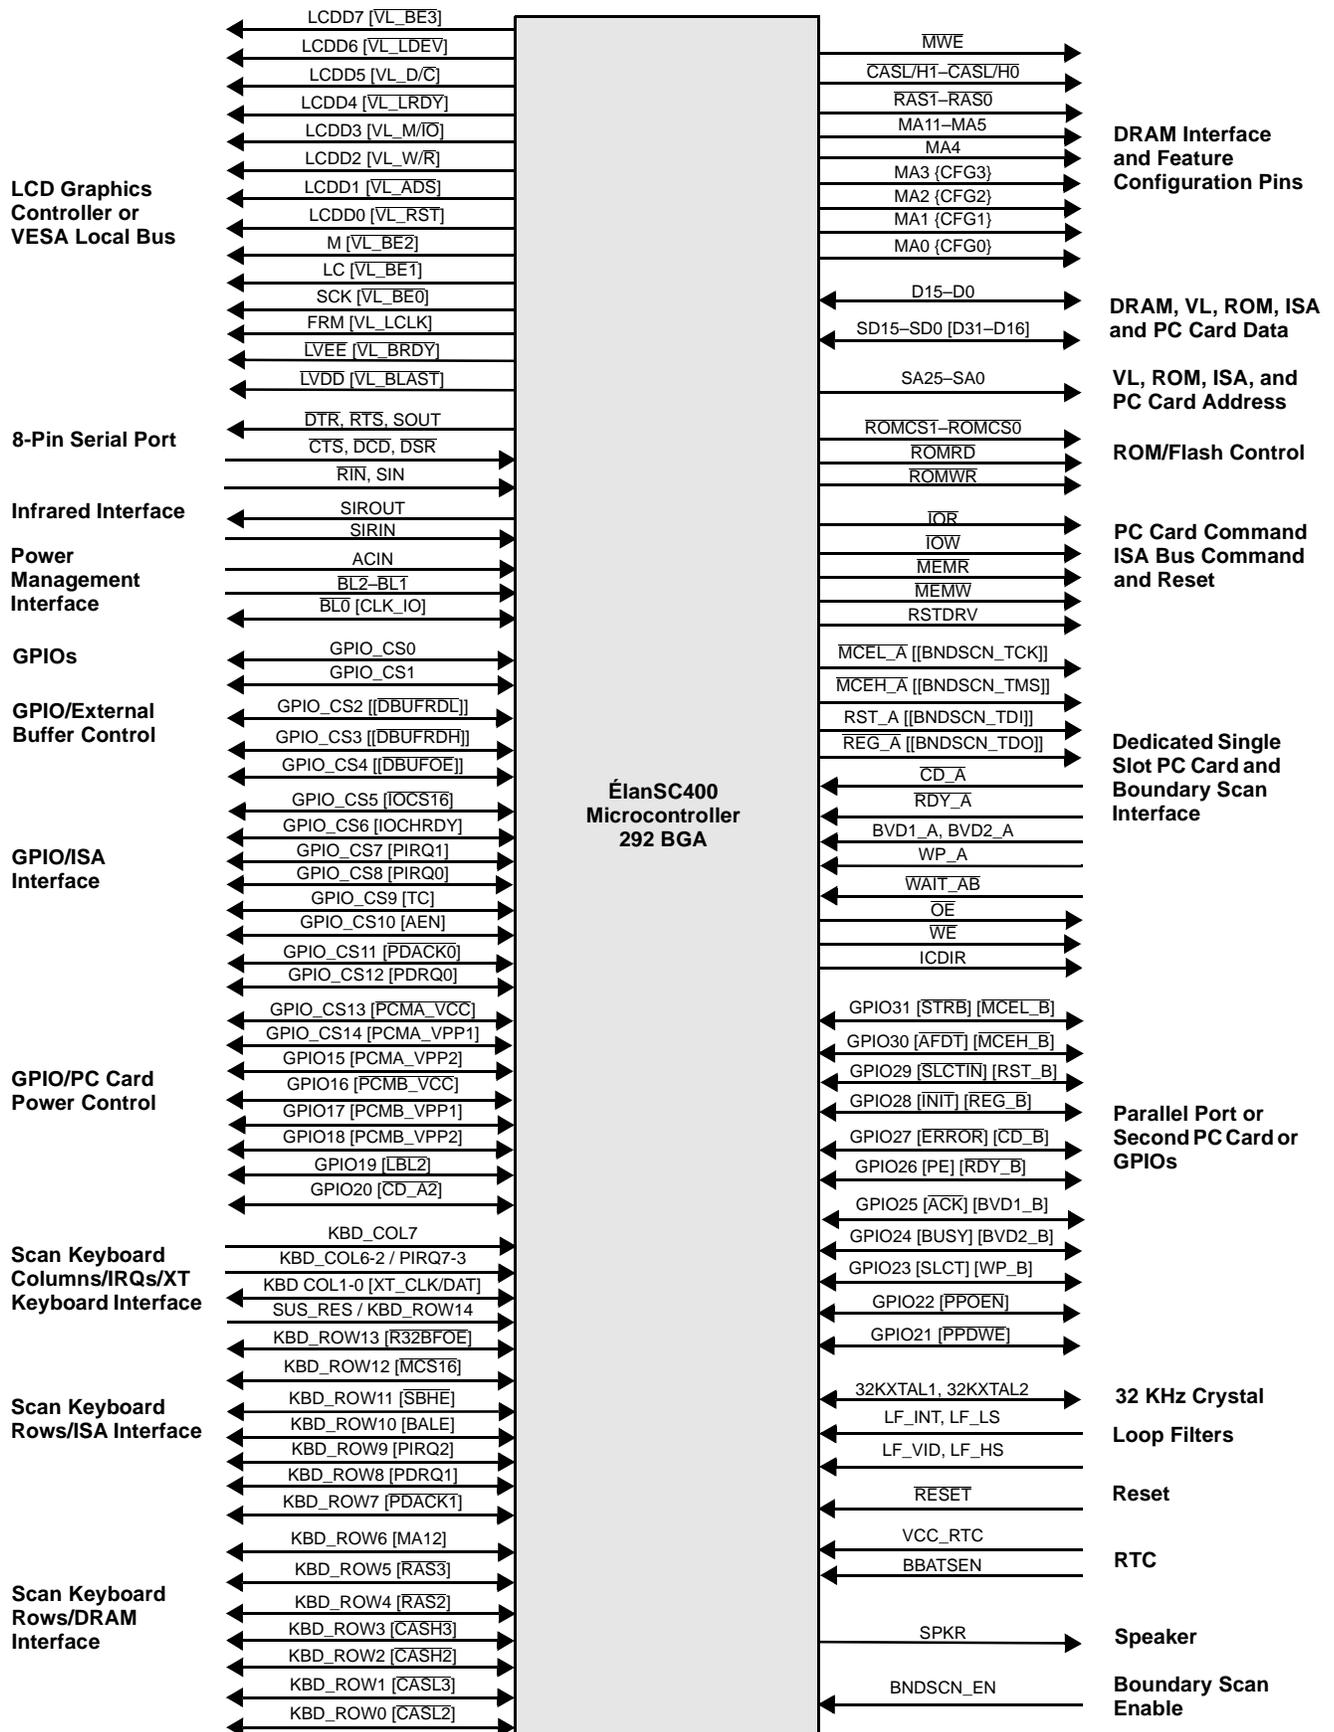

Note: / = Two functions available on the pin at the same time. { } = Function during hardware reset. [] = Alternative function selected by firmware configuration. [[]] = Alternate function selected by a hardware configuration pin state at power-on reset.