



# Arm<sup>®</sup> Architecture Reference Manual Supplement, Armv9-A


## Known issues in Issue A.a

**Non-Confidential**

Copyright © 2021 Arm Limited (or its affiliates).  
All rights reserved.

**Issue 04**

102527\_A.a\_04\_en

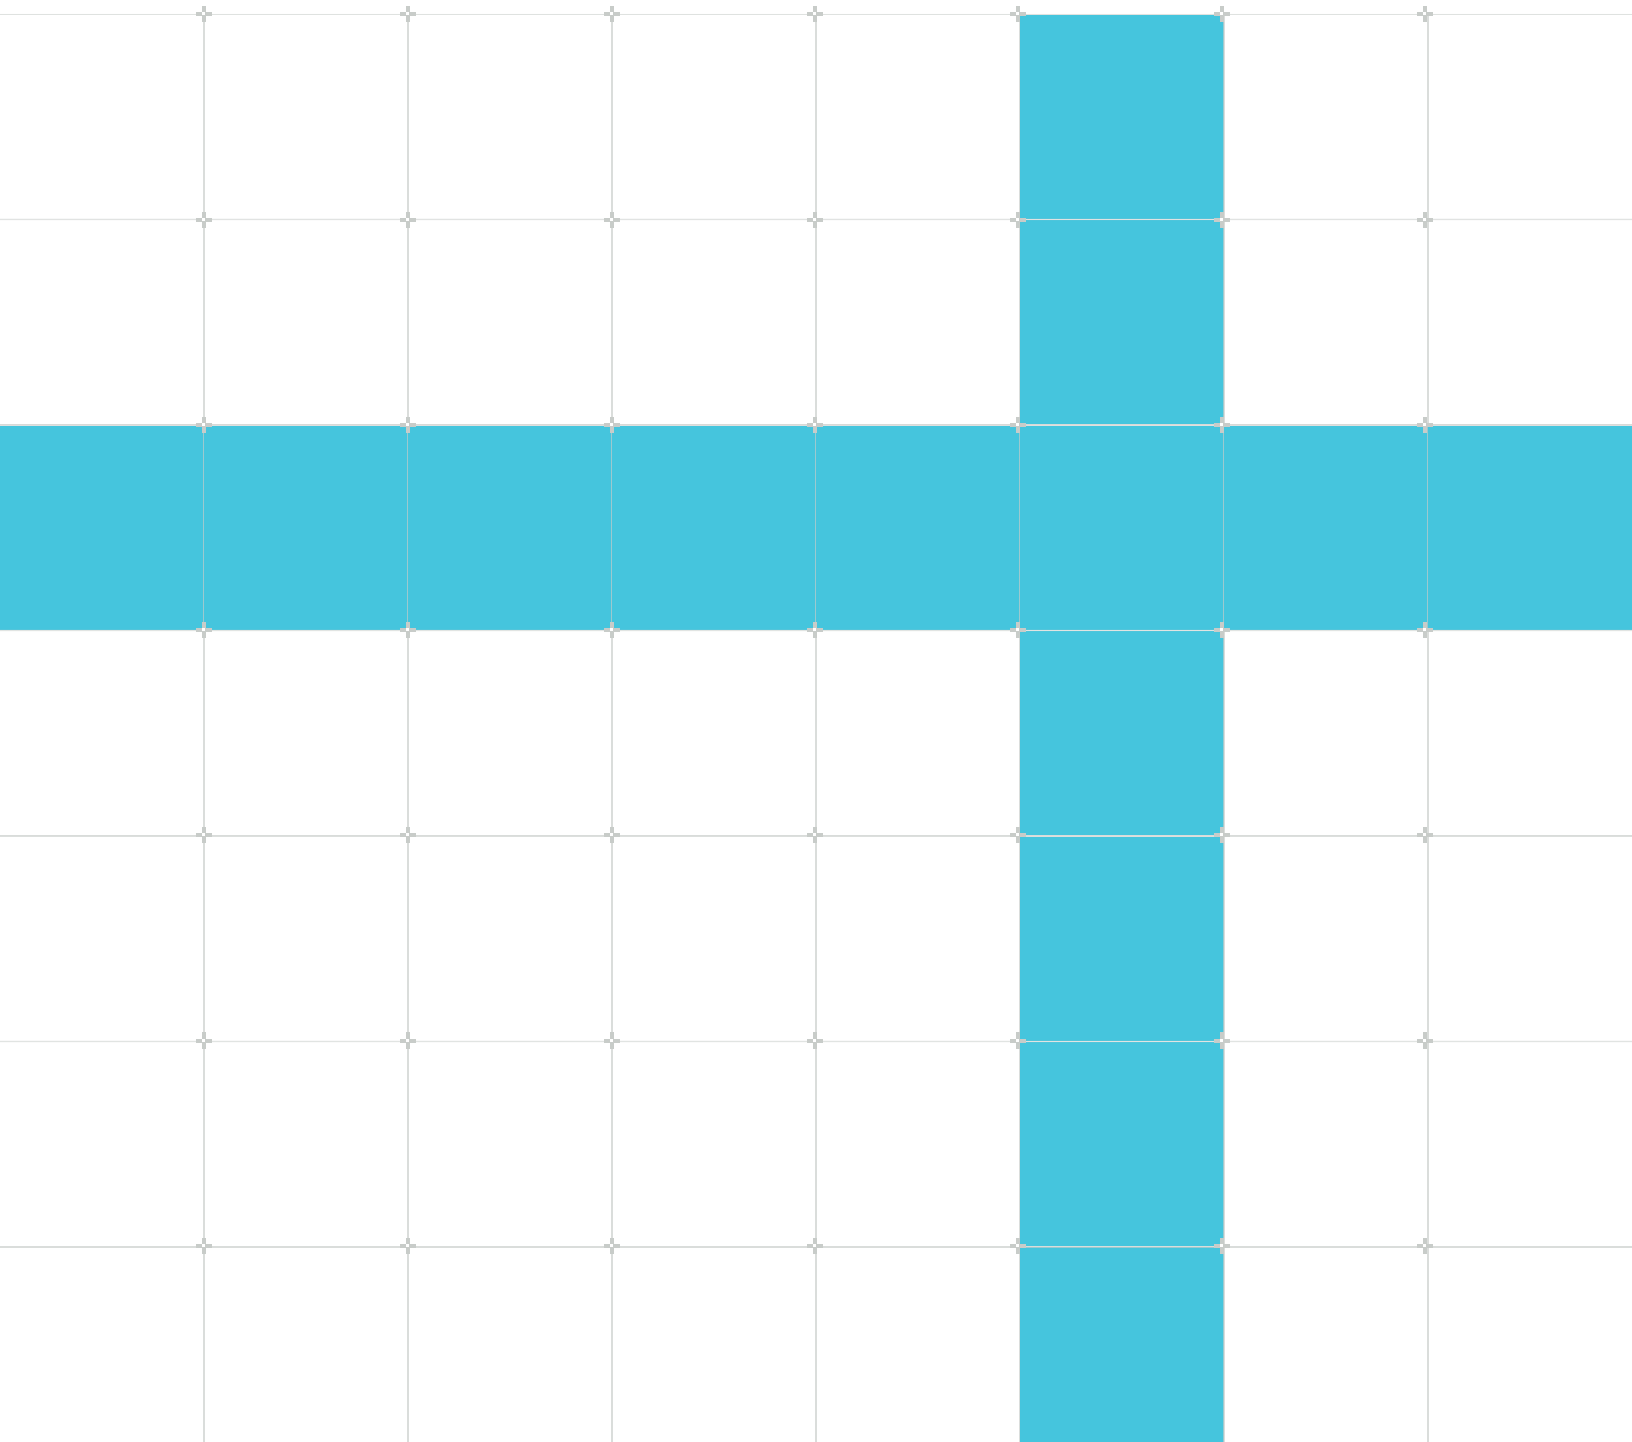

# Arm® Architecture Reference Manual Supplement, Armv9-A

## Known issues in Issue A.a

Copyright © 2021 Arm Limited (or its affiliates). All rights reserved.

### Release information

#### Document history

Issue	Date	Confidentiality	Change
A.a-00	14 May 2021	Non-Confidential	Known Issues in Arm® Architecture Reference Manual Supplement, Armv9-A, Issue A.a, as of 14 May 2021
A.a-01	30 June 2021	Non-Confidential	Known Issues in Arm® Architecture Reference Manual Supplement, Armv9-A, Issue A.a, as of 18 June 2021
A.a-02	30 July 2021	Non-Confidential	Known Issues in Arm® Architecture Reference Manual Supplement, Armv9-A, Issue A.a, as of 23 July 2021
A.a-03	30 September 2021	Non-Confidential	Known Issues in Arm® Architecture Reference Manual Supplement, Armv9-A, Issue A.a, as of 17 September 2021
A.a-04	29 October 2021	Non-Confidential	Known Issues in Arm® Architecture Reference Manual Supplement, Armv9-A, Issue A.a, as of 22 October 2021

### Proprietary Notice

This document is protected by copyright and other related rights and the practice or implementation of the information contained in this document may be protected by one or more patents or pending patent applications. No part of this document may be reproduced in any form by any means without the express prior written permission of Arm. No license, express or implied, by estoppel or otherwise to any intellectual property rights is granted by this document unless specifically stated.

Your access to the information in this document is conditional upon your acceptance that you will not use or permit others to use the information for the purposes of determining whether implementations infringe any third party patents.

THIS DOCUMENT IS PROVIDED “AS IS”. ARM PROVIDES NO REPRESENTATIONS AND NO WARRANTIES, EXPRESS, IMPLIED OR STATUTORY, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTORY QUALITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO THE DOCUMENT. For the avoidance of doubt, Arm makes no representation with respect to, and has undertaken no analysis to identify or understand the scope and content of, third party patents, copyrights, trade secrets, or other rights.

This document may include technical inaccuracies or typographical errors.

TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT WILL ARM BE LIABLE FOR ANY DAMAGES, INCLUDING WITHOUT LIMITATION ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED AND REGARDLESS OF THE THEORY OF LIABILITY, ARISING OUT OF ANY USE OF THIS DOCUMENT, EVEN IF ARM HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

This document consists solely of commercial items. You shall be responsible for ensuring that any use, duplication or disclosure of this document complies fully with any relevant export laws and regulations to assure that this document or any portion thereof is not exported, directly or indirectly, in violation of such export laws. Use of the word “partner” in reference to Arm’s customers is not intended to create or refer to any partnership relationship with any other company. Arm may make changes to this document at any time and without notice.

If any of the provisions contained in these terms conflict with any of the provisions of any click through or signed written agreement covering this document with Arm, then the click through or signed written agreement prevails over and supersedes the conflicting provisions of these terms. This document may be translated into other languages for convenience, and you agree that if there is any conflict between the English version of this document and any translation, the terms of the English version of the Agreement shall prevail.

The Arm corporate logo and words marked with ® or ™ are registered trademarks or trademarks of Arm Limited (or its subsidiaries) in the US and/or elsewhere. All rights reserved. Other brands and names mentioned in this document may be the trademarks of their respective owners. Please follow Arm’s trademark usage guidelines at <https://www.arm.com/company/policies/trademarks>.

Copyright © 2021 Arm Limited (or its affiliates). All rights reserved.

Arm Limited. Company 02557590 registered in England.

110 Fulbourn Road, Cambridge, England CB1 9NJ.

(LES-PRE-20349)

## Confidentiality Status

This document is Non-Confidential. The right to use, copy and disclose this document may be subject to license restrictions in accordance with the terms of the agreement entered into by Arm and the party that Arm delivered this document to.

## Product Status

The information in this document is Final, that is for a developed product.

## Web address

[developer.arm.com](https://developer.arm.com)

## Inclusive language commitment

Arm values inclusive communities. Arm recognizes that we and our industry have used language that can be offensive. Arm strives to lead the industry and create change.

We believe that this document contains no offensive language. To report offensive language in this document, email [terms@arm.com](mailto:terms@arm.com).

# Contents

<b>1 Introduction.....</b>	<b>7</b>
1.1 Conventions.....	7
1.2 Additional reading.....	8
1.3 Feedback.....	8
1.4 Other information.....	9
<b>2 Known issues.....</b>	<b>10</b>
2.1 General.....	10
2.1.1 D1198.....	10
2.2 The Transactional Memory Extension.....	10
2.3 The Embedded Trace Extension (ETE).....	10
2.3.1 C1094.....	11
2.3.2 D1121.....	11
2.3.3 R1122.....	12
2.3.4 D1212.....	12
2.3.5 C1213.....	13
2.3.6 D1215.....	13
2.3.7 D1259.....	14
2.4 The Trace Buffer Extension (TRBE).....	14
2.4.1 D1091.....	14
2.4.2 C1139.....	16
2.4.3 C1140.....	16
2.4.4 R1141.....	17
2.4.5 D1145.....	17
2.4.6 R1150.....	17
2.4.7 R1191.....	18
2.4.8 D1257.....	18
2.5 The Branch Record Buffer Extension (BRBE).....	18
2.5.1 C1225.....	18
2.5.2 D1226.....	19
2.5.3 D1236.....	19
2.5.4 C1238.....	19

2.5.5 D1242.....20

# 1 Introduction

## 1.1 Conventions

The following subsections describe conventions used in Arm documents.




### Glossary




The Arm Glossary is a list of terms used in Arm documentation, together with definitions for those terms. The Arm Glossary does not contain terms that are industry standard unless the Arm meaning differs from the generally accepted meaning.

See the Arm® Glossary for more information: [developer.arm.com/glossary](https://developer.arm.com/glossary).

### Typographic conventions

Arm documentation uses typographical conventions to convey specific meaning.

Convention	Use
<i>italic</i>	Introduces special terminology, denotes cross-references, and citations.
<b>bold</b>	Highlights interface elements, such as menu names. Denotes signal names. Also used for terms in descriptive lists, where appropriate.
monospace	Denotes text that you can enter at the keyboard, such as commands, file and program names, and source code.
<i>monospace italic</i>	Denotes arguments to monospace text where the argument is to be replaced by a specific value.
<b>monospace bold</b>	Denotes language keywords when used outside example code.
monospace <u>underline</u>	Denotes a permitted abbreviation for a command or option. You can enter the underlined text instead of the full command or option name.
<and>	Encloses replaceable terms for assembler syntax where they appear in code or code fragments. For example: <pre>MRC p15, 0, &lt;Rd&gt;, &lt;CRn&gt;, &lt;CRm&gt;, &lt;Opcode_2&gt;</pre>
<b>SMALL CAPITALS</b>	Used in body text for a few terms that have specific technical meanings, that are defined in the <i>Arm Glossary</i> . For example, <b>IMPLEMENTATION DEFINED</b> , <b>IMPLEMENTATION SPECIFIC</b> , <b>UNKNOWN</b> , and <b>UNPREDICTABLE</b> .
 Caution	This represents a recommendation which, if not followed, might lead to system failure or damage.
 Warning	This represents a requirement for the system that, if not followed, might result in system failure or damage.
 Danger	This represents a requirement for the system that, if not followed, will result in system failure or damage.

Convention	Use
 Note	This represents an important piece of information that needs your attention.
 Tip	This represents a useful tip that might make it easier, better or faster to perform a task.
 Remember	This is a reminder of something important that relates to the information you are reading.

## 1.2 Additional reading

This document contains information that is specific to this product. See the following documents for other relevant information:

**Table 1-2: Arm publications**

Document Name	Document ID	Licensee only
Arm® Architecture Reference Manual Supplement, Armv9-A, Issue A.a	DDI 0608A.a	No

## 1.3 Feedback

Arm welcomes feedback on this product and its documentation.

### Feedback on this product

If you have any comments or suggestions about this product, contact your supplier and give:

- The product name.
- The product revision or version.
- An explanation with as much information as you can provide. Include symptoms and diagnostic procedures if appropriate.

### Feedback on content

If you have comments on content then send an e-mail to [errata@arm.com](mailto:errata@arm.com). Give:

- The title Arm® Architecture Reference Manual Supplement, Armv9-A Known issues in Issue A.a.
- The number 102527\_A.a\_04\_en.
- If applicable, the page number(s) to which your comments refer.
- A concise explanation of your comments.



Arm also welcomes general suggestions for additions and improvements.



Arm tests the PDF only in Adobe Acrobat and Acrobat Reader, and cannot guarantee the quality of the represented document when used with any other PDF reader.

---

## 1.4 Other information

See the Arm website for other relevant information.

- [Arm® Developer](#).
- [Arm® Documentation](#).
- [Technical Support](#).
- [Arm® Glossary](#).

## 2 Known issues

This document records known issues in the Arm Architecture Reference Manual Supplement, Armv9-A (DDI 0608), Issue A.a.

This document lists the known issues in the architectural rules content only. For a list of known issues in the register, instruction, and pseudocode XML, please see <https://developer.arm.com/architectures/cpu-architecture/a-profile/exploration-tools>.

Key

- C = Clarification.
- D = Defect.
- R = Relaxation.
- E = Enhancement.

### 2.1 General

Non-architectural issues:

#### 2.1.1 D1198

In part A (Preface), in the 'Additional reading' section, the reference that reads:

[2] Arm Architecture Reference Manual Supplement, The Scalable Vector Extension 2 (SVE2), for ARMv9-A. (ARM DDI 614).

is corrected to read:

[2] Arm Architecture Reference Manual Supplement, The Scalable Vector Extensions. (ARM DDI 584).

### 2.2 The Transactional Memory Extension

No issues.

### 2.3 The Embedded Trace Extension (ETE)

The known issues in the ETE architecture are listed below:

## 2.3.1 C1094

In section D10.1.1 (Enabling the trace unit), in Listing D10.1 'Example code sequence to enable the trace unit', the example assembly code that reads:

```
MSR TRCPRGCTLR, x0    ;; Enable the ETE.
ISB                   ;; Synchronize the write to TRCPRGCTLR
```

is changed to:

```
MSR TRCPRGCTLR, x0    ;; Enable the ETE.
;; Wait for TRCSTATR.IDLE==0
poll_idle
ISB                   ;; Synchronize the write to TRCPRGCTLR
MRS x1, TRCSTATR
TBNZ x1, #1, poll_idle
```

In section D10.1.2 (Disabling the trace unit), in Listing D10.2 'Example code sequence to disable the trace unit', the code that reads:

```
MSR TRCPRGCTLR, x1    ;; Disable the trace unit
;; Wait for TRCSTATR.IDLE==1 and TRCSTATR.PMSTABLE==1
poll_idle
ISB
MRS x1, TRCSTATR
TST x1, #3
B.EQ poll_idle
```

is changed to:

```
MSR TRCPRGCTLR, x1    ;; Disable the trace unit
;; Wait for TRCSTATR.IDLE==1 and TRCSTATR.PMSTABLE==1
poll_idle
ISB
MRS x1, TRCSTATR
AND x1, x1, #3
CMP x1, #3
B.NE poll_idle
```

## 2.3.2 D1121

In section D6.5 (Trace unit power states), the following text is added:

A system might support a Debug power domain which contains the interface between the trace unit and the external debugger, which is powered up when the external debugger needs to connect to the system. Such a Debug power domain is described in the Arm architecture.

If the trace unit core power domain can be powered down independently of the Debug power domain, Arm recommends the system implements an external debug component with a Power-up request mechanism which can request the trace unit core power domain to be powered up.

The Power-up request mechanism must be a CoreSight Class 0x9 ROM Table containing a parent entry for the trace unit.

A parent entry of a component is one of:

- An entry in the ROM table that locates the component.
- An entry in a first ROM table that locates a second ROM table that includes a parent entry for the component. The second ROM table is a descendant of the first ROM table.

This definition of a parent entry is recursive, and therefore the Power-up request mechanism might be high up in a hierarchy of ROM tables.

The ROM table and any descendants might describe other debug components, including debug components for other PEs.

The ROM table might have parent entries in other ROM tables, and those parent entries might also have a Power-up request mechanism in those ROM tables.

If the Power-up request mechanism is implemented, in the Class 0x9 ROM Table containing the Power-up request mechanism for the trace unit:

- The POWERIDVALID bit in the parent entry must be 1.
- The POWERID field in the parent entry has an **IMPLEMENTATION DEFINED** value.

It is **IMPLEMENTATION DEFINED** whether the trace unit core power domain is the PE Core power domain or some other power domain.

For more information on the CoreSight Class 0x9 ROM Table, see Arm CoreSight Architecture Specification.

### 2.3.3 R1122

In section D6.8.2 (ViewInst include/exclude function filtering), subsection 'Instruction blocks', the following relaxation is added:

If a block of instructions is not entirely covered by at least one individual ARC selected by TRCVIIECTLR.EXCLUDE, it is **CONSTRAINED UNPREDICTABLE** whether the block is excluded or not. This applies even if other ARCs selected by TRCVIIECTLR.EXCLUDE cover the rest of the block.

### 2.3.4 D1212

In section D3.1.1 (Direct P0 instructions), the WFI, WFE, WFIT, and WFET instructions are added to Table D3.1, 'A64 direct P0 instructions'. Equivalent changes are made in section D3.2.1 (Direct P0 instructions), in Table D3.5 'A32 direct P0 instructions', and section D3.3.1 (Direct P0 instructions), in Table D3.9 'T32 direct P0 instructions', where the WFI and WFE instructions are added.

## 2.3.5 C1213

In the following locations:

- Section D3.1.4 (Meaning of Atom elements), Table D3.4 'Meaning of Atom elements in AArch64 A64',
- Section D3.2.4 (Meaning of Atom elements), Table D3.8 'Meaning of Atom elements in AArch32 A32',
- Section D3.3.4 (Meaning of Atom elements), Table D3.12 'Meaning of Atom elements in AArch32 T32',
- Section D3.4.2 (Meaning of Atom elements),

the following instructions are updated to clarify that any PO instruction which is traced with an E Atom element is considered 'taken', and any PO instruction which is traced with an N Atom element is considered 'not taken':

- All variants of ERET.
- RFE.
- WFI, WFE, WFIT, and WFET.
- All variants of RET.
- ISB.

## 2.3.6 D1215

In section D7.11 (External inputs), rule  $R_{VBCBZ}$  is updated to remove PMU\_HOVFS from the list of PMU events that are always exported to the trace unit, and the following rule is added:

$R_{KRSMY}$

The following PMU events are always exported to the trace unit, unless `SelfHostedTraceEnabled() == TRUE` and `TRFCR_EL2.E2TRE` is `0b0`:

- PMU\_HOVFS.

In the same section, the rules that read:

$R_{RFWZB}$

When `SelfHostedTraceEnabled() == TRUE` and tracing is prohibited, no PMU events are exported to the trace unit except the PMU events defined by rule `VBCBZ` which are always exported.

$R_{WSXTC}$

When `SelfHostedTraceEnabled() == FALSE` and the PE is in Secure state and counting in Secure state is prohibited, no PMU events are exported to the trace unit except the PMU events defined by rule `VBCBZ` which are always exported.

are updated to read:

$R_{RFWZB}$

When `SelfHostedTraceEnabled() == TRUE` and tracing is prohibited, only the PMU events defined by rules VBCBZ and KRSMY are exported to the trace unit.

$R_{WSXTC}$

When `SelfHostedTraceEnabled() == FALSE` and the PE is in Secure state and counting in Secure state is prohibited, only the PMU events defined by rules VBCBZ and KRSMY are exported to the trace unit.

### 2.3.7 D1259

In section D10.4 (Filtering used the exclude function), the entry that reads:

Register	Value	Description
TRCVIIECTLR	0x00000100	Use ARCO for the exclude logic.

is corrected to read:

Register	Value	Description
TRCVIIECTLR	0x00010000	Use ARCO for the exclude logic.

## 2.4 The Trace Buffer Extension (TRBE)

The known issues in the TRBE architecture are listed below:

### 2.4.1 D1091

In section E1.3.2 (Common architectural events), the event definition '0x400D, PMU\_OVFS, PMU overflow, counters accessible to EL1 and ELO' that reads:

The event is generated each time an event causes a `PMEVCTNR<n>_EL1` counter overflow when `PMINTENSET_EL1[n]` is 1, for each implemented PMU counter `n` in the range `0 ≤ n < UInt(MDCR_EL2.HPMN)`, and the Cycle Counter (`n = 31`).

is corrected to read:

The event is generated each time one of the following occurs:

- An event is counted by an event counter <n> and all of the following are true:
  - PMINTENSET\_EL1[n] is 0b1.
  - One of the following is true:
    - Counting the event causes unsigned overflow of PMEVCNTR<n>\_ELO[31:0], and either FEAT\_PMUv3p5 is not implemented or PMCR\_ELO.LP is 0b0.
    - Counting the event causes unsigned overflow of PMEVCNTR<n>\_ELO[63:0], FEAT\_PMUv3p5 is implemented, and PMCR\_ELO.LP is 0b1.
  - Either EL2 is implemented and <n> in the range [0 .. (MDCR\_EL2.HPMN-1)], or EL2 is not implemented and <n> is in the range [0 .. (PMCR\_ELO.N-1)].
- A cycle is counted by PMCCNTR\_ELO, PMINTENSET\_EL1[31] is 0b1, and one of the following is true:
  - Counting the cycle causes unsigned overflow of PMCCNTR\_ELO[31:0] and PMCR\_ELO.LC is 0b0.
  - Counting the cycle causes unsigned overflow of PMCCNTR\_ELO[63:0] and PMCR\_ELO.LC is 0b1.

Similarly, the event definition '0x400F, PMU\_HOVFS, PMU overflow, counters reserved for use by EL2' that reads:

The event is generated each time an event causes a PMEVCNTR<n>\_EL1 counter overflow when PMINTENSET\_EL1[n] is 1, for each implemented PMU counter n in the range  $UInt(MDCR\_EL2.HPMN) \leq n < UInt(PMCR\_ELO.N)$ . The event is not transmitted to a PE Trace Unit while TRFCR\_EL2.E2TRE == 0b0.

is corrected to read:

The event is generated each time an event is counted by an event counter <n> and all of the following are true:

- EL2 is implemented.
- PMINTENSET\_EL1[n] is 0b1.
- One of the following is true:
  - Counting the event causes unsigned overflow of PMEVCNTR<n>\_ELO[31:0], and either FEAT\_PMUv3p5 is not implemented or MDCR\_EL2.HLP is 0b0.
  - Counting the event causes unsigned overflow of PMEVCNTR<n>\_ELO[63:0], FEAT\_PMUv3p5 is implemented, and MDCR\_EL2.HLP is 0b0.
- <n> in the range [MDCR\_EL2.HPMN .. (PMCR\_ELO.N-1)].

The event is not transmitted to a PE Trace Unit when TRFCR\_EL2.E2TRE is 0b0.

## 2.4.2 C1139

In section E1.2.1.2 (Address translation enabled), the following rules are added:

**R<sub>SJFRQ</sub>**

When the Trace Buffer Unit is Enabled, the Trace Buffer Unit might prefetch and cache address translations for the translation regime of the owning Exception level, including when the owning Exception level is out-of-context.

**I<sub>QXJZX</sub>**

**R<sub>SJFRQ</sub>** means that, when the Trace Buffer Unit is enabled and the owning Exception level is a lower Exception level, then the Trace Buffer Unit might make memory accesses to translation table entries from the translation regime of the owning Exception level, using the settings of the System registers associated with that translation regime.

If the PE is not executing in the owning Security state, or the PE is executing at EL3 and SCR\_EL3.NS does not indicate the owning Security state then the translation regime of the owning Exception level might not be the owning translation regime.

These memory accesses might be observed by other observers, to the extent that those accesses are required to be observed as determined by the shareability and cacheability of those translation table entries.

This is an exception to the rules in the section Use of out-of-context translation regimes of the Arm ARM.

## 2.4.3 C1140

In section E1.2.1.8 (Restrictions on programming the Trace Buffer Unit), the text in rule **I<sub>VRFQC</sub>** that reads:

Software context switching the Trace Buffer Unit will avoid this issue because the trace buffer management event sets TRBSR\_EL1.S to 1, meaning the Trace Buffer Unit will not become Enabled following the context switch.

is corrected to read:

Software context switching the Trace Buffer Unit will avoid this issue because the trace buffer management event sets TRBSR\_EL1.S to 1, meaning the Trace Buffer Unit will not become Running following the context switch.



## 2.4.4 R1141

In section E1.2.3 (Synchronization and the Trace Buffer Unit), the following rules are removed:

- R<sub>CJLBR</sub>.
- I<sub>FXBSC</sub>.
- R<sub>TGBVJ</sub>.

## 2.4.5 D1145

In section E1.3.2 (Common architectural events), in the definition of the '0x400F, PMU\_HOVFS, PMU overflow, counters reserved for use by EL2' event, the text that reads:

The event is not transmitted to a PE Trace Unit when TRFCR\_EL2.E2TRE is 0b0.

is changed to read:

The event is not exported to a PE Trace Unit if SelfHostedTraceEnabled() is TRUE and TRFCR\_EL2.E2TRE is 0b0. This is in addition to the rules for the export of all events to a PE Trace Unit described in Arm Architecture Reference Manual section D3.2.1.

## 2.4.6 R1150

In section E1.2.1.8 (Restrictions on programming the Trace Buffer Unit), rule R<sub>MSPSD</sub> that reads:

Considering the trace buffer pointer addresses as 64-bit unsigned integers, a current write pointer value is *out-of-range* if it is not both:

- Greater-than-or-equal-to the Base pointer.
- Less-than the Limit pointer.

Note: R<sub>MSPSD</sub> means the current write pointer is *out-of-range* if the Base pointer is not less-than the Limit pointer.

is changed to read:

A current write pointer value is *out-of-range* if any of the following are true:

- The current write pointer is greater-than-or-equal-to the Base pointer, treating both pointers as unsigned integers.
- The current write pointer is less-than the Limit pointer, treating both pointers as unsigned integers.
- Bits [63:56] of the current write pointer are not equal to bits [63:56] of the Base pointer.
- Bits [63:56] of the current write pointer are not equal to bits [63:56] of the Limit pointer.

Note:  $R_{MSPSD}$  means the current write pointer is *out-of-range* if the Base pointer is not less-than the Limit pointer or bits [63:56] of the Base pointer are not equal to bits [63:56] of the Limit pointer.

## 2.4.7 R1191

In section E1.2.3 (Synchronization and the Trace Buffer Unit), rule  $R_{GTCKK}$  is relaxed to read:

In the absence of any explicit synchronization, the trace unit generates the trace data for an instruction and the Trace Buffer Unit Accepts, Discards, or Rejects the trace data in finite time. However:

- If the Trace Buffer Unit Accepts the trace data, then the write of the trace data to memory requires explicit synchronization to Complete.
- The indirect writes to System registers made by a trace operation require explicit synchronization to guarantee they are observable.

Relatedly, in section E1.2.1.5 (Accesses to the trace buffer), in rule  $I_{VKQBR}$ , the following statement is removed:

The write reaches its endpoint in finite time.

## 2.4.8 D1257

In section E1.3.2 (Common architectural events), in the description of '0x400F, PMU\_HOVFS, PMU overflow, counters reserved for use by EL2', the text that reads:

- Counting the event causes unsigned overflow of  $PMEVCNTR<n>_{EL0}[63:0]$ , FEAT\_PMUV3p5 is implemented, and MDCR\_EL2.HLP is 0b0.

is corrected to read:

- Counting the event causes unsigned overflow of  $PMEVCNTR<n>_{EL0}[63:0]$ , FEAT\_PMUV3p5 is implemented, and MDCR\_EL2.HLP is 0b1.

# 2.5 The Branch Record Buffer Extension (BRBE)

The known issues in the BRBE architecture are listed below:

## 2.5.1 C1225

In section F1.1.9.1 (Filtering on type), the following text in rule  $R_{FJYDC}$ :

Branch records for the following instructions are optionally generated when the instruction is executed in a non-Prohibited Region and if any of the following are true:

is updated to read:

It is **IMPLEMENTATION DEFINED** whether Branch records are generated for the following instructions when the instruction is executed in a non-prohibited region and if any of the following are true:

## 2.5.2 D1226

In section F1.1.2 (Cycle counting), rule  $R_{MJDLC}$  is updated to read:

The cycle count value in a Branch record is Branch Cycle Count Unknown when any of the following are true:

- $BRBCR\_EL2.CC == 0b0$ , if EL2 is implemented.
- $BRBCR\_EL1.CC == 0b0$ .
- This is the first Branch record after the PE exited a Prohibited Region.
- This is the first Branch record after cycle counting has been enabled.
- This is the first Branch record after  $BRBFCR\_EL1.PAUSED$  is cleared from 1 to 0.
- This is the first Branch record after execution of a BRB IALL instruction.

Additionally, a new permission is introduced to permit the the cycle count to be Branch Cycle Count Unknown if there are no Branch records in the buffer.

## 2.5.3 D1236

In section F1.1.13.1 (Manual injection of Branch records), rule  $I_{BCZRK}$  that reads:

Branch record injection is only performed when executing from a Prohibited Region.

is relaxed to read:

If BRB INJ is executed outside of a Prohibited region, it is **CONSTRAINED UNPREDICTABLE** whether a Branch record is created.

## 2.5.4 C1238

In section F1.1.9.1 (Filtering on type), the following Note is added to rule  $R_{BBNSZ}$ :

Note: BC.cond and B.cond instructions with the AL or NV condition code are considered conditional.

## 2.5.5 D1242

In section F1.1.5 (Branch records for exceptions), the following rules are added:

**R<sub>BZCRW</sub>** A Branch record for an exception which contains a valid source address, has the source address set to the preferred exception return address for the exception.

**R<sub>FYLTG</sub>** A Branch record for an exception which contains a valid target address, has the target address set to the address of the exception vector.