DECchip 21140A PCI Fast Ethernet LAN Controller

Hardware Reference Manual

Order Number: EC-QN7NB-TE

Revision/Update Information:

This is a preliminary document. Release 1.0. This document supersedes the DECchip 21140A PCI Fast Ethernet LAN Controller Hardware Reference Manual (EC-QN7NA-TE).

Digital Equipment Corporation Maynard, Massachusetts

October 1995

While Digital believes the information included in this publication is correct as of the date of publication, it is subject to change without notice.

Digital Equipment Corporation makes no representations that the use of its products in the manner described in this publication will not infringe on existing or future patent rights, nor do the descriptions contained in this publication imply the granting of licenses to make, use, or sell equipment or software in accordance with the description.

© Digital Equipment Corporation 1995. All rights reserved. Printed in U.S.A.

DEC, DECchip, DNA, Digital, Digital Semiconductor, VAX DOCUMENT, and the DIGITAL logo are trademarks of Digital Equipment Corporation.

Digital Semiconductor is a Digital Equipment Corporation business.

IEEE is a registered trademark of The Institute of Electrical and Electronics Engineers, Inc. MicroWire is a registered trademark of BankAmerica Corporation.

All other trademarks and registered trademarks are the property of their respective owners.

This document was prepared using VAX DOCUMENT Version 2.1.

Contents

Preface		xiii	
1	Introdu	iction	
	1.1	General Description	1–1
	1.1.1	Features	1–2
	1.2	Hardware Overview	1–3
2	Signal	Descriptions	
	2.1	21140A Pinout	2–1
	2.2	Signal Descriptions	2–3
3	Regist	ers	
	3.1	Configuration Operation	3–1
	3.1.1	Configuration Register Mapping	3–1
	3.1.2	Configuration Registers	3–2
	3.1.2.1	Configuration ID Register (CFID–Offset 00H)	3–2
	3.1.2.2	Command and Status Configuration Register	
		(CFCS–Offset 04H)	3–3
	3.1.2.3	8	3–6
	3.1.2.4		
		(CFLT–Offset 0CH)	3–7
	3.1.2.5	8	
		(CBIO–Offset 10H)	3–8
	3.1.2.6	Configuration Base Memory Address Register	
		(CBMA–14H)	3–9
	3.1.2.7		3–10
	3.1.2.8	1 0	
		(CBER–Offset 30H)	3–11
	3.1.2.9	Configuration Interrupt Register (CFIT–Offset 3CH)	3–12

3.1.2.10	Configuration Device and Driver Area Register	
	(CFDD–Offset 40H)	3–14
3.2 CSR (Dperation	3–15
3.2.1 Co	ontrol and Status Register Mapping	3–16
3.2.2 H	ost CSRs	3–17
3.2.2.1	Bus Mode Register (CSR0–Offset 00H)	3–17
3.2.2.2	Transmit Poll Demand Register (CSR1–Offset 08H)	3–20
3.2.2.3	Receive Poll Demand Register (CSR2–Offset 10H)	3–21
3.2.2.4	Descriptor List Address Registers	
	(CSR3–Offset 18H and CSR4–Offset 20H)	
		3–21
3.2.2.5	Status Register (CSR5–Offset 28H)	3–23
3.2.2.6	Operation Mode Register (CSR6–Offset 30H)	3–28
3.2.2.7	Interrupt Enable Register (CSR7–Offset 38H)	3–37
3.2.2.8	Missed Frames and Overflow Counter (CSR8–Offset 40H)	
		3–41
3.2.2.9	Boot ROM, Serial ROM, and MII Management Register	
	(CSR9–Offset 48H)	3–42
3.2.2.10	Boot ROM Programming Address Register	
	(CSR10–Offset 50H)	3–45
3.2.2.11	General-Purpose Timer Register (CSR11–Offset 58H)	3–46
3.2.2.12	General-Purpose Port Register (CSR12–Offset 60H)	3–47
3.2.2.13	Watchdog Timer Register (CSR15–Offset 78H)	3–49

4 Host Communication

Data Communication	4–1
Descriptor Lists and Data Buffers	4–1
Receive Descriptors	4–2
Receive Descriptor 0 (RDES0)	4–3
Receive Descriptor 1 (RDES1)	4–8
Receive Descriptor 2 (RDES2)	4–9
Receive Descriptor 3 (RDES3)	4–10
Receive Descriptor Status Validity	4–10
Transmit Descriptors	4–11
Transmit Descriptor 0 (TDES0)	4–12
Transmit Descriptor 1 (TDES1)	4–14
Transmit Descriptor 2 (TDES2)	4–17
Transmit Descriptor 3 (TDES3)	4–18
Transmit Descriptor Status Validity	4–18
	Descriptor Lists and Data Buffers

Setup Frame	4–19
	4–20
	4–20
Perfect Filtering Setup Frame Buffer	4–20
Imperfect Filtering Setup Frame Buffer	4–22
Functional Description	4–28
Reset Commands	4–29
Arbitration Scheme	4–29
Interrupts	4–31
Startup Procedure	4–32
Receive Process	4–33
Descriptor Acquisition	4–33
Frame Processing	4–33
Receive Process Suspended	4–34
Receive Process State Transitions	4–34
Transmit Process	4–35
Frame Processing	4–36
Transmit Polling Suspended	4–36
Transmit Process State Transitions	4–37
	Perfect Filtering Setup Frame Buffer Imperfect Filtering Setup Frame Buffer Functional Description Reset Commands Arbitration Scheme Interrupts Startup Procedure Receive Process Descriptor Acquisition Frame Processing Receive Process Suspended Receive Process Transmit Process Frame Processing Transmit Polling Suspended

5 Host Bus Operation

5.1	Overview	5—1
5.2	Bus Commands	5–2
5.3	Bus Slave Operation	5–2
5.3.1	Slave Read Cycle (I/O or Memory Target)	5–3
5.3.2	Slave Write Cycle (I/O or Memory Target)	5–4
5.3.3	Configuration Read and Write Cycles	5–5
5.4	Bus Master Operation	5–6
5.4.1	Bus Arbitration	5–7
5.4.2	Memory Read Cycle	5–8
5.4.3	Memory Write Cycle	5–9
5.5	Termination Cycles	5–10
5.5.1	Slave-Initiated Termination	5–10
5.5.2	Master-Initiated Termination	5–11
5.5.2.1	21140A-Initiated Termination	5–12
5.5.2.1	1	5–12
5.5.2.1	.2 Timeout	5–12
5.5.2.1	.3 Master Abort	5–13
5.5.2.2	Memory-Controller-Initiated Termination	5–13
5.5.2.2	.1 Target Abort	5–13
5.5.2.2	.2 Target Disconnect Termination	5–14
5.5.2.2	.3 Target Retry	5–15

5.6	Parity	5–16
	Parking	

6 Network Interface Operation

6.1 MII/SYM Port	6–1
6.1.1 100BASE-T Terminology	6–1
6.1.2 Interface Description	6–2
6.1.2.1 Signal Standards	6–2
6.1.2.2 Operating Modes	6–4
6.2 Serial Port	6–5
6.3 Media Access Control Operation	6–5
6.3.1 MAC Frame Format	6–7
6.3.1.1 Ethernet and IEEE 802.3 Frames	6–8
6.3.1.2 Ethernet Frame Format Description	6–8
6.3.2 Ethernet Reception Addressing	6–10
6.3.3 Detailed Transmit Operation	6–11
6.3.3.1 Transmit Initiation	6–12
6.3.3.2 Frame Encapsulation	6–12
6.3.3.3 Initial Deferral	6–13
6.3.3.4 Collision	6–13
6.3.3.5 Terminating Transmission	6–14
6.3.3.6 Transmit Parameter Values	6–15
6.3.4 Detailed Receive Operation	6–15
6.3.4.1 Receive Initiation	6–15
6.3.4.2 Preamble Processing	6–16
6.3.4.2.1 MII or Serial Mode Preambles	6–16
6.3.4.2.2 100BASE-TX or 100BASE-FX Mode Preambles	6–17
6.3.4.3 Address Matching	6–17
6.3.4.4 Frame Decapsulation	6–17
6.3.4.5 Terminating Reception	6–18
6.3.4.6 Frame Reception Status	6–18
6.4 Loopback Operations	6–19
6.4.1 Internal Loopback Mode	6–19
6.4.2 External Loopback Mode	6–19
6.5 Full-Duplex Operation	6–20
6.6 Capture Effect–A Value-Added Feature	6–20
6.6.1 What Is Capture Effect?	6–21
6.6.2 Resolving Capture Effect	6–22
6.6.3 Enhanced Resolution for Capture Effect	6–23
6.7 Power-Saving Modes	6–23
6.7.1 Sleep Power-Saving Mode	6–23
6.7.2 Snooze Power-Saving Mode	6–24

6.8	Jabber and Watchdog Timers	6–25
Exter	nal Ports	
7.1	Overview	7–1
7.2	Boot ROM and Serial ROM Connection	7–1
72	Post POM Operations	7 2

7.3	Boot ROM Operations	7–3
7.3.1	Byte Read	7–3
7.3.2	Byte Write	7–4
7.3.3	Dword Read	7–5
7.4	Serial ROM Operations	7–7
7.4.1	Read Operation	7–7
7.4.2	Write Operation	7–10
7.5	External Register Operation	7–13
7.6	General-Purpose Port Register (CSR12)	7–14
7.7	LED Support	7–16

A Joint Test Action Group—Test Logic

A.1	General Description	A–1
A.2	Registers	A–2
A.2.1	Instruction Register	A–2
A.2.2	Bypass Register	A–3
A.2.3	Boundary-Scan Register	A–3
A.2.4	Test Access Port Controller	A–4

B DNA CSMA/CD Counters and Events Support

C Hash C Routine

7

D Technical Support and Ordering Information

D.1	Technical Support	D–1
D.2	Ordering Digital Semiconductor Products	D–1
D.3	Ordering Associated Literature	D–1
D.4	Ordering Third-Party Literature	D–2

Index

Examples

4—1	Perfect Filtering Buffer	4–22
4–2	Imperfect Filtering Buffer	4–25

Figures

1–1	21140A Block Diagram	1–5
2–1	DECchip 21140A Pinout Diagram (Top View)	2–2
3–1	CFID Configuration ID Register	3–2
3–2	CFCS Command and Status Configuration Register	3–4
3–3	CFRV Configuration Revision Register	3–6
3–4	CFLT Configuration Latency Timer Register	3–7
3–5	CBIO Configuration Base I/O Address Register	3–9
3–6	CBMA Configuration Base Memory Address Register	3–10
3–7	SSID Subsystem ID Register	3–11
3–8	CBER Expansion ROM Base Address Register	3–12
3–9	CFIT Configuration Interrupt Register	3–13
3–10	CFDD Configuration Driver Area Register	3–14
3–11	CSR0 Bus Mode Register	3–17
3–12	CSR1 Transmit Poll Demand Register	3–20
3–13	CSR2 Receive Poll Demand Register	3–21
3–14	CSR3 Receive List Base Address Register	3–22
3–15	CSR4 Transmit List Base Address Register	3–23
3–16	CSR5 Status Register	3–24
3–17	CSR6 Operating Mode Register	3–29
3–18	CSR7 Interrupt Enable Register	3–38
3–19	CSR8 Missed Frames and Overflow Counter	3–41
3–20	CSR9 Boot ROM, Serial ROM, and MII Management	
	Register	3–43
3–21	CSR10 Boot ROM Programming Address Register	3–45
3–22	CSR11 General-Purpose Timer Register	3–46
3–23	CSR12 General-Purpose Port Register	3–47
3–24	CSR15 Watchdog Timer Register	3–49
4–1	Descriptor Ring and Chain Structure Examples	4–2

4–2	Receive Descriptor Format	4–3
4–3	RDES0 Receive Descriptor 0	4–4
4–4	RDES1 Receive Descriptor 1	4–8
4–5	RDES2 Receive Descriptor 2	4–9
4–6	RDES3 Receive Descriptor 3	4–10
4–7	Transmit Descriptor Format	4–12
4–8	TDES0 Transmit Descriptor 0	4–12
4–9	TDES1 Transmit Descriptor 1	4–15
4–10	TDES2 Transmit Descriptor 2	4–17
4–11	TDES3 Transmit Descriptor 3	4–18
4–12	Perfect Filtering Setup Frame Buffer Format	4–21
4–13	Imperfect Filtering	4–23
4–14	Imperfect Filtering Setup Frame Format	4–24
5–1	Slave Read Cycle	5–4
5–2	Slave Write Cycle	5–5
5–3	Configuration Read Cycle	5–6
5–4	Bus Arbitration	5–7
5–5	Memory Read Cycle	5–9
5–6	Memory Write	5–10
5–7	21140A-Initiated Retry Cycle	5–11
5–8	Normal Completion	5–12
5–9	Master Abort	5–13
5–10	Target Abort	5–14
5–11	Target Disconnect	5–15
5–12	Target Retry	5–16
5–13	Parity Operation	5–17
6–1	Ethernet Frame Format	6–8
6–2	Preamble Recognition Sequence in SRL Mode	6–17
7–1	Boot ROM, Serial ROM, and External Register	
	Connection	7–2
7–2	Boot ROM Byte Read Cycle	7–4
7–3	Boot ROM Byte Write Cycle	7–5
7–4	Boot ROM Dword Read Cycle	7–6
7–5	Read Cycle (Page 1 of 2)	7–8
7–6	Read Cycle (Page 2 of 2)	7–9
7–7	Read Operation	7–10
7–8	Write Cycle (Page 1 of 2)	7–11

7–9	Write Cycle (Page 2 of 2)	7–12
7–10	Write Operation	7–13
7–11	CSR12 General-Purpose Port Register	7–14

Tables

2–1	Functional Description of DECchip 21140A Signals	2–3
3–1	Configuration Registers Mapping	3–2
3–2	CFID Configuration ID Register Description	3–3
3–3	CFID Access Rules	3–3
3–4	CFCS Command and Status Configuration Register	
	Description	3–4
3–5	CFCS Access Rules	3–6
3–6	CFRV Configuration Revision Register Description	3–7
3–7	CFRV Access Rules	3–7
3–8	CFLT Configuration Latency Timer Register Description	3–8
3–9	CFLT Access Rules	3–8
3–10	CBIO Configuration Base I/O Address Register	
	Description	3–9
3–11	CBIO Access Rules	3–9
3–12	CBMA Configuration Base Memory Address Register	
	Description	3–10
3–13	CBMA Access Rules	3–10
3–14	SSID Subsystem ID Register Description	3–11
3–15	SSID Access Rules	3–11
3–16	CBER Expansion ROM Base Address Register Description	
		3–12
3–17	CBER Access Rules	3–12
3–18	CFIT Configuration Interrupt Register Description	3–13
3–19	CFIT Access Rules	3–14
3–20	CFDD Configuration Driver Area Register Description	3–15
3–21	CFDD Access Rules	3–15
3–22	CSR Mapping	3–16
3–23	CSR0 Bus Mode Register Description	3–18
3–24	Transmit Automatic Polling Bits	3–19
3–25	CSR0 Access Rules	3–19
3–26	Cache Alignment Bits	3–20
3–27	CSR1 Transmit Poll Demand Register Description	3–20

3–28	CSR1 Access Rules	3–20
3–29	CSR2 Receive Poll Demand Register Description	3–21
3–30	CSR2 Access Rules	3–21
3–31	CSR3 Receive List Base Address Register Description	3–22
3–32	CSR3 Access Rules	3–22
3–33	CSR4 Transmit List Base Address Register Description	3–23
3–34	CSR4 Access Rules	3–23
3–35	CSR5 Status Register Description	3–24
3–36	Fatal Bus Error Bits	3–27
3–37	Transmit Process State	3–27
3–38	Receive Process State	3–28
3–39	CSR5 Access Rules	3–28
3–40	CSR6 Operating Mode Register Description	3–30
3–41	Transmit Threshold	3–35
3–42	Port and Data Rate Selection	3–35
3–43	Loopback Operation Mode	3–36
3–44	Filtering Mode	3–36
3–45	CSR6 Access Rules	3–37
3–46	CSR7 Interrupt Enable Register Description	3–38
3–47	CSR7 Access Rules	3–41
3–48	CSR8 Missed Frames and Overflow Counter Description	3–42
3–49	CSR8 Access Rules	3–42
3–50	CSR9 Boot ROM, Serial ROM, and MII Management	
	Register Description	3–43
3–51	CSR9 Access Rules	3–45
3–52	CSR10 Boot ROM Programming Address Description	3–45
3–53	CSR10 Access Rules	3–45
3–54	CSR11 General-Purpose Timer Register Description	3–46
3–55	CSR11 Access Rules	3–47
3–56	CSR12 General-Purpose Port Register Description	3–48
3–57	CSR12 Access Rules	3–48
3–58	CSR15 Watchdog Timer Register Description	3–50
3–59	CSR15 Access Rules	3–51
4–1	RDES0 Receive Descriptor 0 Description	4–5
4–2	RDES1 Receive Descriptor 1 Description	4–9
4–3	RDES2 Receive Descriptor 2 Description	4–9
4–4	RDES3 Receive Descriptor 3 Description	4–10

4–5	Receive Descriptor Status Validity	4–11
4–6	TDES0 Transmit Descriptor 0 Description	4–13
4–7	TDES1 Transmit Descriptor 1 Description	4–15
4–8	Filtering Type	4–17
4–9	TDES2 Transmit Descriptor 2 Description	4–18
4–10	TDES3 Transmit Descriptor 3 Description	4–18
4–11	Transmit Descriptor Status Validity	4–19
4–12	Arbitration Scheme	4–30
4–13	Receive Process State Transitions	4–34
4–14	Transmit Process State Transitions	4–37
5–1	Bus Commands	5–2
6–1	IEEE 802.3 and MII/SYM Signals	6–2
6–2	Ethernet Frame Format	6–9
6–3	Frame Format Table	6–9
6–4	Ethernet Receive Address Groups	6–10
6–5	Transmit Parameter Values	6–15
6–6	Destination Address Bit 1	6–17
6–7	Capture-Effect Sequence	6–22
6–8	2–0 Backoff Algorithm	6–23
7–1	CSR12 General-Purpose Port Register Description	7–15
7–2	CSR12 Access Rules	7–15
7–3	LED Connection	7–16
A–1	Instruction Register	A–2
B–1	CSMA/CD Counters	B–1

Preface

Purpose and Audience

The *DECchip 21140A PCI Fast Ethernet LAN Controller Hardware Reference Manual* describes the operation of the DECchip 21140A PCI Fast Ethernet LAN Controller (also referred to as the 21140A). This manual is for designers who use the 21140A.

Manual Organization

This manual contains seven chapters, four appendixes, and an index.

- Chapter 1, Introduction, includes a general description of the 21140A. It also provides an overview of the 21140A hardware components.
- Chapter 2, Signal Descriptions, provides the physical layout of the 21140A and describes each of the input and output signals.
- Chapter 3, Registers, provides a complete bit description of the 21140A control and status registers (CSRs) and the configuration registers.
- Chapter 4, Host Communication, describes how the 21140A communicates with the host by using descriptor lists and data buffers. It also describes the transmit and receive processes.
- Chapter 5, Host Bus Operation, provides a description of the read, write, and termination cycles.
- Chapter 6, Network Interface Operation, describes the MII/SYM port and serial port interfaces. It includes a complete description of media access control (MAC) operations. It also provides detailed transmitting and receiving operation information.
- Chapter 7, External Ports, describes the interface and operation of the MicroWire serial ROM, the boot ROM, the general-purpose port, and the network activity LEDs.

- Appendix A, Joint Test Action Group—Test Logic, provides descriptions of the testing, the observing, and the modifying of circuit activity during normal operation.
- Appendix B, DNA CSMA/CD Counters and Events Support, describes features that support the driver in implementing and reporting the specified counters and events.
- Appendix C, Hash C Routine, provides an example of a C routine that generates a hash index for a given Ethernet address.
- Appendix D, Technical Support and Ordering Information, contains technical support and ordering information.

Document Conventions

The values 1, 0, and X are used in some tables. X signifies a don't care (1 or 0) state, which can be determined by the system designer.

1 Introduction

This chapter provides a general description of the DECchip 21140A PCI Fast Ethernet LAN Controller and its features. The chapter also includes an overview of the 21140A hardware components.

1.1 General Description

The 21140A is a fast Ethernet LAN controller for both 100Mb/s and 10Mb/s data rates, providing a direct interface to the peripheral component interconnect (PCI) local bus. The 21140A interfaces to the host processor by using onchip control and status registers (CSRs) and a shared host memory area, set up mainly during initialization. This minimizes processor involvement in the 21140A operation during normal reception and transmission. Large FIFOs allow the 21140A to efficiently operate in systems with longer latency periods. Bus traffic is also minimized by filtering out received runt frames and by automatically retransmitting collided frames without a repeated fetch from the host memory.

The 21140A provides two network ports: a 10Mb/s port and a 10/100Mb/s port. The 10Mb/s port provides a conventional 7-wire interface for the existing 10Mb/s front-end decoder (ENDEC).

The 10/100Mb/s port can be programmed to support various levels of interconnect. It can be programmed to support either full media-independent interface (MII) functionality or 100BASE-X physical coding sublayer (PCS), which includes 4B/5B encoder/decoder, framer, and scrambler/descrambler.

The 21140A can sustain transmission or reception of minimal-sized back-toback packets at full line speed with an interpacket gap (IPG) of 9.6 μ s for 10Mb/s and 0.96 μ s for 100Mb/s. The DECchip 21140A has several additional features that are not available on the DECchip 21140, yet it remains pin and software compatible with the DECchip 21140.

1.1 General Description

1.1.1 Features

The 21140A has the following features:

- Offers a single-chip Fast Ethernet controller for PCI local bus:
 - Provides a glue-less connection to the PCI bus
 - Supports two network ports: 10Mb/s and 10/100Mb/s
- Provides a standard 10/100Mb/s MII supporting CAT3 unshielded twistedpair (UTP), CAT5 UTP, shielded twisted-pair (STP) and fiber cables
- Contains onchip scrambler and PCS for CAT5 to significantly reduce cost of 100BASE-T solutions
- Supports full-duplex operation on both 10Mb/s and 10/100Mb/s ports
- Provides external and internal loopback capability on both ports
- Contains a variety of flexible address filtering modes (including perfect, hash tables, inverse perfect, and promiscuous):
 - 16 perfect addresses (normal or inverse filtering)
 - 512 hash-filtered addresses
 - 512 hash-filtered multicast addresses and one perfect address
 - Pass all multicast
 - Promiscuous
 - Pass all incoming packets with a status report¹
- Offers a unique, patented solution to Ethernet capture-effect problem
- Contains large independent receive and transmit FIFOs; no additional onboard memory required
- Includes a powerful onchip direct memory access (DMA) with programmable burst size providing for low CPU utilization
- Implements unique, patent-pending intelligent arbitration between DMA channels preventing underflow or overflow
- Supports PCI clock frequency from dc to 33 MHz; network operational with PCI clock from 20 MHz to 33 MHz
- Supports an unlimited PCI burst
- Supports PCI read multiple command¹

¹ Indicates DECchip 21140A features that are not available on the DECchip 21140.

1.1 General Description

- Supports early interrupts on transmit¹
- Implements low-power management with two power-saving modes (sleep or snooze)^1 $% \left(\frac{1}{2}\right) = \frac{1}{2}\left(\frac{1}{2}\right) \left(\frac{1}{2}\right) \left$
- Supports both PCI 5.0-V and 3.3-V signaling environments¹
- Supports either big or little endian byte ordering for buffers and descriptors
- Contains 8-bit, general-purpose, programmable register and corresponding I/O pins
- Provides LED support for various network activity indications
- Provides MicroWire interface for serial ROM (1K and 4K EEPROM)
- Provides an upgradable boot ROM (flash or EEPROM) interface of up to $256 \mathrm{KB}^1$
- Supports automatic loading of subvendor ID configuration register¹
- Implements JTAG-compatible test-access port with boundary-scan pins
- Supports IEEE 802.3, ANSI 8802-3, and Ethernet standards
- Implements low-power, 3.3-V complementary metal-oxide semiconductor (CMOS) process technology

1.2 Hardware Overview

The following list describes the 21140A hardware components, and Figure 1–1 shows a block diagram of the 21140A:

- PCI interface—Includes all interface functions to the PCI bus; handles all interconnect control signals; and executes PCI DMA and I/O transactions.
- DMA—Contains dual receive and transmit controller; supports bursts of up to 32 longwords; handles data transfers between CPU memory and onchip memory.
- FIFOs—Contains two FIFOs for receive and transmit; supports automatic packet deletion on receive (runt packets or after a collision) and packet retransmission after a collision on transmit.
- TxM—Handles all CSMA/CD² MAC³ transmit operations, and transfers data from transmit FIFO to the ENDEC for transmission.

¹ Indicates DECchip 21140A features that are not available on the DECchip 21140.

² Carrier-sense multiple access with collision detection

³ Media access control

1.2 Hardware Overview

- RxM—Handles all CSMA/CD receive operations, and transfers the data from the ENDEC to the receive FIFO.
- Physical coding sublayer—Implements the encoding and decoding sublayer of the 100BASE-TX (CAT5) specification, including the squelch.
- Scrambler/descrambler—Implements the twisted-pair physical layer medium dependent (TP-PMD) scrambler/descrambler scheme.
- General-purpose register—Enables software to use for input or output functions.
- Serial interface—Provides a 7-wire conventional interface to the Ethernet ENDEC components.
- MII/SYM interface— Provides a full MII signal interface and a direct interface to the 10/100Mb/s ENDEC for CAT5.
- Serial ROM—Provides a direct interface to the MicroWire Ethernet address ROM and system parameters.
- Boot ROM—Includes the required interface to the boot ROM for read and write operations; supports accesses to bytes or longwords (32-bit). Also provides the ability to connect an external 8-bit register to the boot ROM port.

1.2 Hardware Overview

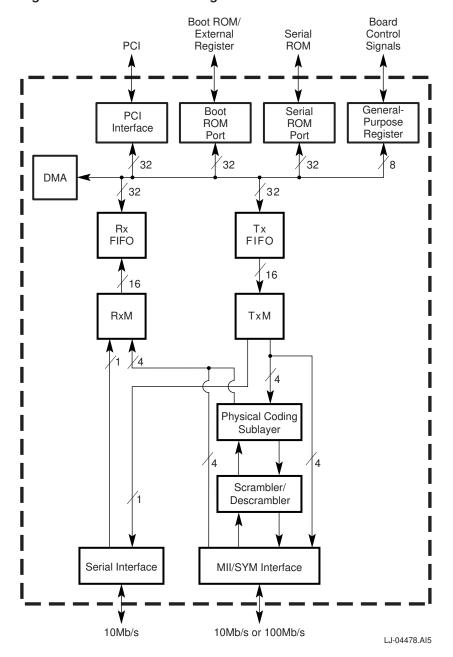


Figure 1–1 21140A Block Diagram

This chapter provides the DECchip 21140A PCI Fast Ethernet LAN Controller pinout, and a functional description of each of the signals.

2.1 21140A Pinout

The 21140A is housed in the 144-pin PQFP. Figure 2–1 shows the 21140A pinout.

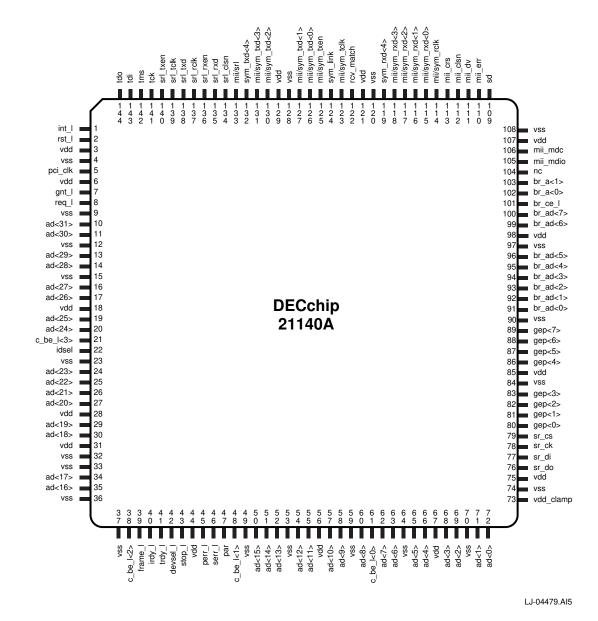


Figure 2–1 DECchip 21140A Pinout Diagram (Top View)

2.1 21140A Pinout

2-2 Preliminary-Subject to Change-October 1995

2.2 Signal Descriptions

Table 2–1 provides a functional description of each of the 21140A signals.

The following terms describe the 21140A pinout:

• Address phase

Address and appropriate bus commands are driven during this cycle.

• Data phase

Data and the appropriate byte enable codes are driven during this cycle.

• _1

All pin names with the _l suffix are asserted low.

The following abbreviations are used in Table 2–1.

I = Input O = Output I/O = Input/output O/D = Open drain P = Power

Table 2–1	Functional	Description	of DECchip	21140A Signals

Signal	Туре	Pin Number	Description
ad<31:0>	I/O	See Figure 2–1.	32-bit PCI address and data lines. Address and data bits are multiplexed on the same pins. During the first clock cycle of a transaction, the address bits contain a physical address (32 bits). During subsequent clock cycles, these same lines contain data (32 bits). A 21140A bus transaction consists of an address phase followed by one or more data phases. The 21140A supports both read and write bursts (in master operation only). Little and big endian byte ordering can be used.
br_a<0>	0	102	Boot ROM address line bit 0. In a 256KB configuration, this pin also carries in two consecutive address cycles, boot ROM address bits 16 and 17.
			(continued on next page)

Signal	Туре	Pin Number	Description
br_a<1>	0	103	Boot ROM address line bit 1. This pin also latches the boot ROM address and control lines by the two external latches.
br_ad<7:0>	I/O	See Figure 2–1.	Boot ROM address and data multiplexed lines bits 7 through 0. In the first of two consecutive address cycles, these lines contain the boot ROM address bits 7 through 2, oe_l and we_l ; followed by boot ROM address bits 15 through 8 in the second cycle. During the data cycle, bits 7 through 0 contain data. During operation with the external register, these lines are used to carry data bits 7 through 0 to and from the external register.
br_ce_l	0	101	Boot ROM or external register chip enable.
c_be_1<3:0>	I/O	See Figure 2–1.	Bits 0 through 3 of the bus command and byte enable lines. Bus command and byte enable are multiplexed on the same PCI pins.
			During the address phase of the transaction, these 4 bits provide the bus command.
			During the data phase, these 4 bits provide the byte enable. The byte enable determines which byte lines carry valid data. For example, bit 0 applies to byte 0, and bit 3 applies to byte 3.
devsel_l	I/O	42	Device select is asserted by the target of the current bus access. When the 21140A is the initiator of the current bus access, it expects the target to assert devsel_l within 5 bus cycles, confirming the access. If the target does not assert devsel_l within the required bus cycles, the 21140A aborts the cycle. To meet the timing requirements, the 21140A asserts this signal in a medium speed (within 2 bus cycles).
			(continued on next page)

Table 2–1 (Cont.) Functional Description of DECchip 21140A Signals

Signal	Туре	Pin Number	Description
frame_l	I/O	39	The signal frame_l is driven by the 21140A (bus master) to indicate the beginning and duration of an access. Signal frame_l asserts to indicate the beginning of a bus transaction. While frame_l is asserted, data transfers continue. Signal frame_l deasserts to indicate that the next data phase is the final data phase transaction.
gep<7:0>	I/O	See Figure 2–1.	General-purpose pins can be used by software as either status pins or control pins. These pins can be configured by software to perform either input or output functions.
gnt_l	Ι	7	Bus grant asserts to indicate to the 21140A that access to the bus is granted.
idsel	Ι	22	Initialization device select asserts to indicate that the host is issuing a configuration cycle to the 21140A.
int_l	O/D	1	Interrupt request asserts when one of the appropriate bits of CSR5 sets and causes an interrupt, provided that the corresponding mask bit in CSR7 is not asserted. Interrupt request deasserts by writing a 1 into the appropriate CSR5 bit.
			If more than one interrupt bit is asserted in CSR5 and the host does not clear all input bits, the 21140A deasserts int_l for one cycle to support edge-triggered systems.
			This pin must be pulled up by an external resistor.
			(continued on next page

Table 2–1 (Cont.) Functional Description of DECchip 21140A Signals

Signal	Туре	Pin Number	Description
irdy_l	I/O	40	Initiator ready indicates the bus master's ability to complete the current data phase of the transaction.
			A data phase is completed on any rising edge of the clock when both irdy_l and target ready trdy_l are asserted. Wait cycles are inserted until both irdy_l and trdy_l are asserted together.
			When the 21140A is the bus master, irdy_l is asserted during write operations to indicate that valid data is present on the 32-bit ad lines. During read operations, the 21140A asserts irdy_l to indicate that it is ready to accept data.
mii_clsn	Ι	112	Collision detected is asserted when detected by an external physical layer protocol (PHY) device.
mii_crs	Ι	113	Carrier sense is asserted by the PHY when the media is active.
mii_dv	Ι	111	Data valid is asserted by an external PHY when receive data is present on the mii/sym_rxd lines and is deasserted at the end of the packet. This signal should be synchronized with the mii/sym_rclk signal.
mii_err	Ι	110	Receive error asserts when a data decoding error is detected by an external PHY device. This signal is synchronized to mii/sym_rclk and can be asserted for a minimum of one receive clock. When asserted during a packet reception, it sets the cyclic redundancy check (CRC) error bit in the receive descriptor (RDES0).
mii_mdc	0	106	MII management data clock is sourced by the 21140A to the PHY devices as a timing reference for the transfer of information on the mii_mdio signal.
			(continued on next page)

Table 2–1 (Cont.) Functional Description of DECchip 21140A Signals

Signal	Туре	Pin Number	Description
mii_mdio	I/O	105	MII management data input/output transfers control information and status between the PHY and the 21140A.
mii/srl	0	133	Indicates the selected port: SRL or MII/SYM. When asserted, the MII/SYM port is active. When deasserted, the SRL port is active.
mii/sym_rclk	Ι	114	Supports either the 25-MHz or 2.5-MHz receive clock. This clock is recovered by the PHY.
mii/sym_ rxd<3:0>	Ι	See Figure 2–1.	Four parallel receive data lines when MII mode is selected. This data is driven by an external PHY that attached the media and should be synchronized with the mii/sym_rclk signal.
mii/sym_tclk	Ι	123	Supports the 25-MHz or 2.5-MHz transmit clock supplied by the external physical layer medium dependent (PMD) device. This clock should always be active.
mii/sym_ txd<3:0>	0	See Figure 2–1.	Four parallel transmit data lines. This data is synchronized to the assertion of the mii/sym_tclk signal and is latched by the external PHY on the rising edge of the mii/sym_tclk signal.
mii_txen	0	125	Transmit enable signals that the transmit is active to an external PHY device. In PCS mode (CSR6<23>), this signal reflects the transmit activity of the MAC sublayer.
nc	0	104	No connection.
par	I/O	47	Parity is calculated by the 21140A as an even parity bit for the 32-bit ad and 4-bit c_be_l lines.
			During address and data phases, parity is calculated on all the ad and c_be_l lines whether or not any of these lines carry meaningful information.
			(continued on next page

Table 2–1 (Cont.) Functional Description of DECchip 21140A Signals

Signal	Туре	Pin Number	Description
pci_clk	Ι	5	The clock provides the timing for the 21140A related PCI bus transactions. All the bus signals are sampled on the rising edge of pci_clk . The clock frequency range is between 25 MHz and 33 MHz.
perr_l	I/O	45	Parity error asserts when a data parity error is detected.
			When the 21140A is the bus master and a parity error is detected, the 21140A asserts both CSR5 bit 13 (system error) and CFCS bit 8 (serr_l enable). Next, it completes the current data burst transaction, and then stops operation. After the host clears the system error, the 21140A continues its operation.
			When the 21140A is the bus target and a parity error is detected, the 21140A asserts perr_l .
			This pin must be pulled up by an external resistor.
rcv_match	0	122	Receive match indication is asserted when a received packet has passed address recognition.
req_l	0	8	Bus request is asserted by the 21140A to indicate to the bus arbiter that it wants to use the bus.
rst_l	Ι	2	Resets the 21140A to its initial state. This signal must be asserted for at least 10 active PCI clock cycles. When in the reset state, all PCI output pins are put into tristate and all PCI open drain (O/D) signals are floated.
sd	Ι	109	Signal detect indication supplied by an external physical layer medium dependent (PMD) device.
			(continued on next page)

Table 2–1 (Cont.) Functional Description of DECchip 21140A Signals

Signal	Туре	Pin Number	Description
serr_l	I/O	46	If an address parity error is detected while CFCS bit 31 (detected parity error) is enabled, the 21140A asserts both serr_l (system error) and CFCS bit 30 (signal system error).
			When an address parity error is detected, system error asserts two clock cycles after the failing address.
			This pin must be pulled up by an external resistor.
sr_ck	0	78	Serial ROM clock signal.
sr_cs	0	79	Serial ROM chip-select signal.
sr_di	0	77	Serial ROM data-in signal.
sr_do	Ι	76	Serial ROM data-out signal.
srl_clsn	Ι	134	Collision detect signals a collision occurrence on the Ethernet cable to the 21140A. It may be asserted and deasserted asynchronously by the external ENDEC to the receive clock.
srl_rclk	Ι	137	Receive clock carries the recovered receive clock supplied by an external ENDEC. During idle periods, srl_rclk may be inactive.
srl_rxd	Ι	135	Receive data carries the input receive data from the external ENDEC. The incoming data should be synchronous with the srl_rclk signal.
srl_rxen	Ι	136	Receive enable signals activity on the Ethernet cable to the 21140A. It is asserted when receive data is present on the Ethernet cable and deasserted at the end of a frame. It may be asserted and deasserted asynchronously to the receive clock (srl_rclk) by the external ENDEC.
srl_tclk	Ι	139	Transmit clock carries the transmit clock supplied by an external ENDEC. This clock must always be active (even during reset).
			(continued on next page

Table 2–1 (Cont.) Functional Description of DECchip 21140A Signals

Signal	Туре	Pin Number	Description
srl_txd	0	138	Transmit data carries the serial output data from the 21140A. This data is synchronized to the srl_tclk signal.
srl_txen	0	140	Transmit enable signals an external ENDEC that the 21140A transmit is in progress.
stop_l	I/O	43	Stop indicator indicates that the current target is requesting the bus master to stop the current transaction.
			The 21140A responds to the assertion of stop_l when it is the bus master, either to disconnect, retry, or abort.
sym_link	0	124	Indicates that the descrambler is locked to the input data signal.
sym_rxd<4>	Ι	119	Receive data together with the four receive lines mii/sym_rxd<3:0> provide five parallel lines of data in symbol form for use in PCS mode (100BASE-T, CSR6<23>). This data is driven by an external PMD device and should be synchronized to the mii/sym_rclk signal.
sym_txd<4>	0	132	Transmit data together with the four transmit lines mii/sym_txd<3:0> provide five parallel lines of data in symbol form for use in PCS mode (100BASE-T, CSR6<23>). This data is synchronized on the rising of the sym_tclk signal.
tck	Ι	141	JTAG clock shifts state information and test data into and out of the 21140A during JTAG test operations. This pin should not be left unconnected.
tdi	Ι	143	JTAG data-in pin is used to serially shift test data and instructions into the 21140A during JTAG test operations. This pin should not be left unconnected.
tdo	0	144	JTAG data-out pin is used to serially shift test data and instructions out of the 21140A during JTAG test operations.

Table 2–1 (Cont.) Functional Description of DECchip 21140A Signals

Signal	Туре	Pin Number	Description
tms	Ι	142	JTAG test mode select controls the state operation of JTAG testing in the 21140A. This pin should not be left unconnected.
trdy_l	I/O	41	Target ready indicates the target agent's ability to complete the current data phase of the transaction.
			A data phase is completed on any clock when both trdy_l and irdy_l are asserted. Wait cycles are inserted until both irdy_l and trdy_l are asserted together.
			When the 21140A is the bus master, target ready is asserted by the bus slave on the read operation, indicating that valid data is present on the ad lines. During a write cycle, it indicates that the target is prepared to accept data.
vdd	Р	See Figure 2–1.	A 3.3-V supply input voltage.
vdd_clamp	Р	73	A 5-V reference for a 5-V signaling environment and a 3.3-V reference for a 3.3-V signaling environment.
vss	Р	See Figure 2–1.	Ground pins.

Table 2–1 (Cont.) Functional Description of DECchip 21140A Signals

3 Registers

This chapter describes the configuration registers, and the command and status registers (CSRs) of the 21140A. The 21140A uses 10 configuration registers for initialization and configuration, and 16 CSRs (CSR0 through CSR15) for host communication. Configuration registers are used to identify and query the 21140A. The CSRs, which are mapped in the host I/O or memory address space, are used for initialization, pointers, commands, and status reporting.

3.1 Configuration Operation

The 21140A enables a full software-driven initialization and configuration. This permits the software to identify and query the 21140A.

The 21140A treats configuration space write operations to registers that are reserved as no-ops. That is, the access completes normally on the bus and the data is discarded. Read accesses, to reserved or unimplemented registers, complete normally and a data value of 0 is returned.

Software reset (CSR0<0>) has no effect on the configuration registers. Hardware reset sets the configuration registers to their default values.

The 21140A supports byte, word, and longword accesses to configuration registers.

3.1.1 Configuration Register Mapping

Table 3–1 lists the definitions and addresses for the configuration registers.

3.1 Configuration Operation

Configuration Register	Identifier	I/O Address Offset
Identification	CFID	00H
Command and status	CFCS	04H
Revision	CFRV	08H
Latency timer	CFLT	0CH
Base I/O address	CBIO	10H
Base memory address	CBMA	14H
Reserved	—	18H–28H
Subsystem ID	SSID	2CH
Expansion ROM base address	CBER	30H
Reserved	—	34H–38H
Interrupt	CFIT	3CH
Device and Driver area	CFDD	40H

Table 3–1 Configuration Registers Mapping

3.1.2 Configuration Registers

The 21140A implements 10 configuration registers. These registers are described in the following subsections.

3.1.2.1 Configuration ID Register (CFID–Offset 00H)

The CFID register identifies the 21140A. Figure 3-1 shows the CFID register bit fields and Table 3-2 describes the bit fields.

Figure 3–1 CFID Configuration ID Register

31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16	15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
Device ID	Vendor ID

LJ-04696.AI5

3.1 Configuration Operation

Table 3-2	CFID Configuration ID Register Description
Field	Description
31:16	Device ID
	Provides the unique 21140A ID number (0009H).
15:0	Vendor ID
	Specifies the manufacturer of the 21140A (1011H).

Table 3–2 CFID Configuration ID Register Description

Table 3–3 lists the access rules for the CFID register.

Table 3–3 CFID Access Rules

Category	Description
Value after hardware reset	00091011H
Read access rules	_
Write access rules	Writing has no effect.

3.1.2.2 Command and Status Configuration Register (CFCS–Offset 04H)

The CFCS register is divided into two sections: a command register (CFCS<15:0>) and a status register (CFCS<31:16>).


The command register provides control of the 21140A's ability to generate and respond to PCI cycles. Writing 0 to this register, the 21140A logically disconnects from the PCI bus for all accesses except configuration accesses.

The status register records status information for the PCI bus-related events. The CFCS status bits do not clear when read. Writing 1 to these bits clears them; writing 0 has no effect.

Figure 3–2 shows the CFCS bit fields and Table 3–4 describes the bit fields.

3.1 Configuration Operation

Figure 3–2 CFCS Command and Status Configuration Register

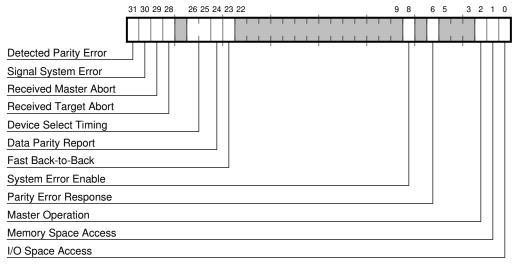

LJ03932B.AI5

Field	Register Type	Description
31	Status	Detected Parity Error
		When set, indicates that the 21140A detected a parity error, even if parity error handling is disabled in parity error response (CFCS<6>).
30	Status	Signal System Error
		When set, indicates that the 21140A asserted the system error (serr_l) pin.
29	Status	Received Master Abort
		When set, indicates that the 21140A terminated a master transaction with master abort.
28	Status	Received Target Abort
		When set, indicates that the 21140A master transaction was terminated due to a target abort.

Table 3–4 CFCS Command and Status Configuration Register Description

Field	Register Type	Description
26:25	Status	Device Select Timing
		Indicates the timing of the assertion of device select (devsel_l). These bits are fixed at 01, which indicates a medium assertion of devsel_l .
24	Status	Data Parity Report
		This bit sets when the following conditions are met:
		• The 21140A asserts parity error (perr_l) or it senses the assertion of perr_l by another device.
		• The 21140A operates as a bus master for the operation that caused the error.
		• Parity error response (CFCS<6>) is set.
23	Status	Fast Back-to-Back
		Always set by the 21140A. This indicates that the 21140A is capable of accepting fast back-to-back transactions that are not sent to the same bus device.
8	Command	System Error Enable
		When set, the 21140A asserts system error (serr_l) when it detects a parity error on the address phase (ad<31:0> and c_be_l<3:0>).
6	Command	Parity Error Response
		When set, the 21140A asserts system error (CSR5<13>) after a parity error detection.
		When reset, any detected parity error is ignored and the 21140A continues normal operation.
		Parity checking is disabled after reset.
2	Command	Master Operation
		When set, the 21140A is capable of acting as a bus master.
		When reset, the 21140A capability to generate PCI accesses is disabled.
		For normal 21140A operation, this bit must be set.

Table 3–4 (Cont.) CFCS Command and Status Configuration Register Description

(continued on next page)

Field	Register Type	Description
1	Command	Memory Space Access
		When set, the 21140A responds to memory space accesses.
		When reset, the 21140A does not respond to memory space accesses.
0	Command	I/O Space Access
		When set, the 21140A responds to I/O space accesses.
		When reset, the 21140A does not respond to I/O space accesses.

Table 3–4 (Cont.) CFCS Command and Status Configuration Register Description

Table 3–5 lists the access rules for the CFCS register.


Table 3–5 CFCS Access Rules

Category	Description	
Value after hardware reset	02800000H	
Read access rules	_	
Write access rules	—	

3.1.2.3 Configuration Revision Register (CFRV–Offset 08H)

The CFRV register contains the 21140A revision number. Figure 3–3 shows the CFRV bit fields and Table 3–6 describes the bit fields.

Figure 3–3 CFRV Configuration Revision Register

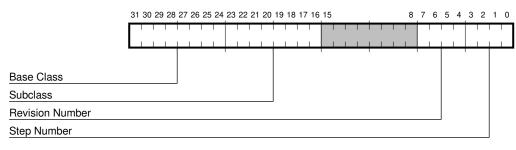

LJ03992B.AI5

Field	Description
31:24	Base Class
	Indicates the network controller and is equal to 2H.
23:16	Subclass
	Indicates the fast Ethernet controller and is equal to 0H.
7:4	Revision Number
	Indicates the 21140A revision number and is equal to 2H. This number is incremented for subsequent 21140A revisions.
3:0	Step Number
	Indicates the 21140A step number and is equal to 0H. This number is incremented for subsequent 21140A steps within the current revision.

 Table 3–6
 CFRV Configuration Revision Register Description

Table 3–7 lists the access rules for the CFRV register.

Table 3–7 CFRV Access Rules

Category	Description
Value after hardware reset	02000020H
Read access rules	_
Write access rules	Writing has no effect.

3.1.2.4 Configuration Latency Timer Register (CFLT–Offset 0CH)

This register configures the 21140A bus latency timer. Figure 3-4 shows the CFLT bit field and Table 3-8 describes the bit field.

Figure 3–4 CFLT Configuration Latency Timer Register




 Table 3–8
 CFLT Configuration Latency Timer Register Description

Field	Description
15:8	Configuration Latency Timer
	Specifies, in units of PCI bus clocks, the value of the latency timer of the $21140A$.
	When the 21140A asserts frame_l , it enables its latency timer to count.
	If the 21140A deasserts frame_l prior to count expiration, the content of the latency timer is ignored. Otherwise, after the count expires, the 21140A initiates transaction termination as soon as its gnt_l is deasserted.

Table 3–9 lists the access rules for the CFLT register.

Table 3–9 CFI	T Access Rules
---------------	----------------

Category	Description	
Value after hardware reset	0H	
Read access rules	_	
Write access rules	_	


3.1.2.5 Configuration Base I/O Address Register (CBIO–Offset 10H)

The CBIO register specifies the base I/O address for accessing the 21140A CSRs (CSR0–15). For example, if the CBIO register is programmed to 1000H, the I/O address of CSR15 is equal to CBIO + CSR15-offset for a value of 1078H (Table 3–22).

This register must be initialized prior to accessing any CSR with I/O access.

Figure 3–5 shows the CBIO bit fields and Table 3–10 describes the bit fields.

Figure 3–5 CBIO Configuration Base I/O Address Register



	oblo comgutation base no Address negister besonption	
Field	Description	
31:7	Configuration Base I/O Address	
	Defines the address assignment mapping of 21140A CSRs.	
6:1	This field value is 0 when read.	
0	Memory I/O Space Indicator	
	Determines that the register maps into the I/O space. The value in this field is 1. This is a read-only field.	

Table 3–10 CBIO Configuration Base I/O Address Register Description

Table 3–11 lists the access rules for the CBIO register.

Table 3–11 CBIO Access Rules

Category	Description	
Value after hardware reset	Undefined	
Read access rules	_	
Write access rules	_	


3.1.2.6 Configuration Base Memory Address Register (CBMA–14H)

The CBMA register specifies the base memory address for memory accesses to the 21140A CSRs (CSR0-15).

This register must be initialized prior to accessing any CSR with memory access.

Figure 3–6 shows the CBMA bit fields and Table 3–12 describes the bit fields.

Figure 3–6 CBMA Configuration Base Memory Address Register



LJ-04734.AI5

Table 3–12 CBMA Configuration Base Memory Address Register Description

Field	Description
31:7	Configuration Base Memory Address
	Defines the address assignment mapping of the 21140A CSRs.
6:1	This field value is 0 when read.
0	Memory Space Indicator
	Determines that the register maps into the memory space. The value in this field is 0. This is a read-only field.

Table 3–13 lists the access rules for the CBMA register.

Table 3–13 CBMA Access Rules


Category	Description	
Value after hardware reset	Undefined	
Read access rules	_	
Write access rules	—	

3.1.2.7 Subsystem ID Register (SSID-2CH)

The SSID register is a read-only 32-bit register. The content of the SSID is loaded from the serial ROM after a hardware reset. The value is 0 if the serial ROM data integrity check fails.

Figure 3–7 shows the SSID bit fields and Table 3–14 describes the bit fields.

Figure 3–7 SSID Subsystem ID Register



LJ-04499.AI5

Table 3-14	SSID Subsy	stem ID	Register	Description
			neqisiei	Description

Field	Description
31:16	Subsystem ID
	Indicates a 16-bit field containing the subsystem ID.
15:0	Subsystem Vendor ID
	Indicates a 16-bit field containing the subsystem vendor ID.

Table 3–15 lists the access rules for the SSID register.

Table 3–15 SSID Access Rules


Category	Description	
Value after hardware reset	Read from serial ROM.	
Read access rules		
Write access rules	—	

3.1.2.8 Expansion ROM Base Address Register (CBER–Offset 30H)

The CBER register specifies the base address and provides information about the expansion ROM size. This register must be initialized prior to accessing the expansion ROM.

Figure 3–8 shows the CBER bit fields and Table 3–16 describes the bit fields.

Figure 3–8 CBER Expansion ROM Base Address Register



LJ03971A.AI5

Field	Description	
31:10	Expansion ROM Base Address	
	Defines the address assignment mapping of the expansion ROM. It also provides information about the expansion ROM size. CBER<17:10> are hardwired to 0, indicating that the expansion ROM size is up to 256KB.	
9:1	This field value is 0 when read.	
0	Expansion ROM Enable Bit	
	The 21140A responds to its expansion ROM accesses only if the memory space access bit (CFCS<1>) and the expansion ROM enable bit are both set to 1.	

Table 3–16 CBER Expansion ROM Base Address Register Description

Table 3–17 lists the access rules for the CBER register.

Table 3–17 CBER Access Rules

Category Description	
Value after reset	Software reset has no effect.
Read access rules	_
Write access rules —	

3.1.2.9 Configuration Interrupt Register (CFIT–Offset 3CH)

The CFIT register is divided into two sections: the interrupt line and the interrupt pin. CFIT configures both the system's interrupt line and the 21140A interrupt pin connection.

Figure 3–9 shows the CFIT bit fields and Table 3–18 describes the bit fields.

Figure 3–9 CFIT Configuration Interrupt Register

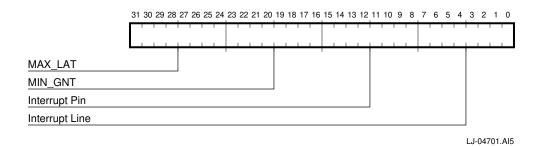


Table 3–18 CFIT Configuration Interrupt Register Description

Field	Description
31:24	MAX_LAT
	This field indicates how often the device needs to gain access to the PCI bus. Time unit is equal to 0.25 μ s.
23:16	MIN_GNT
	This field indicates the burst period length the device needs, assuming a clock rate of 33 MHz. Time unit is equal to 0.25 μ s.
15:8	Interrupt Pin
	Indicates which interrupt pin the 21140A uses. The 21140A uses INTA# and the read value is 01H.
7:0	Interrupt Line
	Provides interrupt line routing information. The basic input/output system (BIOS) writes the routing information into this field when it initializes and configures the system.
	The value in this field indicates which input of the system interrupt controller is connected to the 21140A's interrupt pin. The driver can use this information to determine priority and vector information. Values in this field are system architecture specific.

Table 3–19 lists the access rules for the CFIT register.

Table 3–19 CFIT Access Rules


Category	Description	
Value after hardware reset	281401XXH	
Read access rules	—	
Write access rules	_	

3.1.2.10 Configuration Device and Driver Area Register (CFDD–Offset 40H)

The CFDD register can be used to store driver-specific information during initialization.

Figure 3–10 shows the CFDD bit field and Table 3–20 describes the bit field.

Figure 3–10 CFDD Configuration Driver Area Register



LJ03986A.AI5

Field Description 31 **Sleep Mode** When set, the 21140A enters sleep mode and most of its clocks are disconnected. While in sleep mode, the 21140A can only be accessed through its configuration space. The 21140A exits from this mode upon hardware reset. Note that this bit should not be asserted together with bit 30 (snooze mode) in this register. 30 **Snooze Mode** When this bit is set, the following conditions exist. The 21140A enters snooze mode and most of its clocks are disconnected. The 21140A temporarily exits from snooze mode to normal operation mode upon sensing network activity, transmission start, or when it is being accessed by the host. When the activity is completed, the 21140A reenters snooze mode. When this bit is reset, a permanent exit from this mode is accomplished. Note that this bit should not be asserted together with bit 31 (sleep mode) in this register. 15:8 **Driver Special Use** Specifies read and write fields for the driver's special use.

Table 3–20 CFDD Configuration Driver Area Register Description

Table 3–21 lists the access rules for the CFDD register.

Category	Description	
Value after reset	Software reset has no effect.	
Read access rules	_	
Write access rules	_	

3.2 CSR Operation

The 21140A CSRs are located in the host I/O or memory address space. The CSRs are *quadword* aligned, 32 bits long, and must be accessed using *longword* instructions with quadword-aligned addresses only.

Note _____

Please note the following:

- Reserved bits should be written with 0; failing to do this could cause incompatibility problems with a future release. Reserved bits are UNPREDICTABLE on read access.
- Retries on second data transactions occur in response to burst accesses.

CSRs are physically located in the chip. The host uses a single instruction to access to a CSR.

3.2.1 Control and Status Register Mapping

Table 3–22 lists the definitions and addresses for the CSR registers.

Dogiotor	Meening	Offset from CSR Base Address (CBIO and
Register	Meaning	CBMA)
CSR0	Bus mode	00H
CSR1	Transmit poll demand	08H
CSR2	Receive poll demand	10H
CSR3	Receive list base address	18H
CSR4	Transmit list base address	20H
CSR5	Status	28H
CSR6	Operation mode	30H
CSR7	Interrupt enable	38H
CSR8	Missed frames and overflow counter	40H
CSR9	Boot ROM, serial ROM, and MII management	48H
CSR10	Boot ROM programming address	50H
CSR11	General-purpose timer	58H
CSR12	General-purpose port	60H
CSR13	Reserved	68H
CSR14	Reserved	70H
CSR15	Watchdog timer	78H

		~ ~ ~ ~	
Table	3–22	CSR	Mapping


3.2.2 Host CSRs

The 21140A implements 16 CSRs (CSR0 through CSR15), which can be accessed by the host. Two of these registers (CSR13 and CSR14) are reserved.

3.2.2.1 Bus Mode Register (CSR0–Offset 00H)

Figure 3–11 shows the CSR0 bit fields and Table 3–23 describes the bit fields. CSR0 establishes the bus operating modes.

Figure 3–11 CSR0 Bus Mode Register

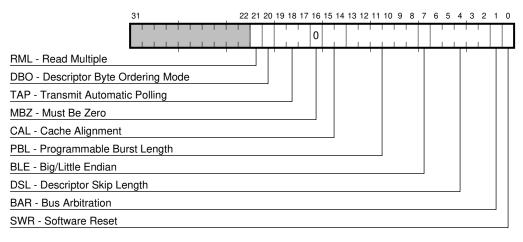

LJ-04480.AI5

Field	Description
21	RML — Read Multiple
	When set, the 21140A supports the memory-read-multiple command on the PCI bus. This bus command is used in memory read bursts with more than one longword. When reset, the 21140A uses memory-read command in all its memory read accesses on the PCI bus.
20	DBO — Descriptor Byte Ordering Mode
	When set, the 21140A operates in big endian ordering mode for descriptors only. When reset, the 21140A operates in little endian mode.
19:17	TAP — Transmit Automatic Polling
	When set and the 21140A is in a suspended state because a transmit buffer is unavailable, the 21140A performs a transmit automatic poll demand (Table 3–24). This field is not active in snooze mode.
16	MBZ — Must Be Zero
	This bit is not used by the 21140A and should always be programmed to zero.
15:14	CAL — Cache Alignment
	Programmable address boundaries for data burst stop (Table 3–26). If the buffer is not aligned, the 21140A executes the first transfer up to the address boundary. Then, all transfers are aligned to the specified boundary. These bits must be initialized after reset.
13:8	PBL — Programmable Burst Length
	Indicates the maximum number of longwords to be transferred in one DMA transaction. If reset, the 21140A burst is limited only by the amount of data stored in the receive FIFO (at least 16 longwords), or by the amount of free space in the transmit FIFO (at least 16 longwords) before issuing a bus request.
	The PBL can be programmed with permissible values 0, 1, 2, 4, 8, 16, or 32. After reset, the PBL default value is 0.
7	BLE — Big/Little Endian
	When set, the 21140A operates in big endian byte ordering mode. When reset, the 21140A operates in little endian byte ordering mode.
	Big endian is applicable only for data buffers.
	For example, the byte order in little endian of a data buffer is 12345678H, with each digit representing a nibble. In big endian, the byte orientation is 78563412H.
6:2	DSL — Descriptor Skip Length
	Specifies the number of longwords to skip between two descriptors.

Table 3–23 CSR0 Bus Mode Register Description

(continued on next page)

Field	Description
1	BAR — Bus Arbitration
	Selects the internal bus arbitration between the receive and transmit processes.
	When set, a round-robin arbitration scheme is applied resulting in equal sharing between processes. When reset, the receive process has priority over the transmit process, unless the 21140A is currently transmitting (Section 4.3.2).
0	SWR — Software Reset
	When set, the 21140A resets all internal hardware with the exception of the configuration area; it does not change the port select setting (CSR6<18>).

Table 3–24 defines the transmit automatic polling bits.

CSR0<19:17>	Time Interval
000	No transmit automatic polling; CSR1 access should be used to poll the transmit descriptor list.
001	Transmit automatic polling every 200 μ s.
010	Transmit automatic polling every 800 μ s.
011	Transmit automatic polling every 1.6 ms.
100	Transmit automatic polling every 12.8 μ s.
101	Transmit automatic polling every 25.6 μ s.
110	Transmit automatic polling every 51.2 μ s.
111	Transmit automatic polling every 102.4 μ s.

Table 3–24 Transmit Automatic Polling Bits

Table 3–25 lists the CSR0 read and write access rules.

Category	Description
Value after reset	FFF80000H
Read access rules	_
Write access rules	To write, the transmit and receive processes must be stopped. If one or both of the processes is not stopped, the result is UNPREDICTABLE.

Table 3–25 CSR0 Access Rules

Table 3–26 defines the cache address alignment bits.

CSR0<15:14>	Address Alignment										
00	Reserved										
01	8-longword boundary alignment										
10	16-longword boundary alignment										
11	32-longword boundary alignment										

Table 3–26 Cache Alignment Bits

3.2.2.2 Transmit Poll Demand Register (CSR1–Offset 08H)

Figure 3–12 shows the CSR1 bit field and Table 3–27 describes the bit field.

Figure 3–12 CSR1 Transmit Poll Demand Register

31 30 29 28	27 26 25 2	24 23 22 2 [.]	20 19 18	17 16 15 14	13 12 11 10	987	654	3210					
Transmit Poll Demand													
Transmit i on Demand													

LJ-04704.AI5

Table 3–27 CSRT Transmit Poll Demand Register Description	Table 3–27	CSR1 Transmit Poll Demand Register Descripti	on
---	------------	--	----

Field	Description										
31:0	TPD — Transmit Poll Demand (Write Only)										
	When written with any value, the 21140A checks for frames to be transmitted. If no descriptor is available, the transmit process returns to the suspended state and $CSR5<2>$ is not asserted. If the descriptor is available, the transmit process resumes.										

Table 3–28 lists the CSR1 read and write access rules.

Table 3–28	CSR1	Access	Rules
------------	------	--------	-------

Category	Description
Value after reset	FFFFFFFH
Read access rules	_
Write access rules	Effective only if the transmit process is in the suspended state.

3.2.2.3 Receive Poll Demand Register (CSR2–Offset 10H)

Figure 3–13 shows the CSR2 bit field and Table 3–29 describes the bit field.

Figure 3–13 CSR2 Receive Poll Demand Register

31 30 29 28 27 26 25 2	24 23 22 21 2	20 19 18 17 16	6 15 14 13 12	11 10 9 8	7 6 5 4	3210

	Receive Poll Demand																																	
L	1		1	1	_	1		_		1	1			1	1	1	1		1		1		1		1		1	1	i.	1		1	1	

LJ-04705.AI5

Table 3–29 CSR2 Receive Poll Demand Register Description

Field	Description								
31:0	RPD — Receive Poll Demand (Write Only)								
	When written with any value, the 21140A checks for receive descriptors to be acquired. If no descriptor is available, the receive process returns to the suspended state and CSR5<7> is not asserted. If the descriptor is available, the receive process resumes.								

Table 3–30 lists the access rules for CSR2.

Table 3–30 CSR2 Access Rules

Category	Description						
Value after reset	FFFFFFFH						
Read access rules	_						
Write access rules	Effective only if the receive process is in the suspended state.						

3.2.2.4 Descriptor List Address Registers (CSR3–Offset 18H and CSR4–Offset 20H)

The CSR3 descriptor list address register is used for receive buffer descriptors and the CSR4 descriptor list address register is used for transmit buffer descriptors. In both cases, the registers are used to point the 21140A to the start of the appropriate descriptor list.

Figure 3–14 shows the CSR3 bit field and Table 3–31 describes the bit field.

Note

The descriptor lists reside in *physical* memory space and must be *longword* aligned. The 21140A behaves UNPREDICTABLY when the lists are not longword aligned.

Writing to either CSR3 or CSR4 is permitted only when its respective process is in the stopped state. When stopped, the CSR3 and CSR4 registers must be written *before* the respective START command is given (Section 3.2.2.6).

Figure 3–14 CSR3 Receive List Base Address Register

31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
Start of Receive List

LJ-04693.AI5

Table 3–31 CSR3 Receive List Base Address Register Description

Field	Description
31:2	Start of Receive List
1:0	Must be 00 for longword alignment.

Table 3–32 lists the access rules for CSR3.

Category	Description
Value after reset	UNPREDICTABLE
Read access rules	—
Write access rules	Receive process stopped

Figure 3–15 shows the CSR4 bit field and Table 3–33 describes the bit field.

Figure 3–15 CSR4 Transmit List Base Address Register

З	81	30) 29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Γ		I	1	1	1	1	I	I	I	I	I	' Sta	art	of	' Tra	ans	' sm	it L	_ist		I		1	I	I	I	I	I				
L			_	1	+	<u> </u>			-			1	-	- -		1	-				-				-							

LJ-04694.AI5

Table 3–33 CSR4 Transmit List Base Address Register Description

Field	Description
31:2	Start of Transmit List
1:0	Must be 00 for longword alignment.

Table 3–34 lists the access rules for CSR4.


Category	Description
Value after reset	UNPREDICTABLE
Read access rules	_
Write access rules	Transmit process stopped

3.2.2.5 Status Register (CSR5–Offset 28H)

The status register CSR5 contains all the status bits that the 21140A reports to the host. CSR5 is usually read by the driver during interrupt service routine or polling. Most of the fields in this register cause the host to be interrupted. CSR5 bits are not cleared when read. Writing 1 to these bits clears them; writing 0 has no effect. Each field can be masked (Section 3.2.2.7).

Figure 3–16 shows the CSR5 bit fields and Table 3–35 describes the bit fields.

Figure 3–16 CSR5 Status Register

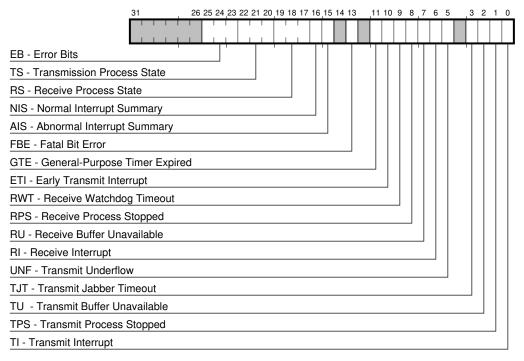

LJ04481B.AI5

Table 3–35 CSR5 Status Register Description

Field	Description								
25:23	EB — Error Bits (Read Only)								
	Indicates the type of error that caused system error. Valid only when fatal bus error CSR5<13> is set (Table 3–36).								
	This field does not generate an interrupt.								
22:20	TS — Transmission Process State (Read Only)								

Indicates the state of the transmit process (Table 3–37). This field does not generate an interrupt.

(continued on next page)

Field	Description								
9:17	RS — Receive Process State (Read Only)								
	Indicates the state of the receive process (Table 3–38). This field does not generate an interrupt.								
6	NIS — Normal Interrupt Summary								
	Normal interrupt summary bit. Its value is the logical OR of:								
	CSR5<0> — Transmit interrupt CSR5<2> — Transmit buffer unavailable CSR5<6> — Receive interrupt								
	Unmasked bits affect only the normal interrupt summary CSR5<16> bit.								
5	AIS — Abnormal Interrupt Summary								
	Abnormal interrupt summary bits. Its value is the logical OR of:								
	CSR5<1> — Transmit process stopped CSR5<3> — Transmit jabber timeout CSR5<5> — Transmit underflow CSR5<7> — Receive buffer unavailable CSR5<8> — Receive process stopped CSR5<9> — Receive watchdog timeout CSR5<10> — Early transmit interrupt CSR5<11> — General-purpose timer expired CSR5<13> — Fatal bus error								
	Unmasked bits affect only the abnormal interrupt summary CSR5<15> bit.								
3	FBE — Fatal Bus Error								
	Indicates that a system error occurred (Table 3–36). If a system error occurs, the 21140A disables all bus accesses.								
1	GTE — General-Purpose Timer Expired								
	Indicates that the general-purpose timer (CSR11) counter has expired. This timer is mainly used by the software driver.								
0	ETI — Early Transmit Interrupt								
	Indicates that the packet to be transmitted was fully transferred into the chip's internal transmit FIFOs. Transmit interrupt (CSR5<0>) automatically clears this bit.								
	(continued on next page								

Table 3–35 (Cont.) CSR5 Status Register Description

Table 3–	Table 3–35 (Cont.) CSR5 Status Register Description								
Field	Description								
9	RWT — Receive Watchdog Timeout								
	This bit reflects the line status and indicates that the receive watchdog timer has expired while another node is still active on the network. In case of overflow, the long packets may not be received.								
8	RPS — Receive Process Stopped								
	Asserts when the receive process enters the stopped state.								
7	RU — Receive Buffer Unavailable								
	Indicates that the next descriptor in the receive list is owned by the host and cannot be acquired by the 21140A. The reception process is suspended. To resume processing receive descriptors, the host should change the ownership of the descriptor and may issue a receive poll demand command. If no receive poll demand is issued, the reception process resumes when the next recognized incoming frame is received.								
	After the first assertion, CSR5<7> is not asserted for any subsequent not owned receive descriptors fetches. CSR5<7> asserts only when the previous receive descriptor was owned by the 21140A.								
6	RI — Receive Interrupt								
	Indicates the completion of a frame reception. Specific frame status information has been posted in the descriptor. The reception process remains in the running state.								
5	UNF — Transmit Underflow								
	Indicates that the transmit FIFO had an underflow condition during the packet transmission. The transmit process is placed in the suspended state and underflow error TDES0<1> is set.								
3	TJT — Transmit Jabber Timeout								
	Indicates that the transmit jabber timer expired, meaning that the 21140A transmitter had been excessively active. The transmission process is <i>aborted</i> and placed in the stopped state. This event causes the transmit jabber timeout TDES0<14> flag to assert.								
2	TU — Transmit Buffer Unavailable								
	Indicates that the next descriptor on the transmit list is owned by the host and cannot be acquired by the 21140A. The transmission process is suspended. Table 4–14 explains the transmit process state transitions. To resume processing transmit descriptors, the host should change the ownership bit of the descriptor and then issue a transmit poll demand command, unless transmit automatic polling (Table 3–24) is enabled.								

(continued on next page)

Field	Description
1	TPS — Transmit Process Stopped
	Asserts when the transmit process enters the stopped state.
0	TI — Transmit Interrupt
	Indicates that a frame transmission was completed, while TDES1<31> is asserted in the first descriptor of the frame.

Table 3–36 lists the bit codes for the fatal bus error bits.

Table 3–36 Fa	tal Bus E	Error Bits
---------------	-----------	------------

CSR5<25:23>	Process State
000	Parity error ¹
001	Master abort
010	Target abort
011	Reserved
1xx	Reserved

 $^1{\rm The}$ only way to recover from a parity error is by setting software reset (CSR0<0>=1).

Table 3–37 lists the bit codes for the transmit process state.

	Table 3–37	' Transmit	Process	State
--	------------	------------	---------	-------

CSR5<22:20>	Process State
000	Stopped — RESET command or transmit jabber expired
001	Running — Fetching transmit descriptor
010	Running — Waiting for end of transmission
011	Running — Reading buffer from memory and queuing the data into the transmit FIFO
100	Reserved
101	Running — Setup packet
110	Suspended — Transmit FIFO underflow, or an unavailable transmit descriptor
111	Running — Closing transmit descriptor

Table 3–38 lists the bit codes for the receive process state.

CSR5<19:17>	Process State
000	Stopped — RESET or STOP RECEIVE command
001	Running — Fetching receive descriptor
010	Running — Checking for end of receive packet before prefetch of next descriptor
011	Running — Waiting for receive packet
100	Suspended — Unavailable receive buffer
101	Running — Closing receive descriptor
110	Running — Flushing the current frame from the receive FIFO because of unavailable receive buffer
111	$\operatorname{Running}-\operatorname{Queuing}$ the receive frame from the receive FIFO into the receive buffer

 Table 3–38
 Receive Process State

Table 3–39 lists the access rules for CSR5.

Table 3–39 CSR5 Access Rules

Category	Description
Value after reset	FC000000H
Read access rules	_
Write access rules	CSR5 bits 0 through 16 are cleared by writing 1. Writing 0 to these bits has no effect.
	Writing to CSR5 bits 17 through 25 has no effect.

3.2.2.6 Operation Mode Register (CSR6–Offset 30H)

CSR6 establishes the receive and transmit operating modes and commands. CSR6 should be the last CSR to be written as part of initialization. Figure 3–17 shows the CSR6 bit fields and Table 3–40 describes the bit fields.

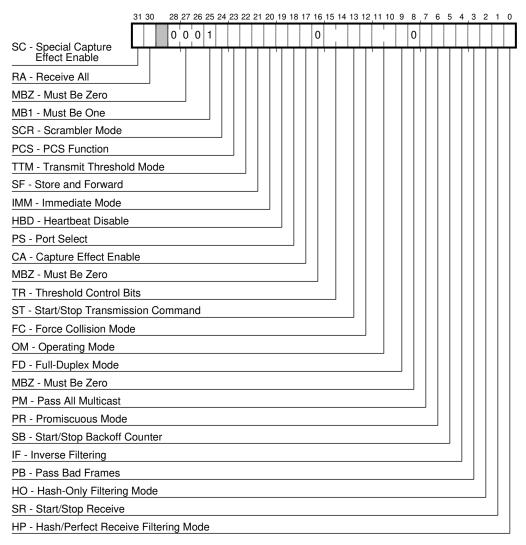


Figure 3–17 CSR6 Operating Mode Register

LJ-04482.AI5

Field	Description
31	SC — Special Capture Effect Enable
	When set, enables the enhanced resolution of capture effect on the network (Section 6.6). Digital recommends that this bit be set together with CSR6<17>.
	When clear, the 21140A disables the enhanced resolution of capture effect on the network.
30	RA — Receive All
	When set, all incoming packets will be received, regardless of the destination address. The address match is checked according to Table 3–44, and is reported in RDES0<30>.
28:26	MBZ — Must Be Zero
	These bits are not used by the 21140A and should always be programmed to zero.
25	MBO — Must Be One
	This bit should always be programmed to one.
24	SCR — Scrambler Mode
	When set, the scrambler function is active and the MII/SYM port transmits and receives scrambled symbols.
	Changing this bit during operation may cause unpredictable behavior and will probably require a software reset (Table 3–42).
23	PCS — PCS Function
	When set, the PCS functions are active and the MII/SYM port operates in symbol mode. All MII/SYM port control signals are generated internally.
	When reset, the MII/SYM port is not selected and port select (CSR6<18>) is also reset.
	Changing this bit during operation may cause unpredictable behavior and will probably require a software reset (Table 3–42).
22	TTM — Transmit Threshold Mode
	Selects the transmit FIFO threshold to be either 10Mb/s or 100Mb/s (Table 3–41). When set, the threshold is 10Mb/s. When reset, the threshold is 100Mb/s.
	The transmit process must be in the stopped state to change this bit (Table 3–42).

Table 3–40 CSR6 Operating Mode Register Description

(continued on next page)

Description
SF — Store and Forward
When set, transmission starts when a full packet resides in the FIFO. When this occurs, the threshold values specified in CSR6<15:14> are ignored. The transmit process must be in the stopped state to change this bit.
IMM — Immediate Mode
Selects the transmit FIFO threshold to be 16 bytes, regardless of the value written in the threshold fields (CSR6<15:14,22>).
High PCI bus utilization may cause an underflow condition before the transmitted frame length passes the collision window length. This condition may result in runt frames being transmitted while using this mode.
The transmit process must be in the stopped state to change this bit.
HBD — Heartbeat Disable
When set, the heartbeat signal quality (SQE) generator function is disabled. This bit should be set in the MII/SYM mode.
PS — Port Select
When reset, the SRL port is selected. When set, the MII/SYM port is selected.
During a hardware reset, this bit automatically resets (Table 3–42).
A software reset does not affect this bit. After this bit state is changed, a software reset should be performed and both the transmit and receive processes should be initialized.
CA — Capture Effect Enable
When set, enables the resolution of the capture effect on the network (Section 6.6).
When reset, the 21140A disables the resolution of the capture effect on the network
MBZ — Must Be Zero
This bit is not used by the 21140A and should always be programmed to zero.
TR — Threshold Control Bits
Controls the selected threshold level for the 21140A transmit FIFO. Four threshold levels are allowed (Table 3-41).
The threshold value has a direct impact on the 21140A bus arbitration scheme (Section 4.3.2).
Transmission starts when the frame size within the transmit FIFO is larger than the threshold. In addition, full frames with a length less than the threshold are also transmitted.
(continued on next page)

Table 3–40 (Cont.) CSR6 Operating Mode Register Description

Preliminary—Subject to Change—October 1995 3-31

Field	Description
	The transmit process must be in the stopped state to change these bits (CSR6<15:14>).
13	ST — Start/Stop Transmission Command
	When set, the transmission process is placed in the running state, and the 21140A checks the transmit list at the <i>current</i> position for a frame to be transmitted.
	Descriptor acquisition is attempted either from the <i>current</i> position in the list, which is the transmit list base address set by <i>CSR4</i> , or from the position retained when the transmit process was previously stopped. If no descriptor can be acquired the transmit process enters the suspended state.
	If the current descriptor is not owned by the 21140A, the transmission process enters the suspended state and transmit buffer unavailable CSR5<2> is set. The start transmission command is affected only when the transmission process is stopped. If the command is issued before setting CSR4, the 21140A will behave UNPREDICTABLY.
	When reset, the transmission process is placed in the stopped state after completing the transmission of the current frame. The next descriptor position in the transmit list is saved, and becomes the current position when transmission is restarted.
	The stop transmission command is effective only when the transmission process is in either the running or suspended state (Table $4-14$).
12	FC — Force Collision Mode
	Allows the collision logic to be tested. Meaningful only in internal loopback mode. When set, a collision is forced during the next transmission attempt. This results in 16 transmission attempts with excessive collision reported in the transmit descriptor (TDES0<8>).
11:10	OM — Operating Mode
	Selects the 21140A loopback operation modes (Table 3–43).
9	FD — Full-Duplex Mode
	When set, the 21140A operates in a full-duplex mode (Section 6.5). The 21140A car transmit and receive simultaneously.
	Setting the 21140A to operate in full-duplex mode is allowed only if the transmit and receive processes are in the stopped state, and start/stop receive (CSR6<1>) and start/stop transmission commands (CSR6<13>) are both set to 0.
	While in full-duplex mode: heartbeat check is disabled, heartbeat fail TDES0<7> should be ignored, and internal loopback is not allowed.
8	MBZ — Must Be Zero
	This bit is not used by the 21140A and should always be programmed to zero.
	(continued on next page)

Field	Description
7	PM — Pass All Multicast
	When set, indicates that all the incoming frames with a multicast destination address (first bit in the destination address field is 1) are received. Incoming frames with physical address destinations are filtered according to the CSR6<0> bit.
6	PR — Promiscuous Mode
	When set, indicates that any incoming valid frame is received, regardless of its destination address.
	After reset, the 21140A wakes up in promiscuous mode.
5	SB — Start/Stop Backoff Counter
	When set, indicates that the internal backoff counter stops counting when any carrier activity is detected. The 21140A backoff counter resumes when the carrier drops. The earliest the 21140A starts its transmission after carrier deassertion is 9.6 μ s for 10Mb/s data rate or 0.96 μ s for 100Mb/s data rate.
	When reset, the internal backoff counter is not affected by the carrier activity.
4	IF — Inverse Filtering (Read Only)
	When set, the 21140A operates in an inverse filtering mode. This is valid only during perfect filtering mode (Table 3–44 and Table 4–8).
3	PB — Pass Bad Frames
	When set, the 21140A operates in pass bad frame mode. All incoming frames that passed the address filtering are received, including runt frames, collided fragments, or truncated frames caused by FIFO overflow.
	If any received bad frames are required, promiscuous mode (CSR6<6>) should be set to 1.
2	HO — Hash-Only Filtering Mode (Read Only)
	When set, the 21140A operates in an imperfect address filtering mode for both physical and multicast addresses (Table 4–8).
	(continued on next page)

Table 3–40 (Cont.) CSR6 Operating Mode Register Description

Field	Description
1	SR — Start/Stop Receive
	When set, the receive process is placed in the running state. The 21140A attempts to acquire a descriptor from the receive list and processes incoming frames.
	Descriptor acquisition is attempted from the <i>current</i> position in the list, which is the address set by $CSR3$ or the position retained when the receive process was previously stopped. If no descriptor is owned by the 21140A, the receive process enters the suspended state and receive buffer unavailable (CSR5<7>) sets.
	The start reception command is affected only when the reception process has stopped. If the command was issued before setting CSR3, the 21140A behaves UNPREDICTABLY.
	When cleared, the receive process enters the stopped state after completing the reception of the current frame. The next descriptor position in the receive list is saved, and becomes the <i>current</i> position after the receive process is restarted. The stop reception command is effective only when the receive process is in running or suspended state (Table 4–13).
0	HP — Hash/Perfect Receive Filtering Mode (Read Only)
	When reset, the 21140A does a perfect address filter of incoming frames according to the addresses specified in the setup frame (Table 4–8).
	When set, the 21140A does imperfect address filtering of multicast incoming frame according to the hash table specified in the setup frame. If CSR6<2> is set, then physical addresses are imperfect address filtered too. If CSR6<2> is reset, physical addresses are perfect address filtered, according to a single physical address, as specified in the setup frame.
	Note
	A unique condition occurs in hash/perfect receive filtering mode when a physical address is perfect filtered by comparing it to a single address. In this case, while in perfect filtering mode, the driver sends a setup frame containing the single physical address. The driver then sets the pass all multicast mode.

Table 3-40 (Cont.) CSR6 Operating Mode Register Description

Table 3–41 lists the threshold values in bytes.

CSR6<21>	CSR6<20>	CSR6<15:14>	CSR6<18> = 0 CSR6<22> = X	CSR6<18> = 1 CSR6<22> = 1	CSR6<18> = 1 CSR6<22> = 0
0	0	00	72	72	128
0	0	01	96	96	256
0	0	10	128	128	512
0	0	11	160	160	1024
1	Х	XX	Store and forward	Store and forward	Store and forward
0	1	XX	16	16	16

Table 3–41 Transmit Threshold

Table 3–42 lists the port and data rate selection.

				Active	Data	
CSR6<18>	CSR6<22>	CSR6<23>	CSR6<24>	Port	Rate	Function
0	0	Х	Х	SRL	$10 \mathrm{Mb/s}$	Conventional 10Mb/s ENDEC interface
1	1	0	0	MII/SYM	10Mb/s	MII with transmit FIFO thresholds appropriate for 10Mb/s
1	0	0	0	MII/SYM	100Mb/s	MII with transmit FIFO thresholds appropriate for 100Mb/s
1	0	1	0	MII/SYM	100Mb/s	PCS function for 100BASE-FX
1	0	1	1	MII/SYM	100Mb/s	PCS and scrambler functions for 100BASE-TX

Table 3–42	Port and Data Rate Selection

Table 3-43 selects the 21140A loopback operation modes.

Table 3–43 Loopback Operation Mode

CSR6<11:10>	Operation Mode
00	Normal
01^{1}	Internal loopback
10	External loopback

¹Internal loopback is performed on the serial and MII/SYM ports. If enabled by CSR6, it also tests the PCS functions (CSR6<23>) and the scrambler function (CSR6<24>). Note that when internal loopback is performed on the SYM port, symbols appear on the network. When internal loopback is performed on the MII port, the **mii_txen** signal is disabled.

Table 3–44 lists the codes to determine the filtering mode.

CSR6<7>	CSR6<6>	CSR6<4>	CSR6<2>	CSR6<0>	Filtering Mode
0	0	0	0	0	16 perfect filtering
0	0	0	0	1	512-bit hash + 1 perfect filtering
0	0	0	1	1	512-bit hash for multicast and physical addresses
0	0	1	0	0	Inverse filtering
Х	1	0	0	Х	Promiscuous
0	1	0	1	1	Promiscuous
1	0	0	0	Х	Pass all multicast
1	0	0	1	1	Pass all multicast

Table 3–44 Filtering Mode

_ Note _

When CSR6<30> is set (receive all mode), this table is used to generate the address match status reported in RDES0<30>.

Table 3–45 describes the only conditions that permit change to a field when modifying values to CSR6.


Category	Description	
Value after reset	32000040	
Read access rules		
Write access rules		
* CSR6<22>	Receive and transmit processes stopped	
* CSR6<21>	Receive and transmit processes stopped	
* CSR6<17>	Receive and transmit processes stopped	
* CSR6<16>	Receive and transmit processes stopped	
* CSR6<15:14>	Transmit process stopped	
* CSR6<12>	Receive and transmit processes stopped	
* CSR6<11:10>	Receive and transmit processes stopped	
	Internal loopback mode	
* CSR6<9>	Receive and transmit processes stopped	
* CSR6<8>	Transmit process stopped	
* CSR6<5>	Receive and transmit processes stopped	
* CSR6<3>	Receive process stopped	
* Start_Transmit CSR6<13>=1	CSR4 initialized	
* Stop_Transmit CSR6<13>=0	Transmit running or suspended	
* Start_Receive CSR6<1>=1	CSR3 initialized	
* Stop_Receive CSR6<1>=0	Receive running or suspended	

Table 3–45 CSR6 Access Rules

3.2.2.7 Interrupt Enable Register (CSR7–Offset 38H)

The interrupt enable register (CSR7) enables the interrupts reported by CSR5 (Section 3.2.2.5). Setting a bit to 1 enables a corresponding interrupt. After a hardware or software reset, all interrupts are disabled. Figure 3–18 shows the CSR7 bit fields and Table 3–46 describes the bit fields.

Figure 3–18 CSR7 Interrupt Enable Register

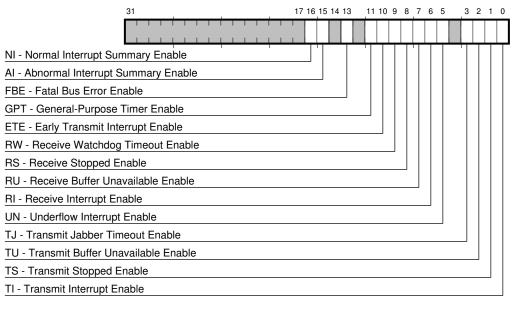

LJ04483B.AI5

Table 3–46 CSR7 Interrupt Enable Register Description

Field	Description
16	NI — Normal Interrupt Summary Enable
	When set, normal interrupt is enabled.
	When reset, no normal interrupt is enabled. This bit (CSR7<16>) enables the following bits:
	CSR5<0> — Transmit interrupt CSR5<2> — Transmit buffer unavailable CSR5<6> — Receive interrupt

(continued on next page)

Table 3–46 (C	Cont.) CSR7	Interrupt Enabl	e Register	Description
10010 0 10 10		mitoriapt mias	0	

Field	Description					
15	AI — Abnormal Interrupt Summary Enable					
	When set, abnormal interrupt is enabled.					
	When reset, no abnormal interrupt is enabled. This bit CSR7<15> enables the following bits:					
	CSR5<1> — Transmit process stopped CSR5<3> — Transmit jabber timeout CSR5<5> — Transmit underflow CSR5<7> — Receive buffer unavailable CSR5<8> — Receive process stopped CSR5<9> — Receive watchdog timeout CSR5<11> — General-purpose timer expired CSR5<13> — Fatal bus error					
13	FBE — Fatal Bus Error Enable					
	When set together with abnormal interrupt summary enable (CSR7<15>) and fatal bus error (CSR5<13>), the interrupt is enabled.					
	When reset and fatal bus error (CSR5<13>) is set, the interrupt is disabled.					
11	GPT — General-Purpose Timer Enable					
	When set together with abnormal interrupt summary enable (CSR7<15>) and general-purpose timer expired (CSR5<11>), the interrupt is enabled.					
	When reset and general-purpose timer expired CSR5<11> is set, the interrupt is disabled.					
10	ETE — Early Transmit Interrupt Enable					
	When set together with normal interrupt summary enable (CSR7<16>) and early transmit interrupt enable (CSR5<10>), the interrupt is enabled.					
	When reset and early transmit interrupt (CSR5<10>) is set, the interrupt is disabled.					
9	RW — Receive Watchdog Timeout Enable					
	When set together with abnormal interrupt summary enable (CSR7<15>) and receive watchdog timeout (CSR5<9>), the interrupt is enabled.					
	When reset and receive watchdog timeout (CSR5<9>) is set, the interrupt is disabled.					

(continued on next page)

Table 3–46 (Cont.)	CSR7 Interrupt	Enable Register	Description

Field	Description					
8	RS — Receive Stopped Enable					
	When set together with abnormal interrupt summary enable (CSR7<15>) and receive stopped (CSR5<8>), the interrupt is enabled.					
	When reset and receive stopped (CSR5<8>) is set, the interrupt is disabled.					
7	RU — Receive Buffer Unavailable Enable					
	When set together with abnormal interrupt summary enable (CSR7<15>) and receive buffer unavailable (CSR5<7>), the interrupt is enabled.					
	When reset and receive buffer unavailable (CSR5<7>) is set, the interrupt is disabled.					
6	RI — Receive Interrupt Enable					
	When set together with normal interrupt summary enable (CSR7<16>) and receive interrupt bit (CSR5<6>), the interrupt is enabled.					
	When reset and receive interrupt (CSR5<6>) is set, the interrupt is disabled.					
5	UN — Underflow Interrupt Enable					
	When set together with abnormal interrupt summary enable (CSR7<15>) and transmit underflow (CSR5<5>), the interrupt is enabled.					
	When reset and transmit underflow (CSR5<5>) is set, the interrupt is disabled.					
3	TJ — Transmit Jabber Timeout Enable					
	When set together with abnormal interrupt summary enable (CSR7<15>) and transmit jabber timeout (CSR5<3>), the interrupt is enabled.					
	When reset and transmit jabber timeout (CSR5<3>) is set, the interrupt is disabled.					
2	TU — Transmit Buffer Unavailable Enable					
	When set together with normal interrupt summary enable (CSR7<16>) and transmit buffer unavailable (CSR5<2>), the interrupt is enabled.					
	When reset and transmit buffer unavailable (CSR5<2>) is set, the interrupt is disabled.					
1	TS — Transmit Stopped Enable					
	When set together with abnormal interrupt summary enable (CSR7<15>) and transmission stopped (CSR5<1>), the interrupt is enabled.					
	When reset and transmission stopped (CSR5<1>) is set, the interrupt is disabled.					
0	TI — Transmit Interrupt Enable					
	When set together with normal interrupt summary enable (CSR7<16>) and transmit interrupt (CSR5<0>), the interrupt is enabled.					
	(continued on next page)					

Table 3–46 (Cont.) CSR7 Interrupt Enable Register Description		
Field	Description	
	When reset and transmit interrupt (CSR5<0>) is set, the interrupt is disabled.	


Table 3–47 lists the access rules for CSR7.

Category	Description
Value after reset	FFFE0000H
Read access rules	_
Write access rules	_

3.2.2.8 Missed Frames and Overflow Counter (CSR8–Offset 40H)

Figure 3–19 shows the CSR8 bit fields and Table 3–48 describes the bit fields.

Figure 3–19 CSR8 Missed Frames and Overflow Counter

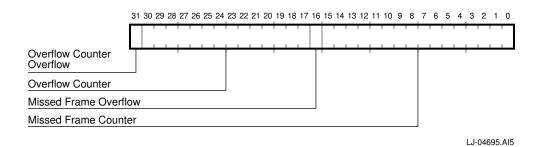

Field Description 31 **Overflow Counter Overflow (Read Only)** Sets when the overflow counter overflows; resets when CSR8 is read. 30:17 **Overflow Counter (Read Only)** Indicates the number of frames discarded because of overflow. The counter clears when read. 16 Missed Frame Overflow (Read Only) Sets when the missed frame counter overflows; resets when CSR8 is read. 15:0 Missed Frame Counter (Read Only) Indicates the number of frames discarded because no host receive descriptors were available. The counter clears when read.

Table 3–48 CSR8 Missed Frames and Overflow Counter Description

Table 3–49 lists the access rules for CSR8.

 Table 3–49
 CSR8 Access Rules


Category	Description
Value after reset	00000000H
Read access rules	—
Write access rules	Not possible

3.2.2.9 Boot ROM, Serial ROM, and MII Management Register (CSR9–Offset 48H)

This register provides an interface to the boot ROM, serial ROM, and MII management. It selects the device and contains both the commands and data to be read from and stored in the boot ROM and serial ROM. The MII management selects an operation mode for reading and writing the MII.

Figure 3–20 shows the boot ROM, serial ROM, and MII management register and Table 3–50 describes the register bit fields.

Figure 3–20 CSR9 Boot ROM, Serial ROM, and MII Management Register

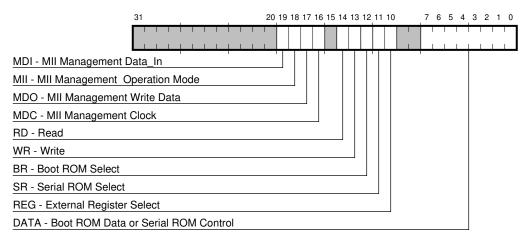

LJ-04484.AI5

Table 3–50 CSR9 Boot ROM, Serial ROM, and MII Management Register Description

Field	Description	
19	MDI — MII Management Data_In	
	Used by the 21140A to read data from the PHY.	
18	MII — MII Management Operation Mode	
	Defines the operation mode (read or write) of the PHY.	
17	MDO — MII Management Write Data	
	Specifies the value of the data that the 21140A writes to the PHY.	
16	MDC — MII Management Clock	
	MII management data clock (mii_mdc) is an output signal to the PHY. It is used as a timing reference.	
14	RD — Read Operation	
	Read control bit. When set together with CSR9<12>, the 21140A performs read cycles from the boot ROM, the serial ROM, and the external register.	
	(continued on next page)	

Table 3–50 (Cont.) CSR9 Boot ROM, Serial ROM, and MII Management Register Description

Field	Description
13	WR — Write Operation
	Write control bit. When set together with CSR9<12>, the 21140A performs write cycles to the boot ROM, the serial ROM, and the external register.
12	BR — Boot ROM Select
	When set, the 21140A selects the boot ROM.
11	SR — Serial ROM Select
	When set, together with either serial ROM read operation (CSR9<14>) or serial ROM write operation (CSR9<13>), the 21140A selects the serial ROM.
10	REG — External Register Select
	When set, the 21140A selects an external register (Section 7.5).
7:0	DATA — Boot ROM Data or Serial ROM Control
	If the boot ROM is selected (CSR9<12> is set), this field contains the data to be read from and written to the boot ROM.
	If the serial ROM is selected, CSR9<3:0> bits are connected to the serial ROM control pins as follows:
	Bit 3, Data Out — When set, serially shifts the read data from the serial ROM device to the 21140A.
	Bit 2, Data In — When set, serially shifts the write data from the 21140A to the serial ROM device.
	Bit 1, Serial ROM Clock — When set, it provides a serial clock output to the serial ROM.
	Bit 0, Serial ROM Chip Select — When set, it provides a serial ROM chip select to the serial ROM.

Table 3–51 lists the access rules for CSR9.

Table 3–51 CSR9 Access Rules


Category	Description
Value after reset	FFF097FFH
Read access rules	—
Write access rules	_

3.2.2.10 Boot ROM Programming Address Register (CSR10–Offset 50H)

The boot ROM programming address register (CSR10) contains the 18-bit boot ROM address.

Figure 3–21 shows the CSR10 bit field and Table 3–52 describes the bit field.

Figure 3–21 CSR10 Boot ROM Programming Address Register



LJ03973A.AI5

	Table 3–52	CSR10 Boot ROM Programming	Address Description
--	------------	----------------------------	----------------------------

Field	Description
17:0	Boot ROM Address
	Contains a pointer to the boot ROM.

Table 3–53 lists the access rules for CSR10.

Table 3–53 CSR10 Access Rules

Category	Description
Value after reset	UNPREDICTABLE
Read access rules	_
Write access rules	_

3.2.2.11 General-Purpose Timer Register (CSR11–Offset 58H)

This register contains a 16-bit general-purpose timer. It is used mainly by the software driver for timing functions not supplied by the operating system. After this timer is loaded, it starts counting down. The expiration of the timer causes an interrupt in CSR5<11>. If the timer expires with the CON bit on, the counter will load itself automatically with the last value. The value that is read by the host in this register is the current count value. The timer is not active in snooze mode. The timer is asynchronous and the precision is ± 1 bit.

The timer operation is based on the existing serial clock. The cycle time of the timer depends on the port that is selected.

Figure 3–22 shows the CSR11 bit fields and Table 3–54 describes the bit fields.

31 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 <u>CON - Continuous Mode</u> Timer Value

Figure 3–22 CSR11 General-Purpose Timer Register

LJ03930B.AI5

0

1

Field Description	
16	CON — Continuous Mode
	When set, the general-purpose timer is in continuous operating mode When reset, the general-purpose timer is in one-shot operating mode.
15:0	Timer Value
	Contains the number of iterations of the general-purpose timer. Each iteration duration is :
	10Mb/s port is 204.8 μs. 100Mb/s MII is 81.92 μs. 10Mb/s MII is 819.2 μs.

Table 3–54 CSR11 General-Purpose Timer Register Description

Table 3–55 lists the access rules for CSR11.

Table 3–55 CSR11 Access Rules


Category	Description
Value after reset	FFFE0000H
Read access rules	_
Write access rules	—

3.2.2.12 General-Purpose Port Register (CSR12–Offset 60H)

The 21140A has an 8-pin general-purpose port that is controlled by CSR12.

Figure 3–23 shows the CSR12 bit fields and Table 3–56 describes the bit fields.

Figure 3–23 CSR12 General-Purpose Port Register



LJ-04706.AI5

Field	Description		
8	GPC — General-Purpose Control		
	Determines whether accessing CSR12<7:0> affects either the direction of each pin (input or output) or the data of each pin (1 or 0). The interaction of this bit and CSR12<7:0> is described in the following field.		
7:0	MD — General-Purpose Mode and Data		
	When CSR12<8> is set, the value that is written by the host to CSR12<7:0> sets the direction of each pin to be either an input pin or an output pin. For example, if CSR12<1> is 1, then gep<1> is an output pin. If CSR12<1> is 0, then gep<1> is an input pin.		
	When a hardware reset is initiated, all gep pins become input pins.		
	When $CSR12<8>$ is reset, any host write access to $CSR12<7:0>$ sets values on the pins that are configured as output pins. For example, if $CSR12<1>$ is 1 (and is defined as an output pin), then gep<1> is 1. If $CSR12<1>$ is 0 (and is defined as an output pin), then gep<1> is 0.		
	When CSR12<8> is reset, any host read access to CSR12<7:0> reflects the input values on any pins designated as input pins and output values on any pins designated as output pins.		
	The application of the general-purpose pins in board design should be correlated with the way the port driver software is using it.		
	Note		

Table 3–56 CSR12 General-Purpose Port Register Description


Table 3–57 lists the access rules for CSR12.

Category	Description
Value after reset	FFFFFEXXH
Read access rules	_
Write access rules	_

3.2.2.13 Watchdog Timer Register (CSR15–Offset 78H)

Figure 3–24 shows the CSR15 bit fields and Table 3–58 describes the bit fields. This register is mainly used for diagnostic purposes.

Figure 3–24 CSR15 Watchdog Timer Register

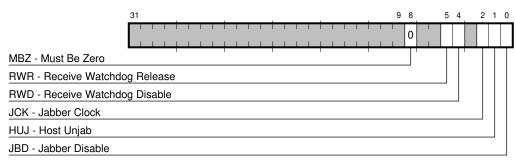

LJ04094A.AI5

Field	Description		
8	MBZ — Must Be Zero		
	This bit is not used by the 21140A and should always be programmed to zero.		
5	RWR — Receive Watchdog Release		
	Defines the time interval <i>no carrier</i> from receive watchdog expiration until reenabling the receive channel. When set, the receive watchdog is released 40- to 48-bit-times from the last carrier deassertion. When reset, the receive watchdog is released 16- to 24-bit-times from the last carrier deassertion.		
4	RWD — Receive Watchdog Disable		
	When set, the receive watchdog counter is disabled. When reset, receive carriers longer than 2560 bytes are guaranteed to cause the watchdog counter to time out. Packets shorter than 2048 bytes are guaranteed to pass.		
2	JCK — Jabber Clock		
	When set, transmission is cut off after a range of 2048 bytes to 2560 bytes is transmitted.		
	When reset, transmission for the 10Mb/s port is cut off after a range of 26 ms to 33 ms.		
	When reset, transmission for the 100Mb/s port is cut off after a range of 2.6 ms to 3.3 ms.		
1	HUJ — Host Unjab		
	Defines the time interval between transmit jabber expiration until reenabling of the transmit channel. When set, the transmit channel is released immediately after the jabber expiration.		
	When reset, the transmit jabber is released 365 ms to 420 ms after jabber expiration for the 10Mb/s port.		
	When reset, the transmit jabber is released 36.5 ms to 42 ms after jabber expiration for the 100Mb/s port.		
0	JBD — Jabber Disable		
	When set, the transmit jabber function is disabled.		

Table 3–58 CSR15 Watchdog Timer Register Description

Table 3–59 lists the access rules for CSR15.

Table 3–59 CSR15 Access Rules

Category	Description	
Value after reset	FFFFFEC8H	
Read access rules	_	
Write access rules	_	

4 Host Communication

This chapter describes descriptor lists and data buffers, which are collectively called the host communication area, that manage the actions and status related to buffer management. Commands and signals that control the functional operation of the 21140A are also described.

4.1 Data Communication

The 21140A and the driver communicate through two data structures:

- Control and status registers (CSRs), described in Chapter 3.
- Descriptor lists and data buffers, described in this chapter.

4.2 Descriptor Lists and Data Buffers

The 21140A transfers received data frames to the receive buffers in host memory and transmits data from the transmit buffers in host memory. Descriptors that reside in the host memory act as pointers to these buffers.


There are two descriptor lists, one for receive and one for transmit. The base address of each list is written into CSR3 and CSR4, respectively. A descriptor list is forward linked (either implicitly or explicitly). The last descriptor may point back to the first entry to create a ring structure. Explicit chaining of descriptors is accomplished by setting the second address chained in both the receive and transmit descriptors (RDES1<24> and TDES1<24>). The descriptor lists reside in the host *physical* memory address space. Each descriptor can point to a maximum of two buffers. This enables two buffers to be used, physically addressed, and not contiguous in memory (Figure 4–1).

A data buffer consists of either an entire frame or part of a frame, but it cannot exceed a single frame. Buffers contain only data; buffer status is maintained in the descriptor. Data chaining refers to frames that span multiple data buffers. Data chaining can be enabled or disabled. Data buffers reside in host *physical* memory space.



Figure 4–1 Descriptor Ring and Chain Structure Examples

Ring Structure

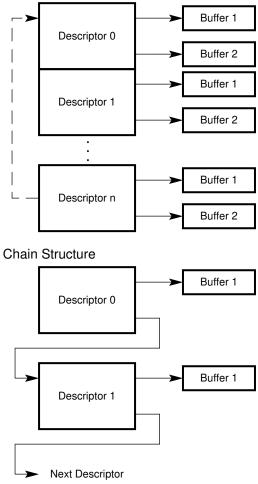

LJ-04096.AI

4.2.1 Receive Descriptors

Figure 4–2 shows the receive descriptor format.

Note _

Descriptors and receive buffers addresses must be longword aligned.

Providing two buffers, two byte-count buffers, and two address pointers in each descriptor enables the adapter port to be compatible with various types of memory-management schemes.


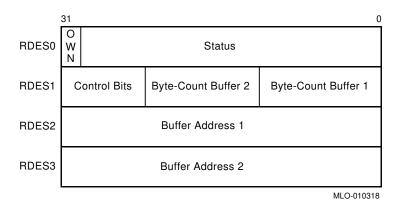


Figure 4–2 Receive Descriptor Format

4.2.1.1 Receive Descriptor 0 (RDES0)

RDES0 contains the received frame status, the frame length, and the descriptor ownership information. Figure 4–3 shows the RDES0 bit fields and Table 4–1 describes the bit fields.

Figure 4–3 RDES0 Receive Descriptor 0

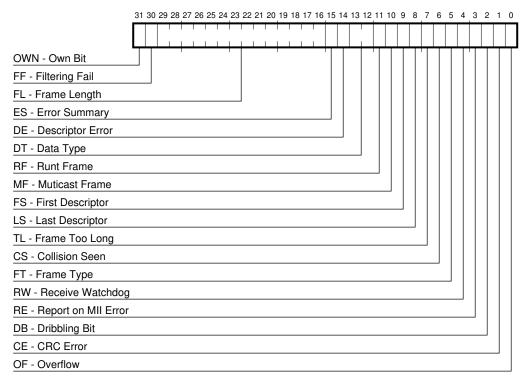

LJ-04485.AI5

Field	Description		
31	OWN — Own Bit		
	When set, indicates that the descriptor is owned by the 21140A. When reset, indicates that the descriptor is owned by the host. The 21140A clears this bit either when it completes the frame reception or when the buffers that are associated with this descriptor are full.		
30	FF — Filtering Fail		
	When set, this indicates that the frame failed the address recognition filtering. This bit can be set only when receive all (CSR6<30>) is set. Otherwise, this bit is reset.		
29:16	FL — Frame Length		
	Indicates the length, in bytes, of the received frame, including the cyclic redundancy check (CRC).		
	This field is valid only when last descriptor (RDES0<8>) is set and descriptor error (RDES0<14>) is reset.		
15	ES — Error Summary		
	Indicates the logical OR of the following RDES0 bits:		
	RDES0<0> — Overflow RDES0<1> — CRC error RDES0<6> — Collision seen RDES0<7> — Frame too long RDES0<11> — Runt frame RDES0<14> — Descriptor error		
	This bit is valid only when last descriptor (RDES0<8>) is set.		
14	DE — Descriptor Error		
	When set, indicates a frame truncation caused by a frame that does not fit within the current descriptor buffers, and that the 21140A does not own the next descriptor. The frame is truncated.		
	This bit is valid only when last descriptor (RDES0<8>) is set.		

Table 4–1 RDES0 Receive Descriptor 0 Description

Table 4–	Table 4–1 (Cont.) RDES0 Receive Descriptor 0 Description		
Field	Description		
13:12	DT — Data Type		
	Indicates the type of frame the buffer contains:		
	00 — Serial received frame.		
	01 — Internal loopback frame.		
	10 — External loopback frame or serial received frame. The 21140A does not differentiate between loopback and serial received frames; therefore, this information is global and reflects only the operating mode (CSR6<11:10>).		
	11 — Reserved.		
	This field is valid only when last descriptor (RDES0<8>) is set.		
11	RF — Runt Frame		
	When set, indicates that this frame was damaged by a collision or premature termination before the collision window had passed. Runt frames are passed on to the host only if the pass bad frames bit (CSR6<3>) is set.		
	This bit is valid only when last descriptor (RDES0<8>) is set and overflow (RDES0<0>) is reset.		
10	MF — Multicast Frame		
	When set, indicates that this frame has a multicast address.		
	This bit is valid only when last descriptor (RDES0<8>) is set.		
9	FS — First Descriptor		
	When set, indicates that this descriptor contains the first buffer of a frame.		
	If the buffer size of the first buffer is 0, the second buffer contains the beginning of the frame. If the buffer size of the second buffer is also 0, the second descriptor contains the beginning of the frame.		
8	LS — Last Descriptor		
	When set, indicates that the buffers pointed to by this descriptor are the last buffers of the frame.		

Field	Description		
7	TL — Frame Too Long		
	When set, indicates that the frame length exceeds the maximum Ethernet-specified size of 1518 bytes.		
	This bit is valid only when last descriptor (RDES0<8>) is set.		
	Note		
	Frame too long is only a frame length indication and does not cause any frame truncation.		
6	CS — Collision Seen		
	When set, indicates that the frame was damaged by a collision that occurred after the 64 bytes following the start frame delimiter (SFD). This is a late collision.		
	This bit is valid only when last descriptor (RDES0<8>) is set.		
5	FT — Frame Type		
	When set, indicates that the frame is an Ethernet-type frame (frame length field is greater than 1500 bytes). When clear, indicates that the frame is an IEEE 802.3 frame.		
	This bit is not valid for runt frames of less than 14 bytes.		
	This bit is valid only when last descriptor (RDES0<8>) is set.		
4	RW — Receive Watchdog		
	When set, indicates that the receive watchdog timer expired while receiving the current packet with length greater than 2048 bytes through 2560 bytes. Receive watchdog timeout (CSR5<9>) is set.		
	When RDES0<4> is set, the frame length field in RDES0<30:16> is not valid.		
	This bit is valid only when last descriptor (RDES0<8>) is set.		
3	RE — Report on MII Error		
	When set, indicates that a receive error in the physical layer was reported during the frame reception.		

Table 4–1 (Cont.) RDES0 Receive Descriptor 0 Description


Field	Description
2	DB — Dribbling Bit
	When set, indicates that the frame contained a noninteger multiple of 8 bits. This error is reported only if the number of dribbling bits in the last byte is 4 in MII/SYM operating mode, or at least 3 in 10Mb/s serial operating mode. This bit is not valid if either collision seen (RDES0<6>) or runt frame (RDES0<11>) is set. If set, and the CRC error (RDES0<1>) is reset, then the packet is valid.
	This bit is valid only when last descriptor (RDES0<8>) is set.
1	CE — CRC Error
	When set, indicates that a cyclic redundancy check (CRC) error occurred on the received frame. This bit is also set when the mii_err pin is asserted during the reception of a receive packet even though the CRC may be correct.
	This bit is valid only when last descriptor (RDES0<8>) is set.
0	OF — Overflow
	When set, indicates received data in this descriptor's buffer were truncated due to FIFO overflow.
	This bit is valid only when last descriptor (RDES0<8>) is set.

Table 4–1 (Cont.) RDES0 Receive Descriptor 0 Description

4.2.1.2 Receive Descriptor 1 (RDES1)

Figure 4–4 shows the RDES1 bit fields and Table 4–2 describes the bit fields.

Figure 4–4 RDES1 Receive Descriptor 1

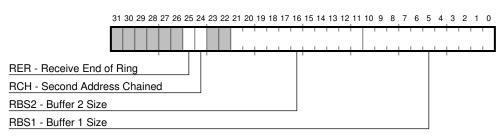

LJ-04698.AI5

Table 4–2 RDES1 Receive Descriptor 1 Description

Field	Description		
25	RER — Receive End of Ring		
	When set, indicates that the descriptor list reached its final descriptor. The 21140A returns to the base address of the list (Section 3.2.2.4), creating a descriptor ring.		
24	RCH — Second Address Chained		
	When set, indicates that the second address in the descriptor is the next descriptor address, rather than the second buffer address.		
	RDES1<25> takes precedence over RDES1<24>.		
21:11	RBS2 — Buffer 2 Size		
	Indicates the size, in bytes, of the second data buffer. If this field is 0, the 21140A ignores this buffer and fetches the next descriptor.		
	The buffer size must be a multiple of 4.		
	This field is not valid if RDES1<24> is set.		
10:0	RBS1 — Buffer 1 Size		
	Indicates the size, in bytes, of the first data buffer. If this field is 0, the 21140A ignores this buffer and uses buffer 2.		
	The buffer size must be a multiple of 4.		

4.2.1.3 Receive Descriptor 2 (RDES2)

Figure 4–5 shows the RDES2 bit field and Table 4–3 describes the bit field.

Figure 4–5 RDES2 Receive Descriptor 2

31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
Buffer Address 1

LJ-04702.AI5

Table 4–3 RDES2 Receive Descriptor 2 Description

Field	Description
31:0	Buffer Address 1
	Indicates the physical address of buffer 1. The buffer must be longword aligned (RDES2<1:0> = 00).

4.2.1.4 Receive Descriptor 3 (RDES3)

Figure 4–6 shows the RDES3 bit field and Table 4–4 describes the bit field.

Figure 4–6 RDES3 Receive Descriptor 3

31 30 29 28	27 26 25 24 23	3 22 21 20 19 18 17 16	15 14 13 12 11 10 9 8	7 6 5 4 3 2 1 0			
Buffer Address 2							
				LJ-04703.AI5			

Table 4–4 RDES3 Receive Descriptor 3 Description

Field	Description
31:0	Buffer Address 2
	Indicates the physical address of buffer 2. The buffer must be longword aligned (RDES3<1:0> = 00).

4.2.1.5 Receive Descriptor Status Validity

Table 4–5 lists the validity of the receive descriptor status bits in relation to the reception completion status.

Reception					Ree	ceive 🕄	Status	Report					
Status	RF	CS	FT	FF	DB	CE	RE	(ES, DE, DT, FS, LS, FL, OF)					
Overflow	NV	NV	V	V	NV	NV	V	V					
Collision after 512 bits	V	V	v	V	NV	NV	V	V					
Runt frame	V	V	V	V	NV	NV	V	V					
Runt frame less than 14 bytes	V	V	NV	NV	NV	NV	V	V					
Watchdog timeout	NV	NV	V	V	NV	NV	V	V					

Table 4–5 Receive Descriptor Status Validity

RF — Runt frame (RDES0<11>) CS — Collision seen (RDES0<6>) FT — Frame type (RDES0<5>) FF — Filtering Fail (RDES0<30>) DB — Dribbling bit (RDES0<2>) CE — CRC error (RDES0<1>) RE — Report on MII Error (RDES0<3>) ES — Error summary (RDES0<15>) DE — Descriptor error (RDES0<14>) DT — Data type (RDES0<13:12>) FS — First descriptor (RDES0<9>) LS — Last descriptor (RDES0<8>) FL — Frame length (RDES0<30:16>) OF — Overflow (RDES0<0>) V — Valid NV — Not valid

4.2.2 Transmit Descriptors


Figure 4–7 shows the Transmit descriptor format.

_ Note __

Descriptor addresses must be longword aligned.

Providing two buffers, two byte-count buffers, and two address pointers in each descriptor enables the adapter port to be compatible with various types of memory-management schemes.


Figure 4–7 Transmit Descriptor Format

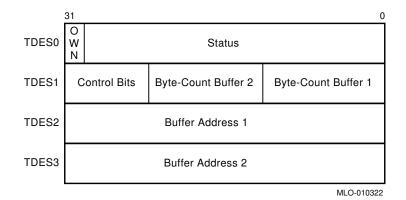

4.2.2.1 Transmit Descriptor 0 (TDES0)

TDES0 contains transmitted frame status and descriptor ownership information. Figure 4–8 shows the TDES0 bit fields and Table 4–6 describes the bit fields.

Figure 4–8 TDES0 Transmit Descriptor 0

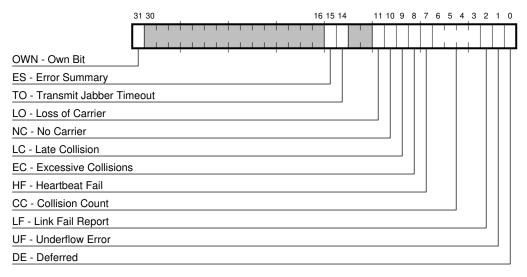

LJ-04486.AI5

Table 4–6 TDES0 Transmit Descriptor 0 Description

Field Description 31 OWN — Own Bit	
When set, indicates that the descriptor is owned by the 21140A. Wh indicates that the descriptor is owned by the host. The 21140A clears when it completes the frame transmission or when the buffers alloca descriptor are empty.	s this bit either
The ownership bit of the first descriptor of the frame should be set subsequent descriptors belonging to the same frame have been set. a possible race condition between the 21140A fetching a descriptor a setting an ownership bit.	This avoids
15 ES — Error Summary	
Indicates the logical OR of the following bits:	
TDES0<1> — Underflow error TDES0<8> — Excessive collisions TDES0<9> — Late collision TDES0<10> — No carrier TDES0<11> — Loss of carrier TDES0<14> — Transmit jabber timeout	
14 TO — Transmit Jabber Timeout	
When set, indicates that the transmit jabber timer timed out and the transmitter was still active. The transmit jabber timeout interrupt C The transmission process is <i>aborted</i> and placed in the STOPPED sta	CSR5 < 3 > is set
When TDES0<14> is set, any heartbeat fail indication (TDES0<7>) i	s not valid.
LO – Loss of Carrier	
When set, indicates loss of carrier during transmission.	
Not valid in internal loopback mode (CSR6<11:10>=01).	
10 NC — No Carrier	
When set, indicates that the carrier signal from the transceiver was during transmission.	not present
Not valid in internal loopback mode (CSR6<11:10>=01).	
9 LC – Late Collision	
When set, indicates that the frame transmission was aborted due to occurring after the collision window of 64 bytes. Not valid if underf. (TDES0<1>) is set.	


Field	Description										
8	EC — Excessive Collisions										
	When set, indicates that the transmission was aborted after 16 successive collisions while attempting to transmit the current frame.										
7	HF — Heartbeat Fail										
	This bit is effective only in 10Mb/s operating mode. When set, this bit indicates a heartbeat collision check failure (the transceiver failed to return a collision pulse as a check after the transmission). For transceivers that do not support heartbeat collision check, heartbeat fail is set but is not valid.										
	This bit is not valid if underflow error (TDES0<1>) is set.										
	On the second transmission attempt, after the first transmission was aborted due to a collision, the 21140A does not check heartbeat fail (TDES0<7>) and is reset.										
6:3	CC — Collision Count										
6:3	This 4-bit counter indicates the number of collisions that occurred before the frame was transmitted.										
	Not valid when the excessive collisions bit (TDES0<8>) is also set.										
2	LF — Link Fail Report										
	When set, indicates that the link test failed before the frame was transmitted through the symbol port. This bit is valid only while using the symbol mode ($CSR6<23>$ is set.)										
1	UF — Underflow Error										
	When set, indicates that the transmitter aborted the message because data arrived late from memory. Underflow error indicates that the 21140A encountered an empty transmit FIFO while transmitting a frame. The transmission process enters the suspended state and sets both transmit underflow (CSR5<5>) and transmit interrupt (CSR5<0>).										
0	DE — Deferred										
	When set, indicates that the 21140A had to defer while ready to transmit a frame because the carrier was asserted.										

Table 4–6 (Cont.) TDES0 Transmit Descriptor 0 Description

4.2.2.2 Transmit Descriptor 1 (TDES1)

Figure 4–9 shows the TDES1 bit fields and Table 4–7 describes the bit fields.

Figure 4–9 TDES1 Transmit Descriptor 1

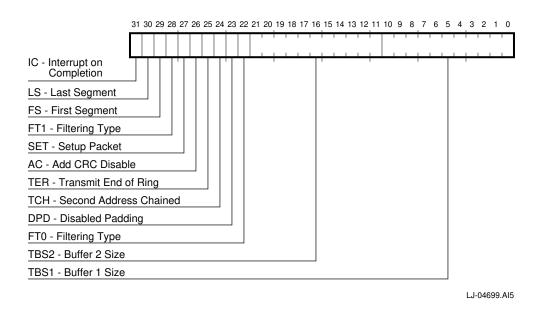

Field	Description
31	IC — Interrupt on Completion
	When set, the 21140A sets transmit interrupt (CSR5<0>) after the present frame has been transmitted. It is valid only when last segment (TDES1<30>) is set or when it is a setup packet.
30	LS — Last Segment
	When set, indicates that the buffer contains the last segment of a frame.
29	FS — First Segment
	When set, indicates that the buffer contains the first segment of a frame.
28	FT1 — Filtering Type
	Table 4–8 lists the filtering types.
	(continued on next page)

Preliminary—Subject to Change—October 1995 4-15

Field	Description
27	SET — Setup Packet
	When set, indicates that the current descriptor is a setup frame descriptor (Section $4.2.3$).
26	AC — Add CRC Disable
	When set, the 21140A does not append the cyclic redundancy check (CRC) to the end of the transmitted frame. This field is valid only when first segment (TDES1<29>) is set.
25	TER — Transmit End of Ring
	When set, indicates that the descriptor pointer has reached its final descriptor. The 21140A returns to the root address of the list (Section 3.2.2.4). This creates a descriptor ring.
24	TCH — Second Address Chained
	When set, indicates that the second address in the descriptor is the next descripto address, rather than the second buffer address.
	Transmit end of ring (TDES1<25>) takes precedence over second address chained (TDES1<24>).
23	DPD — Disabled Padding
	When set, the 21140A does not automatically add a padding field, to a packet shorter than 64 bytes.
	When reset, the 21140A automatically adds a padding field and also a CRC field to a packet shorter than 64 bytes. The CRC field is added despite the state of the ad CRC disable (TDES1<26>) flag.
22	FT0 — Filtering Type
	Table 4–8 lists the filtering types.
21:11	TBS2 — Buffer 2 Size
	Indicates the size, in bytes, of the second data buffer. If this field is 0, the 21140A ignores this buffer and fetches the next descriptor.
	This field is not valid if second address chained (TDES1<24>) is set.
10:0	TBS1 — Buffer 1 Size
	Indicates the size, in bytes, of the first data buffer. If this field is 0, the 21140A ignores this buffer and uses buffer 2.

Table 4–7 (Cont.) TDES1 Transmit Descriptor 1 Description

information on filtering.

Tak	ole	4–8	Filt	ering	Туре
-----	-----	-----	------	-------	------

FT1	FT0	Description
0	0	Perfect Filtering
		The 21140A interprets the descriptor buffer as a setup perfect table of 16 addresses, and sets the 21140A filtering mode to perfect filtering.
		This field is valid only when setup packet (TDES1<27>) is set (Table 3-44).
0	1	Hash Filtering
		The 21140A interprets the descriptor buffer as a setup hash table of 512-bit-plus-one perfect address. If an incoming receive packet destination address is a multicast address, the 21140A executes an imperfect address filtering compared with the hash table. However, if the incoming receive packet destination address is a physical address, the 21140A executes a perfect filtering compared with the perfect address.
		This field is valid only when setup packet (TDES1<27>) is set (Table 3-44).
1	0	Inverse Filtering
		The 21140A interprets the descriptor buffer as a setup perfect table of 16 addresses and sets the 21140A filtering mode to inverse filtering.
		The 21140A receives the incoming frames with destination addresses not matching the perfect addresses and rejects the frames with destination addresses matching one of the perfect addresses.
		This field is valid only when setup packet (TDES1<27>) is set (Table 3-44).
1	1	Hash-Only Filtering
		The 21140A interprets the descriptor buffer as a setup 512-bit hash table. If an incoming receive packet destination address is multicast or physical, the 21140A executes an imperfect address filtering against the hash table.
		This field is valid only when setup packet (TDES1<27>) is set (Table 3-44).

4.2.2.3 Transmit Descriptor 2 (TDES2)

Figure 4–10 shows the TDES2 bit field and Table 4–9 describes the bit field.

Figure 4–10 TDES2 Transmit Descriptor 2

31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0 Buffer Address 1

LJ-04702.AI5

	Table 4–9	TDES2	Transmit	Descrip	tor 2	Description	
--	-----------	-------	----------	---------	-------	-------------	--

Field	Description
31:0	Buffer Address 1
	Physical address of buffer 1. There are no limitations on the buffer address alignment.

4.2.2.4 Transmit Descriptor 3 (TDES3)

Figure 4–11 shows the TDES3 bit field and Table 4–10 describes the bit field.

Figure 4–11 TDES3 Transmit Descriptor 3

Buffer Address 2	31	31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0																														
	Г	Buffer Address 2																														
		Duilei Audiess 2																														
				-	-	-			-		-	-	-		-	-				-	_				-				-		-	

LJ-04703.AI5

Field	Description						
31:0	Buffer Address 2						
	Physical address of buffer 2. There are no limitations on the buffer address alignment.						

4.2.2.5 Transmit Descriptor Status Validity

Table 4–11 lists the validity of the transmit descriptor status bits during transmission completion status.

	Tran			nsmit Status Report			
Transmission Status	LO	NC	LC	EC	HF	СС	(ES, TO, UF, DE)
Underflow	V	V	V	NV	V	V	V
Excessive collisions	v	V	V	V	V	NV	V
Watchdog timeout	NV	V	NV	NV	NV	V	V
Internal loopback	NV	NV	V	V	NV	V	V

Table 4–11 Transmit Descriptor Status Validity

List of table abbreviations

LO — Loss of carrier (TDES0<11>) NC — No carrier (TDES0<10>)

LC - Late collision (TDES0<9>)EC — Excessive collisions (TDES0<8>)

HF — Heartbeat fail (TDES0<7>) CC — Collision count (TDES0<6:3>) ES — Error summary (TDES0<15>) TO — Transmit jabber timeout (TDES0<14>)

UF — Underflow error (TDES0<1>) DE — Deferred (TDES0<0>)

V — Valid NV — Not valid

4.2.3 Setup Frame

A setup frame defines the 21140A Ethernet addresses that are used to filter all incoming frames. The setup frame is never transmitted on the Ethernet wire nor is it looped back to the receive list. When processing the setup frame, the receiver logic temporarily disengages from the Ethernet wire. The setup frame size must be *exactly* 192 bytes.

Note _____

The setup frame must be allocated in a single buffer that is longword aligned. First segment (TDES1<29>) and last segment (TDES1<30>) must both be 0.

When the setup frame load is completed, the 21140A closes the setup frame descriptor by clearing its ownership bit and setting all other bits to 1.

4.2.3.1 First Setup Frame

A setup frame must be processed before the reception process is started, except when it operates in promiscuous filtering mode.

4.2.3.2 Subsequent Setup Frames

Subsequent setup frames may be queued to the 21140A despite the reception process state. To ensure correct setup frame processing, these packets may be queued at the beginning of the transmit descriptor's ring or following a descriptor with a zero-length buffer. For the descriptor with a zero-length buffer, it should contain the following information:

TDES0 < 31 >	= 1 (Adapter-owned descriptor)
TDES1<30>	= 0 (Last segment bit 0)
TDES1<29>	= 0 (First segment bit 0)
TDES1<21:11>	= 0 (Transmit buffer 2 empty)
TDES1<10:0>	= 0 (Transmit buffer 1 empty)

Setup packet (TDES1<27>) may also be set. If so, the address filtering bits (TDES1<22> and TDES1<28>) should be the same as in the previous packet. For setup frame processing, the transmission process must be *running*. The setup frame is processed after all preceding frames have been transmitted and the current frame reception, if any, is completed.

The setup frame does not affect the reception process state, but during setup frame processing, the 21140A is disengaged from the Ethernet wire.

4.2.3.3 Perfect Filtering Setup Frame Buffer

This section describes how the 21140A interprets a setup frame buffer in perfect filtering mode (CSR6<0> = 0).

The 21140A can store 16 destination addresses (full 48-bit Ethernet addresses). The 21140A compares the addresses of any incoming frame to these addresses, and also tests the status of the inverse filtering (CSR6<4>). It rejects addresses that:

- Do not match if inverse filtering (CSR6 < 4 > = 0).
- Match if inverse filtering (CSR6<4> = 1).

The setup frame must *always* supply all 16 addresses. Any mix of physical and multicast addresses can be used. Unused addresses should duplicate one of the valid addresses.

Figure 4–12 shows the perfect filtering setup frame buffer format of the addresses.

:	31 16	15
<3:0>	*****	Physical Address 00 (Bytes <1:0>)
<7:4>	*****	Physical Address 00 (Bytes <3:2>)
<11:8>	*****	Physical Address 00 (Bytes <5:4>)
	*****	Physical Address 01
	*****	Physical Address 01
	*****	Physical Address 01
	*****	Physical Address 02
	*****	Physical Address 02
	*****	Physical Address 02
		Physical Address 03
	*****	Physical Address 14
	*****	Physical Address 14
	*****	Physical Address 14
<183:180>	*****	Physical Address 15 (Bytes <1:0>)
<187:184>	*****	Physical Address 15 (Bytes <3:2>)
<191:188>	*****	Physical Address 15 (Bytes <5:4>)

Figure 4–12 Perfect Filtering Setup Frame Buffer Format

XXXXXX = Don't care

LJ-04684.A15

The low-order bit of the low-order bytes is the multicast bit of the address.

Example 4–1 shows a perfect filtering setup buffer (fragment).

Example 4–1 Perfect Filtering Buffer

```
Ethernet addresses to be filtered:
0
   A8-09-65-12-34-76
    09-BC-87-DE-03-15
     •
  Setup frame buffer fragment while in little endian byte ordering:
0
   xxxx09A8
    xxxx1265
    xxxx7634
    xxxxBC09
    xxxxDE87
    xxxx1503
     .
  Setup frame buffer fragment while in big endian byte ordering:
3 A809xxxx
    6512xxxx
    3476xxxx
    09BCxxxx
    87DExxxx
    0315xxxx
```


• Displays two Ethernet addresses written according to the Ethernet specification for address display.

- 2 Displays two addresses as they would appear in the buffer in little endian format.
- Displays two addresses as they would appear in the buffer in big endian format.

4.2.3.4 Imperfect Filtering Setup Frame Buffer

This section describes how the 21140A interprets a setup frame buffer in imperfect filtering mode (CSR6<0> is set). Figure 4–13 shows imperfect filtering.

Figure 4–13 Imperfect Filtering

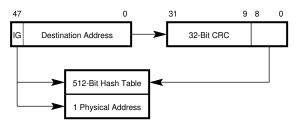

LJ-04726.AI5


The 21140A can store 512 bits serving as hash bucket heads, and one *physical* 48-bit Ethernet address. Incoming frames with multicast destination addresses are subjected to imperfect filtering. Frames with physical destination addresses are checked against the single physical address.

For any incoming frame with a multicast destination address, the 21140A applies the standard Ethernet cyclic redundancy check (CRC) function to the first 6 bytes containing the destination address, then it uses the most significant 9 bits of the result as a bit index into the table. If the indexed bit is set, the frame is accepted. If the bit is cleared, the frame is rejected. (Appendix C provides an example of a hash index for a given Ethernet address.)

This filtering mode is called imperfect because multicast frames not addressed to this station may slip through, but it still decreases the number of frames that the host can receive.

Figure 4–14 shows the format for the hash table and the physical address.

Figure 4–14 Imperfect Filtering Setup Frame Format

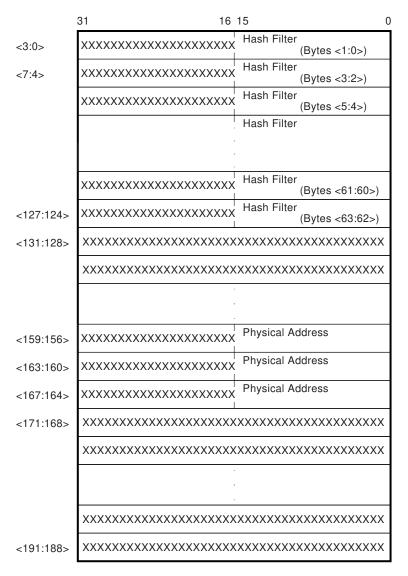

XXXXXX = Don't care

LJ-04685.AI5

Bits are sequentially numbered from right to left and down the hash table. For example, if the CRC (destination address) <8:0> = 33, the 21140A examines bit 1 in the fourth longword.

Example 4–2 shows an imperfect filtering setup frame buffer.

Example 4–2 Imperfect Filtering Buffer

```
Ethernet addresses to be filtered:

25-00-25-00-27-00

A3-C5-62-3F-25-87

D9-C2-C0-99-0B-82

7D-48-4D-FD-CC-0A

E7-C1-96-36-89-DD

61-CC-28-55-D3-C7

6B-46-0A-55-2D-7E
```

2 A8-12-34-35-76-08

Setup frame buffer while in little endian byte ordering:

3 xxxx0000 xxxx0000 xxxx0000 xxxx1000 xxxx0000 xxxx0000 xxxx0000 xxxx0000 xxxx0000 xxxx0000 xxxx0000 xxxx4000 xxxx0080 xxxx0000 xxxx0000 xxxx0010

4

xample 4–2	(Cont.)	Imperiect	Filtering	Bu
xxxx0000				
xxxx0000				
xxxx0000				
xxxx1000				
xxxx0000				
xxxx0001				
xxxx0000				
xxxx0000				
xxxx0000				
xxxx0040				
XXXXXXXX				
xxxx12A8				
xxxx3534				
xxxx0876				
XXXXXXXX				
XXXXXXX				
XXXXXXX				
XXXXXXX				

Example 4–2 (Cont.) Imperfect Filtering Buffer

Example 4–2 (Cont.) Imperfect Filtering Buffer

Setup frame buffer while in big endian byte ordering: 6 0000xxxx 0000xxxx 0000xxxx 0010xxxx 0000xxxx 0000xxxx 0000xxxx 0000xxxx 0000xxxx 0000xxxx 0000xxxx 0040xxxx 8000xxxx 0000xxxx 0000xxxx 1000xxxx 0000xxxx 0000xxxx 0000xxxx 0010xxxx 0000xxxx 0000xxxx 0000xxxx 0000xxxx 0000xxxx 0000xxxx 0000xxxx 0100xxxx 0000xxxx 0000xxxx 0000xxxx 4000xxxx XXXXXXXX XXXXXXXX XXXXXXXX XXXXXXXX XXXXXXXX XXXXXXXX XXXXXXXX

Example 4–2 (Cont.) Imperfect Filtering Buffer

- Displays Ethernet multicast addresses written according to the Ethernet specification for address display.
- **2** Displays an Ethernet physical address.
- O Displays the first part of an imperfect filter setup frame buffer, in little endian byte ordering, with set bits for the multicast addresses as in **1**.
- Displays the second part of the buffer with the physical address as in **2**, in little endian byte ordering.
- Displays the first part of an imperfect filter setup frame buffer, in big endian byte ordering, with set bits for the multicast addresses as in 1.
- Displays the second part of the buffer with the physical address as in 2, in big endian byte ordering.

4.3 Functional Description

This section describes the reset commands, interrupt handling, and startup. It also describes the transmit and receive processes.

The functional operation of the 21140A is controlled by the driver interface located in the host communication area. The driver interface activity is controlled by control and status registers (CSRs), descriptor lists, and data buffers.

Descriptor lists and data buffers, collectively referred to as the host communication area, reside in host memory. These data structures process the actions and status related to buffer management. The 21140A transfers frame data to and from the receive and transmit buffers in host memory. Descriptors resident in the host memory point to these buffers.

4.3.1 Reset Commands

The following two commands are available to reset the 21140A hardware and software:

- Assert **rst_l**, to initiate a hardware reset.
- Assert CSR0<0>, to initiate a software reset.

For a proper reset operation, both clocks (**pci_clk**, and, depending on the operation mode, either **mii/sym_tclk** or **srl_tclk**) should operate normally. For both the hardware and software reset commands, the 21140A *aborts* all processing and starts the reset sequence. The 21140A initializes all internal states and registers.

_ Note ____

No internal states are retained, no descriptors are owned, and all the host-visible registers are set to the reset values. However, a software reset command has no effect on the configuration registers.

The 21140A does not explicitly disown any owned descriptor; descriptor-owned bits can be left in a state indicating 21140A ownership. Section 4.2.1.1 and Section 4.2.2.1 provide a detailed description of own bits.

After either a hardware or software reset command, the first bus transaction to the 21140A should not be initiated for at least 50 PCI clock cycles. When the reset sequence completes, the 21140A can accept host commands. The receive and transmit processes are placed in the stopped state (Table 4–13 and Table 4–14). It is permissible to issue successive reset commands (hardware or software).

4.3.2 Arbitration Scheme

The arbitration scheme is used by the 21140A to grant precedence to the receive process instead of the transmit process (CSR0<1>). Table 4–12 lists a description of the arbitration scheme. The technical expressions used in this table are described in the following list:

- *Txreq* Specifies a DMA request for the transmit process to:
 - Fetch descriptor.
 - Close descriptor.
 - Process setup packet.

- Allocate sufficient space in the transmit FIFO for a full data burst.
- *Rxreq* Specifies a DMA request for the receive process to:
 - Fetch descriptor.
 - Close descriptor.
 - Enter sufficient data into the receive FIFO for a full data burst, or indicate the end of receive packet and the data in the receive FIFO is less than a full burst.
- *TxEN* Specifies 21140A is currently transmitting.
- *RxF>thrx* Specifies the amount of free bytes left in the receive FIFO. The values are taken from the programmed threshold values in CSR6<15:14>. Table 3–41 lists the coding for the programmed values.
- TxF>thtx Specifies the amount of free bytes left in the transmit FIFO. The values are taken from the programmed threshold values in Table 3–41.

Txreq	Rxreq	TxEN	RxF>thrx	TxF>thtx	Chosen Process
0	0	0	_	_	_
0	0	1	—	—	—
0	1	0	—	_	Receive process
0	1	1	—	—	Receive process
1	0	0	—	_	Transmit process
1	0	1	_	_	Transmit process
1	1	0	_	_	Receive process
1	1	1	0	0	Transmit process
1	1	1	0	1	Transmit process
1	1	1	1	0	Transmit process
1	1	1	1	1	Receive process

Table 4–12 Arbitration Scheme

In addition to the arbitration scheme listed in Table 4–12, two other factors must be considered:

• The transmit process obtains a window for one burst between two consecutive receive packets.

• The receive process obtains a window for one burst between two consecutive transmit packets.

4.3.3 Interrupts

Interrupts can be generated as a result of various events. CSR5 contains all the status bits that might cause an interrupt. The following list contains the events that cause interrupts:

CSR5<0> — Transmit interrupt CSR5<1> — Transmit process stopped CSR5<2> — Transmit buffer unavailable CSR5<3> — Transmit jabber timeout CSR5<5> — Transmit underflow CSR5<6> — Receive interrupt CSR5<6> — Receive buffer unavailable CSR5<7> — Receive buffer unavailable CSR5<8> — Receive process stopped CSR5<9> — Receive watchdog timeout CSR5<10> — Early transmit interrupt CSR5<11> — General-purpose timer expired CSR5<13> — Fatal bus error

Interrupt bits are cleared by writing a 1 to the bit position. This enables additional interrupts from the same source.

Interrupts are not queued, and if the interrupting event recurs *before* the driver has responded to it, no additional interrupts are generated. For example, receive interrupt (CSR5<6>) indicates that one or more received frames were delivered to host memory. The driver must scan *all* descriptors, from the last recorded position to the first one owned by the 21140A.

An interrupt is generated only *once* for simultaneous, multiple interrupting events. The driver must scan CSR5 for the interrupt cause or causes. The interrupt is not generated *again*, unless a new interrupting event occurs after the driver has cleared the appropriate CSR5 bits.

For example, transmit interrupt (CSR5<0>) and receive interrupt (CSR5<6>) are set simultaneously. The host acknowledges the interrupt, and the driver begins executing by reading CSR5. Next, receive buffer unavailable (CSR5<7>) is set. The driver writes back its copy of CSR5, clearing transmit interrupt and receive interrupt. The interrupt line is deasserted for one cycle and then asserted again with receive buffer unavailable.

4.3.4 Startup Procedure

The following sequence of checks and commands must be performed by the driver to prepare the 21140A for operation:

- 1. Wait 50 PCI clock cycles for the 21140A to complete its reset sequence.
- 2. Update configuration registers (Section 3.1):
 - a. Read the configuration ID and revision registers to identify the 21140A and its revision.
 - b. Write the configuration interrupt register (if interrupt mapping is necessary).
 - c. Write the configuration base address registers to map the 21140A I/O or memory address space into the appropriate processor address space.
 - d. Write the configuration command register.
 - e. Write the configuration latency counter to match the system latency guidelines.
- 3. Write CSR0 to set global host bus operating parameters (Section 3.2.2.1).
- 4. Write CSR7 to mask unnecessary (depending on the particular application) interrupt causes.
- 5. The driver must create the transmit and receive descriptor lists. Then, it writes to both CSR3 and CSR4, providing the 21140A with the starting address of each list (Section 3.2.2.4). The first descriptor on the transmit list may contain a setup frame (Section 4.2.3).

Caution _

If address filtering (either perfect or imperfect) is desired, the receive process should only be started after the setup frame has been processed (Section 4.2.3).

6. Write CSR6 (Section 3.2.2.6) to set global serial parameters and start both the receive and transmit processes. The receive and transmit processes enter the running state and attempt to acquire descriptors from the respective descriptor lists. Then the receive and transmit processes begin processing incoming and outgoing frames. The receive and transmit processes are independent of each other and can be started and stopped separately.

4.3.5 Receive Process

While in the running state, the receive process polls the receive descriptor list, attempting to acquire free descriptors. Incoming frames are processed and placed in acquired descriptors' data buffers. Status information is written to receive descriptor 0.

4.3.5.1 Descriptor Acquisition

The 21140A always attempts to acquire an extra descriptor in anticipation of incoming frames. Descriptor acquisition is attempted if any of the following conditions are satisfied:

- When start/stop receive (CSR6<1>) sets immediately after being placed in the running state.
- When the 21140A begins writing frame data to a data buffer pointed to by the current descriptor, and the buffer ends before the frame ends.
- When the 21140A completes the reception of a frame, and the current receive descriptor has been closed.
- When the receive process is suspended because of a host-owned buffer (RDES0<31>=0), and a new frame is received.
- When receive poll demand is issued (Section 3.2.2.3).

4.3.5.2 Frame Processing

As incoming frames arrive, the 21140A recovers the incoming data and clock pulses, and then sends them to the receive engine. The receive engine strips the preamble bits and stores the frame data in the receive FIFO. Concurrently, the receive section performs address filtering depending on the results of inverse filtering (CSR6<6>), hash/perfect receive filtering mode (CSR6<0>), and hash-only receive filtering mode (CSR6<2>), and also its internal filtering table. If the frame fails the address filtering, it is ignored and purged from the FIFO. Frames that are shorter than 64 bytes, because of collision or premature termination, are also ignored and purged from the FIFO (unless pass bad frames bit CSR6<3> is set).

After 64 bytes have been received, the 21140A requests the PCI bus to begin transferring the frame data to the buffer pointed to by the current descriptor. While waiting for the PCI bus, the 21140A continues to receive and store the data in the FIFO. After receiving the PCI bus, the 21140A sets first descriptor (RDES0<9>), to delimit the frame. Then, the descriptors are released when the OWN (RDES0<31>) bit is reset to 0 either as the data buffers fill up or as the last segment of a frame is transferred to a buffer. If a frame is contained in a single descriptor, both last descriptor (RDES0<8>) and first descriptor (RDES0<9>) are set.

The 21140A sets last descriptor (RDES0<8>), fetches the next descriptor, and releases the RDES0 status bits in the last frame descriptor. After the last frame descriptor is released, the 21140A sets receive interrupt (CSR5<6>) and fetches the next descriptor. The same process repeats unless the 21140A encounters a descriptor flagged as being owned by the host. If this occurs, the receive process sets receive buffer unavailable (CSR5<7>) and then enters the suspended state. The position in the receive list is retained.

4.3.5.3 Receive Process Suspended

If any frames enter while the receive process is suspended, the 21140A fetches the current descriptor in host memory. If the descriptor is now owned by the 21140A, the receive process reenters the running state and starts the frame reception.

If a receive frame arrives while the receive process is suspended, the 21140A refetches the next descriptor. If the descriptor is still owned by the host, the 21140A increments the missed frames counter (CSR8<15:0>) and discards the current frame in the receive FIFO. If more than one frame is stored in the receive FIFO, the process repeats.

4.3.5.4 Receive Process State Transitions

Table 4–13 lists the receive process state transitions and the resulting actions.

From State	Event	To State	Action
Stopped	Start receive command.	Running	Receive polling begins from last list position or from the list head, if this is the first start receive command issued, or if the receive descriptor list address (CSR3) was modified by the driver.
Running	The 21140A attempts to acquire a descriptor owned by the host.	Suspended	Receive buffer unavailable (CSR5<7>) sets when the last acquired descriptor buffer is consumed. The position in the list is retained.
			(continued on next page)

Table 4–13 Receive Process State Transitions

From State	Event	To State	Action
Running	Stop receive command.	Stopped	Receive process is stopped after the current frame, if any, is completely transferred to data buffers. Receive process stopped (CSR5<8>) sets. The position in the list is retained.
Running	Memory or host bus parity error encountered.	Running	The 21140A operation is stopped and fatal bus error (CSR5<13>) sets. The 21140A remains in the running state. A software reset must be issued to release the 21140A.
Running	Reset command.	Stopped	Receive capability is cut off.
Suspended	Receive poll demand or incoming frame and available descriptor.	Running	Receive polling resumes from last list position.
Suspended	Stop receive command.	Stopped	Receive process stopped (CSR5<8>) sets.
Suspended	Reset command.	Stopped	None.

Table 4–13 (Cont.) Receive Process State Transitions

4.3.6 Transmit Process

While in the running state, the transmit process polls the transmit descriptor list for frames requiring transmission. After polling starts, it continues in either sequential descriptor ring order or chained order. When it completes frame transmission, status information is written into transmit descriptor 0 (TDES0). If the 21140A detects a descriptor flagged as owned by the host, or if an error condition occurs, the transmit process is suspended and both transmit buffer unavailable (CSR5<2>) and normal interrupt summary (CSR5<16>) are set.

Transmit interrupt (CSR5<0>) is set after completing transmission of a frame that has interrupt on completion (TDES1<31>) set in its last descriptor. When this occurs, the transmission process continues to run.

While in the running state, the transmit process can simultaneously acquire two frames. As the transmit process completes copying the first frame, it immediately polls the transmit descriptor list for the second frame. If the second frame is valid, the transmit process copies the frame before writing the status information of the first frame.

4.3.6.1 Frame Processing

Frames can be data-chained and span several buffers. Frames must be delimited by the first descriptor (TDES1<29>) and the last descriptor (TDES1<30>), respectively.

As the transmit process starts execution, the first descriptor must have TDES1<29> set. When this occurs, frame data transfers from the host buffer to the internal FIFO. Concurrently, if the current frame has the last descriptor TDES1<30> clear, the transmit process attempts to acquire the next descriptor. The transmit process expects this descriptor to have TDES1<29> clear. If TDES1<30> is clear, it indicates an intermediary buffer. If TDES1<30> is set, it indicates the last buffer of the frame.

After the last buffer of the frame has been transmitted, the 21140A writes back the final status information to the transmit descriptor 0 (TDES0) word of the descriptor that has the last segment set in transmit descriptor 1 (TDES1<30>). At this time, if interrupt on completion (TDES1<31>) was set, the transmit interrupt (CSR5<0>) is set, the next descriptor is fetched, and the process repeats.

Actual frame transmission begins after the internal FIFO has reached either a programmable threshold CSR6<15:14> (Table 3–41), or a full frame is contained in the FIFO. Descriptors are released (OWN bit TDES0<31> clears) when the 21140A completes the packet transmission.

4.3.6.2 Transmit Polling Suspended

Transmit polling can be suspended by either of the following conditions:

- The 21140A detects a descriptor owned by the host (TDES0<31>=0). To resume, the driver must give descriptor ownership to the 21140A and then issue a poll demand command.
- A frame transmission is aborted when a locally induced error is detected. The appropriate transmit descriptor 0 (TDES0) bit is set.

If either of the previous two conditions occur, both abnormal interrupt summary (CSR5<15>) and transmit interrupt (CSR5<0>) are set, and the information is written to transmit descriptor 0, causing the suspension.

In both of the cases previously described, the position in the transmit list is retained. The retained position is that of the *descriptor following the last descriptor closed* (set to host ownership) by the 21140A.

_ Note ____

The 21140A *does not* automatically poll the transmit descriptor list. The driver *must* explicitly issue a transmit poll demand command after rectifying the suspension cause, unless the transmit automatic polling (CSR0<18:17>) field is set to 1.

4.3.6.3 Transmit Process State Transitions

Table 4–14 lists the transmit process state transitions and the resulting actions.

From State	Event	To State	Action
Stopped	Start transmit command.	Running	Transmit polling begins from one of the following positions:
			• The last list position.
			• The head of the list, if this is the first start command issued after CSR4 was initialized or modified.
Running	The 21140A attempts acquisition of a descriptor owned by the host.	Suspended	Transmit buffer unavailable (CSR5<2>) is set.
Running	Frame transmission aborts because a locally induced underflow error (TDES0<1>) is detected (Section 4.2.2.1).	Suspended	The following bits are set: TDES0<1> — Underflow error CSR5<5> — Transmit underflow CSR5<15> — Abnormal interrupt summary
Running	Stop transmit command.	Stopped	Transmit process is stopped after the current frame, if any, is transmitted. (continued on next page)

Table 4–14 Transmit Process State Transitions

From State	Event	To State	Action
Running	Frame transmission aborts because a transmit jabber timeout (TDES0<14>) was de- tected (Section 4.2.2.1).	Stopped	The following bits are set: TDESO<14> — Transmit jabber time out CSR5<1> — Transmit process stopped CSR5<3> — Transmit jabber time out CSR5<15> — Abnormal interrupt summary
Running	Parity error detected by memory or host bus.	Running	Transmission is cut off and fatal bus error (CSR5<13>) is set. The 21140A remains in the running state. If a software reset occurs, normal operation continues.
Running	Reset command.	Stopped	Transmission is cut off. If CSR4 was not changed, the position in the list is retained. If CSR4 was changed, the next descriptor address is fetched from the header list (CSR4) when the poll demand command is issued. Transmit process stopped (CSR5<1>) is set.
Suspended	Transmit poll demand command issued.	Running	Transmit polling resumes from the last list position.
Suspended	Stop transmit command.	Stopped	Transmit process stopped (CSR5<1>) is set.
Suspended	Reset command.	Stopped	None.

Table 4–14 (Cont.) Transmit Process State Transitions

5 Host Bus Operation

This chapter describes the commands and operations of read and write cycles for a bus slave and a bus master. It also explains the initiation of termination cycles by the bus master or bus slave.

5.1 Overview

The peripheral component interconnect (PCI) is the physical interconnection used between highly integrated peripheral controller components and the host system. The 21140A uses the PCI bus to communicate with the host CPU and memory.

The 21140A is directly compatible with the *PCI Local Bus Specification*, *Revision 2.1*. The 21140A supports a subset of the PCI-bus cycles (transactions). When communicating with the host, the 21140A operates as a bus slave; when communicating with the memory, as a bus master.

All signals are sampled on the rising edge of the clock. Each signal has a setup and hold aperture with respect to the rising clock edge. Refer to the *DECchip 21140A PCI Fast Ethernet LAN Controller Data Sheet* for detailed timing information. Table 5–1 lists the codes for bus commands.

Note

The term **clock cycle**, as used in this chapter, refers to the PCI bus clock period specification.

5.2 Bus Commands

5.2 Bus Commands

Table 5–1 lists the bus commands.

c_be_l<3:0>	Command	Type of Support
0000	Interrupt acknowledge	Not supported
0001	Special cycle	Not supported
0010	I/O read	Supported as target
0011	I/O write	Supported as target
0100	Reserved	_
0101	Reserved	_
0110	Memory read	Supported as initiator and target
0111	Memory write	Supported as initiator and target
1000	Reserved	
1001	Reserved	
1010	Configuration read	Supported as target
1011	Configuration write	Supported as target
1100	Memory read multiple	Supported as initiator and target
1101	Dual-address cycle	Not supported
1110	Memory read line	Supported as target
1111	Memory write and invalidate	Supported as target

Table 5–1 Bus Commands

 $^1 {\rm Initiator}$ support for this command is controlled by CSR0<21>.

5.3 Bus Slave Operation

All host accesses to CSRs and configuration registers in the 21140A are executed with the 21140A acting as the slave. The bus slave operations include the following:

- I/O read
- I/O write
- Configuration read
- Configuration write
- Memory read

- Memory write
- Memory read/write (includes memory write and invalidate, memory read line, and memory read multiple)

_____ Note _____

The 21140A does not support the following bus transactions:

Interrupt acknowledge Special cycle Dual-address cycle

If the 21140A is targeted for a burst I/O or memory operation, it responds with a retry on the second data transaction.

5.3.1 Slave Read Cycle (I/O or Memory Target)

Figure 5–1 shows a typical slave read cycle. The 21140A I/O read cycle is executed as follows:

- 1. The host initiates the slave read cycle by asserting the **frame_l** signal, driving the address on the **ad** lines and driving the bus command (slave read operation) on the **c_be_l** lines.
- 2. The 21140A samples the address and the bus command on the next clock edge.
- 3. The host deasserts **frame_l** signal and asserts **irdy_l** signal.
- 4. The 21140A asserts **devsel_l**, and, at the next cycle, drives the data on the **ad** lines.
- 5. The read transaction completes when both **irdy_l** and **trdy_l** are asserted by the host and the 21140A, respectively, on the same clock edge.

The 21140A assumes that **c_be_l** lines are 0000 (longword access).

If the **c_be_l** lines are 1111, the **ad** bus read is 00000000H with correct parity.

6. The host and the 21140A terminates the cycle by deasserting **irdy_l** and **trdy_l**, respectively.

Figure 5–1 Slave Read Cycle

clk		3 4 5	6 7
frame_l			
ad	Address	Data	>
c_be_l	Bus Command	be_l	>
trdy_l			
irdy_l			
devsel_l		<	
			LJ-04741.AI5

5.3.2 Slave Write Cycle (I/O or Memory Target)

Figure 5–2 shows a typical slave write cycle. The 21140A slave write cycle is executed as follows:

- 1. The host initiates the slave write cycle by asserting the **frame_l** signal, driving both the address on the **ad** lines and the bus command (slave write operation) on the **c_be_l** lines.
- 2. The 21140A samples the address and the bus command on the next clock edge.
- 3. The host deasserts **frame_l** and drives the data on the **ad** lines along with **irdy_l**.
- 4. The 21140A samples the data, and also asserts both devsel_l and trdy_l.
- 5. The host and the 21140A complete the write transaction by asserting both **irdy_l** and **trdy_l**, respectively, on the same clock edge.

The 21140A assumes that **c_be_l** lines are 0000 (longword access).

If the **c_be_l** lines are 1111, the write transaction completes normally on the bus, but the write transaction to the CSR is not executed.

6. The host and the 21140A terminate the cycle by deasserting **irdy_l** and **trdy_l**, respectively.

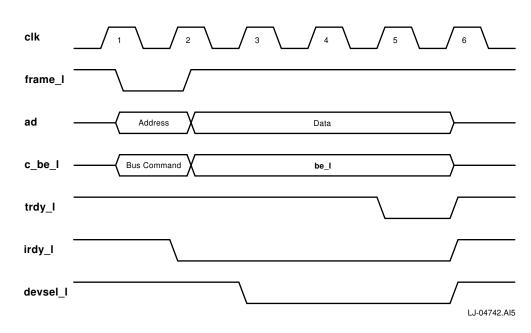


Figure 5–2 Slave Write Cycle

5.3.3 Configuration Read and Write Cycles

The 21140A provides a way for software to analyze and configure the system before defining any address assignments or mapping. The 21140A provides 256 bytes of configuration registers. Section 3.1 describes these registers.

_ Note _

Configuration space accesses provide support for **c_be_l** lines.

Figure 5–3 shows a configuration read cycle. The host selects the 21140A by asserting **idsel**. The 21140A responds by asserting **devsel_l**. The remainder of the read cycle is similar to the slave read cycle (Section 5.3.1).

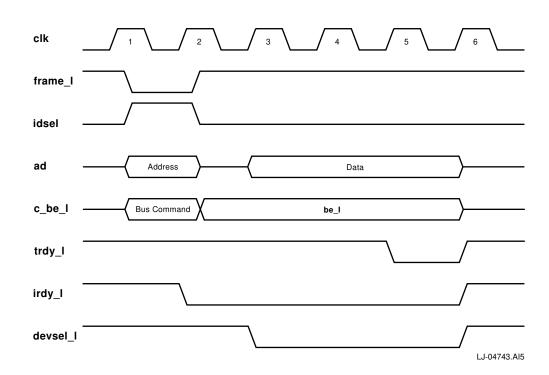


Figure 5–3 Configuration Read Cycle

5.4 Bus Master Operation

All memory accesses are completed with the 21140A as the master on the PCI bus. The bus master operations include the following:

- Bus arbitration
- Memory read cycle
- Memory write cycle
- Termination cycles

5.4.1 Bus Arbitration

The 21140A uses the PCI central arbitration mechanism with its unique request (**req_l**) and grant (**gnt_l**) signals. Figure 5–4 shows the bus arbitration mechanism. The 21140A bus arbitration is executed as follows:

- 1. The 21140A requests the bus by asserting **req_l**.
- 2. The arbiter, in response, asserts **gnt_l** (**gnt_l** can be deasserted on any clock).
- 3. The 21140A ensures that its **gnt_l** is asserted on the clock edge that it wants to drive **frame_l**. (If **gnt_l** is deasserted, the 21140A does not proceed.)
- 4. The 21140A deasserts **req_l** on the cycle that it asserts **frame_l**.

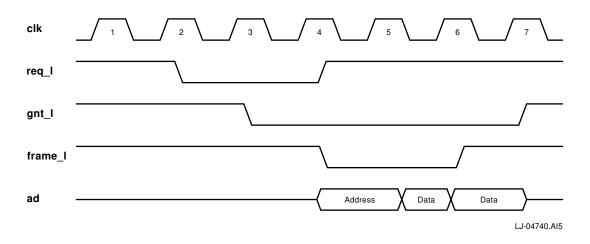


Figure 5–4 Bus Arbitration

The 21140A uses **gnt_l** according to the following rules:

- If **gnt_l** is deasserted together with the assertion of **frame_l**, the 21140A continues its bus transaction.
- If **gnt_l** is asserted while **frame_l** remains deasserted, the arbiter can deassert **gnt_l** at any time. The 21140A does not assert **frame_l** until it is granted again.

5.4.2 Memory Read Cycle

Figure 5–5 shows the memory read cycle. The memory read cycle is executed as follows:

- 1. The 21140A initiates the memory read cycle by asserting **frame_l** signal. It also drives the address on the **ad** lines and the appropriate bus command (read operation) on the **c_be_l** lines.
- 2. The memory controller samples the address and the bus command on the next clock edge.
- 3. The 21140A asserts **irdy_l** until the end of the read transaction.
- 4. During the data transfer cycles, **c_be_l** indicates which byte lines are involved in each cycle. The 21140A drives 0000 on the **c_be_l** lines (longword access).
- 5. The memory controller drives the data on the ad lines and asserts trdy_l.
- 6. The 21140A samples the data on each rising clock edge when both **irdy_l** and **trdy_l** are asserted.
- 7. The previous two steps can be repeated a number of times.
- 8. The cycle is terminated when **frame_l** is deasserted by the 21140A.
- 9. Signal **irdy_l** is deasserted by the 21140A and **trdy_l** is deasserted by the memory controller.

clk	
frame_l	
ad	Address Data-1 Data-2 Data-3 Data-4
c_be_l	Bus Command
trdy_l	
irdy_l	
devsel_	
	LJ-04727.AI5

Figure 5–5 Memory Read Cycle

5.4.3 Memory Write Cycle

Figure 5–6 shows the memory write cycle. The memory write cycle is executed as follows:

- 1. The 21140A initiates the memory write cycle by asserting **frame_l**. It also drives both the address on the **ad** lines and the write operation bus command on the **c_be_l** lines.
- 2. The 21140A asserts **irdy_l** until the end of the transaction and drives the data on the **ad** lines.
- 3. The memory controller samples the address and the bus command on the next clock edge and asserts **devsel_l**.
- 4. During the data transfer cycles, the **c_be_l** lines indicate which byte lanes are involved in each cycle. The 21140A drives 0000 on the **c_be_l** lines (longword access).
- 5. The memory controller samples the data and asserts **trdy_l**. Each data cycle is completed on the rising clock edge when both **irdy_l** and **trdy_l** are asserted.
- 6. The previous two steps can be repeated a number of times.

- 7. The 21140A terminates the cycle by deasserting **frame_l**.
- 8. The 21140A deasserts irdy_l and the memory controller deasserts trdy_l.

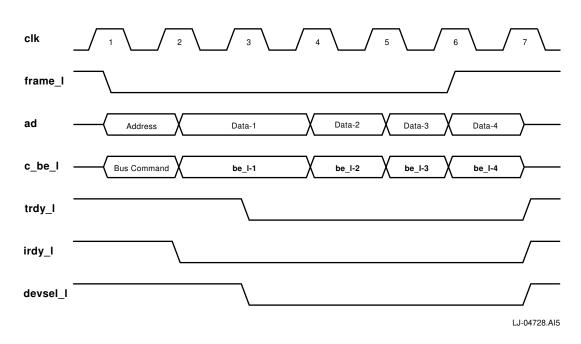


Figure 5–6 Memory Write

5.5 Termination Cycles

Termination cycles can be initiated during either slave or master cycles.

5.5.1 Slave-Initiated Termination

The 21140A initiates termination in slave mode when it is accessed by the host with I/O or memory burst cycles. The 21140A asserts **stop_l** to request the host to terminate the transaction. After **stop_l** is asserted, it remains asserted until **frame_l** is deasserted.

Figure 5-7 shows the retried device (the host) releasing the bus. The host retries the last data transaction after acquiring the bus in a different arbitration.

clk	12	3	4	5	6	7
frame_I						
ad	Address	Data	X	Data		
irdy_l						
trdy_l						
stop_l						
devsel_l						
						LJ-04729.AI5

Figure 5–7 21140A-Initiated Retry Cycle

5.5.2 Master-Initiated Termination

A master-initiated termination can occur when the 21140A operates as a master device on the PCI bus. Terminations can be issued by either the 21140A or the memory controller.

Terminations by the 21140A include the following:

Normal completion Timeout Master abort

Memory-controller terminations (target) include the following:

Target abort Target disconnect Target retry

5.5.2.1 21140A-Initiated Termination

A 21140A-initiated termination occurs when **frame_l** is deasserted and **irdy_l** is asserted. This indicates to the memory controller that the final data phase is in progress. The final data transfer occurs when both **irdy_l** and **trdy_l** assert. The transaction completes when both **frame_l** and **irdy_l** deassert. This is an idle bus condition.

5.5.2.1.1 Normal Completion Figure 5–8 shows a normal completion cycle termination. This indicates that the 21140A successfully completed its intended transaction.

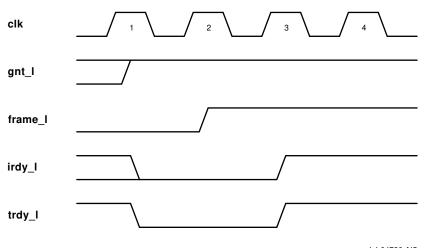



Figure 5–8 Normal Completion

LJ-04730.AI5

5.5.2.1.2 Timeout A timeout cycle termination occurs when the **gnt_l** line has been deasserted by the arbiter and the 21140A internal latency timer has expired. However, the intended transaction has not completed. A maximum of two additional data phases are permitted and then the 21140A performs a normal transaction completion.

5.5.2.1.3 Master Abort If the target does not assert **devsel_l** within five cycles from the assertion of **frame_l**, the 21140A performs a normal completion. It then releases the bus and asserts both master abort (CFCS<29>) and fatal bus error (CSR5<13>). Figure 5–9 shows the 21140A master abort termination.




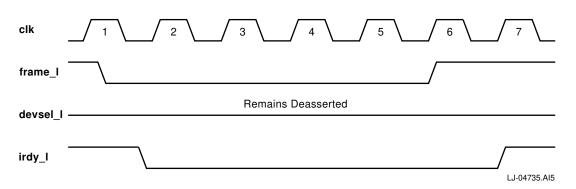

5.5.2.2 Memory-Controller-Initiated Termination

The memory controller or target can initiate certain terminations when the 21140A is the bus master.

5.5.2.2.1 Target Abort The 21140A aborts the bus transaction when the target asserts **stop_l** and deasserts **devsel_l**. This indicates that the target wants the transaction to be aborted. The 21140A releases the bus and asserts both received target abort (CFCS<28>) and fatal bus error (CSR5<15>). Figure 5–10 shows the 21140A target abort.

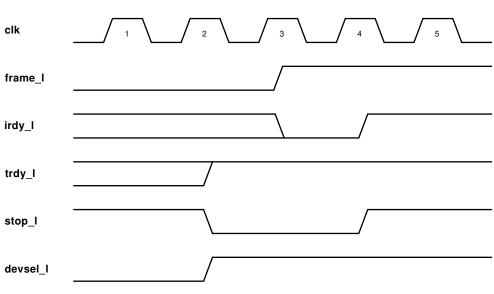

5.5.2.2.2 Target Disconnect Termination The 21140A terminates the bus transaction when the target asserts stop_l, which remains asserted until frame_l is deasserted. The 21140A releases the bus. Then, it retries at least the last data transaction after regaining the bus in another arbitration. Figure 5–11 shows the 21140A target disconnect.

LJ-04731.AI5

Figure 5–10 Target Abort


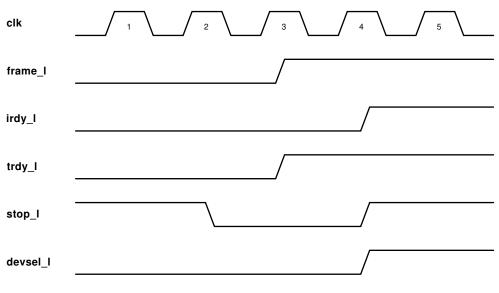


Figure 5–11 Target Disconnect

LJ-04732.AI5

5.5.2.2.3 Target Retry The 21140A retries the bus transaction when the target asserts **stop_l** and deasserts **trdy_l**; **stop_l** remains asserted until **frame_l** is deasserted. The 21140A releases the bus. Then, it retries at least the last two data transactions after regaining the bus in another arbitration. Figure 5–12 shows the 21140A target retry.

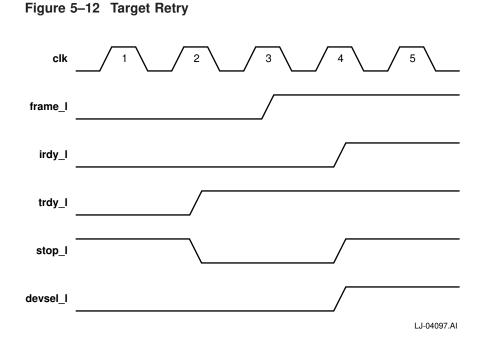

5.6 Parity

The 21140A supports parity generation on all address, data, and command bits. Parity is always checked and generated on the 32-bit address and data bus (**ad**) as well as on the four command (**c_be_l**) lines. The 21140A always transfers stable values (1 or 0) on all the **ad** and **c_be_l** lines. If a data parity error is detected or **perr_l** is asserted when the 21140A is a bus master, the 21140A asserts detected parity error (CFCS<31>) and abnormal interrupt summary (CSR5<15>).

Figure 5–13 shows an example of parity generation on a memory write burst transaction. Note that valid parity is generated one cycle after the address and data segments were generated on the bus. One cycle after the assertion of the address parity, **serr_l** is asserted for one cycle because of an address parity error during slave operation. One cycle after the assertion of the data parity, **perr_l** is asserted because of a parity data error in either slave write or master read operations.

5.6 Parity

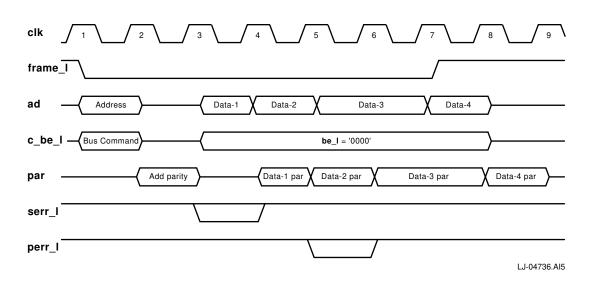


Figure 5–13 Parity Operation

5.7 Parking

Parking in the PCI bus allows the central arbiter to pause any selected agent. The 21140A enters the parking state when the arbiter asserts its **gnt_l** line while the bus is idle.

6

Network Interface Operation

This chapter describes the operation of the MII/SYM port and the serial (also referred to as SRL) port. It also describes media access control (MAC), loopback, and full-duplex operations.

6.1 MII/SYM Port

This section provides a description of the 100BASE-T terminology, the interface, the signals used, and the operating modes.

6.1.1 100BASE-T Terminology

This subsection provides a description of the 100BASE-T terminology used for the MII/SYM port. The following is a list of these terms:

- Media-independent interface (MII) is defined between the media access control (MAC) sublayer and the physical layer protocol (PHY) layer.
- Physical coding sublayer (PCS) is a sublayer within the PHY defined by 100BASE-T. The PCS implements the higher level functions of the PHY.
- 100BASE-T is a generic term that refers to all members in the IEEE 802.3 family of 100Mb/s carrier-sense multiple access with collision detection (CSMA/CD) standards.
- 100BASE-T4 is the standard IEEE 802.3 for 100Mb/s, using unshielded twisted-pair (UTP) category 3 (CAT3) cables. The PHY requires four pairs.
- 100BASE-X refers to all members of the IEEE 802.3 family contained in the 100Mb/s CSMA/CD standard. It implements a specific physical medium attachment (PMA) and PCS. Members of this family include 100BASE-TX and 100BASE-FX.
- 100BASE-TX refers to the IEEE 802.3 PHY layer, which includes the 100BASE-X PCS and PMA together with the physical layer medium dependent (PMD). It uses UTP category 5 (CAT5) cables and STP cables.

6.1 MII/SYM Port

• 100BASE-FX refers to the IEEE 802.3 PHY layer, which includes the 100BASE-X PCS and PMA together with the PMD. It uses multimode fiber.

6.1.2 Interface Description

The MII port is an IEEE 802.3 compliant interface that provides a simple, inexpensive, and easily implemented interconnection between the MAC sublayer and the PHY layer. It also interconnects the PHY layer devices and station management (STA) entities. This interface has the following characteristics:

- Supports both 100Mb/s and 10Mb/s data rates
- Contains data and delimiters that are synchronous to clock references
- Provides independent, 4-bit-wide transmit and receive data paths
- Uses transistor-transistor (TTL) signal levels, compatible with common CMOS application-specific integrated circuit (ASIC) processes
- Provides a simple management interface
- Provides capability to drive a limited length of shielded cable

6.1.2.1 Signal Standards

Table 6–1 provides the standards that reference the MII/SYM port signal names with the appropriate IEEE 802.3 signal names.

MII/SYM Signals	IEEE 802.3 Signals	Purpose
mii_clsn	COL	Collision detect is asserted by the PHY layer when it detects a collision on the medium. It remains asserted while this condition persists.
		For the 10Mb/s implementation, collision is derived from the signal quality error of the PMA. For the 100Mb/s implementation, collision is defined for each PHY layer separately.
mii_crs	CRS	Carrier sense is asserted by the PHY layer when either the transmit or receive medium is active (not idle).
		(continued on next page)

Table 6–1 IEEE 802.3 and MII/SYM Signals

6.1 MII/SYM Port

MII/SYM Signals	IEEE 802.3 Signals	Purpose
mii_dv	RX_DV	Receive data valid is asserted by the PHY layer when the first received preamble nibble is driven over the MII and remains asserted for the remainder of the frame.
mii_err	RX_ERR	Receive error is asserted by the PHY layer to indicate either a coding error or any other type of error that the MAC cannot detect was received. This error was detected on the frame currently being received and transferred over the MII.
mii_mdc	MDC	Management data clock is the clock reference for the mii_mdio signal.
mii_mdio	MDIO	Management data input/output is used to transfer control signals between the PHY layer and STA entity. The 21140A is capable of initiating the transfer of control signals to and from the PHY device by using this line.
mii/sym_rclk	RX_CLK	Receive clock synchronizes all receive signals.
mii/sym_rxd<3:0>	RXD<3:0>	These lines provide receive data.
mii/sym_tclk	TX_CLK	Transmit clock synchronizes all transmit signals.
mii/sym_txd<3:0>	TXD<3:0>	These lines provide transmit data.
mii_txen	TX_EN	Transmit enable is asserted by the MAC sublayer when the first transmit preamble nibble is driven over the MII and remains asserted for the remainder of the frame.
	No	te

Table 6–1 (Cont.) IEEE 802.3 and MII/SYM Signals

The remaining three signals are activated when the MII/SYM port uses either the 100BASE-TX or 100BASE-FX applications.

6.1 MII/SYM Port

MII/SYM Signals	IEEE 802.3 Signals	Purpose
mii_sd	_	Signal detect indication is supplied by an external PMD device.
sym_rxd<4>	—	This line is used for receive data.
sym_txd<4>	_	This line is used for transmit data.

Table 6–1 (Cont.) IEEE 802.3 and MII/SYM Signals

6.1.2.2 Operating Modes

The 21140A implements the MII/SYM port signals (Table 6–1) to support the following operating modes:

- **100Mb/s mode**—The 21140A implements the MII with a data rate of 100Mb/s and both the receive clock **mii/sym_rclk** and the transmit clock **mii/sym_tclk** operate at 25 MHz. In this mode, the 21140A can be used with any device that implements the 100BASE-T PHY layer (for example, 100BASE-TX, 100BASE-FX, or 100BASE-T4).
- **10Mb/s mode**—The 21140A implements the MII with a data rate of 10Mb/s and both the receive clock **mii/sym_rclk** and the transmit clock **mii/sym_tclk** operate at 2.5 MHz. In this mode, the 21140A can be used with any device that implements the 10Mb/s PHY layer and an MII.
- **100BASE-TX mode**—The 21140A implements certain functions of the PCS for STP PMD and UTP CAT5 PMD. The receive symbols are 5 bits wide and are transferred over the **mii/sym_rxd<3:0>** and **sym_rxd<4>** lines. The transmit symbols are also 5 bits wide and are transferred over the **mii/sym_txd<3:0>** and **sym_txd<4>** lines. These functions include the following:
 - 4-bit and 5-bit decoding and encoding
 - Start-of-stream delimiter (SSD) and end-of-stream delimiter (ESD) detection and generation
 - Bit alignment
 - Carrier detect
 - Collision detect
 - Symbol error detection
 - Scrambling and descrambling
 - Link timer

6.1 MII/SYM Port

This mode enables a direct interface with existing fiber distributed data interface (FDDI) TP-PMD devices that implement the physical functions.

- 100BASE-FX mode—The 21140A implements certain functions of the PCS sublayer for multimode fiber. The receive symbols are 5 bits wide and are transferred over the mii/sym_rxd<3:0> and sym_rxd<4> lines. The transmit symbols are also 5 bits wide and are transferred over the mii/sym_txd<3:0> and sym_txd<4> lines. These functions include the following:
 - 4-bit and 5-bit decoding and encoding
 - SSD and ESD detection and generation
 - Bit alignment
 - Carrier detect
 - Collision detect
 - Symbol error detection
 - Link timer

This mode enables a direct interface with existing FDDI TP-PMD devices that implement the physical functions.

Note ____

The SSD detection logic compares the incoming data to JK and not to IJK (this complies with IEEE 802.3, draft number 2).

6.2 Serial Port

The serial port consists of seven signals that provide a conventional interface to the existing 10Mb/s Ethernet ENDEC components.

6.3 Media Access Control Operation

The 21140A supports a full implementation of the MAC sublayer of IEEE 802.3. It can operate in half-duplex mode, full-duplex mode, and loopback mode.

Transmission

In half-duplex mode, the 21140A checks the line condition before starting to transmit. If the condition is clear to transmit (for example, the line is idle for an IPG time duration and the PMA link status is okay), the 21140A starts transmitting. Transmit enable (**mii/sym_txen**) asserts and data is being transferred. Depending on the operating mode selected, the data is transferred either through the MII/SYM port or the serial port interface.

During transmission, the 21140A monitors the line condition. If a collision is detected, the 21140A continues to transmit for a predetermined time as specified in IEEE 802.3 (for example, jam), and then it stops the transmission. The 21140A then implements the truncated binary backoff algorithm as defined in IEEE 802.3.

Depending on the operating mode, a collision is defined as follows:

- In serial mode, the signal **srl_clsn** asserts.
- In MII mode, the signal **mii/sym_clsn** asserts.
- In either 100BASE-TX or 100BASE-FX modes, the receive input is active while the 21140A transmits.

If the 21140A fails to transmit a frame due to collisions after 16 attempts, the 21140A reports an excessive collision and stops transmitting the frame.

In full-duplex mode, the 21140A starts transmitting a frame provided that IPG duration time has elapsed since its previous transmission. There is no collision in full-duplex mode, so the transmission is guaranteed to end successfully.

Reception

In both half-duplex and full-duplex modes, the 21140A monitors the line for a new frame transmission. When a frame is detected, the 21140A starts to assemble the frame. Depending on the 21140A operating mode, a new frame transmission is defined as follows:

- In serial mode, receive enable (**srl_rxen**) asserts.
- In MII mode, both data valid (mii_dv) and carrier sense (mii_crs) assert.
- In either 100BASE-TX or 100BASE-FX modes, the receive input becomes active.

While the frame is being assembled, the 21140A continues to monitor the line condition. The reception ends with an error if the frame is not a valid Ethernet or IEEE 802.3 MAC frame (Section 6.3.1), or if one of the following conditions occur:

- The 21140A is operating in an MII mode and receive error (**mii_err**) asserts during a frame reception.
- The 21140A is operating in either 100BASE-TX or 100BASE-FX mode and one of the following conditions occur:
 - An invalid symbol is detected.
 - The frame does not start with the symbol J followed by the symbol K.
 - The frame does not end with the symbol T followed by the symbol R.
 - Between the JK and TR symbols, the frame contains any symbol that does not belong to the data code groups defined in IEEE 802.3, clause 24.

6.3.1 MAC Frame Format

The 21140A handles both IEEE 802.3 and Ethernet MAC frames. While operating in either the 100BASE-FX mode or 100BASE-TX mode, the 21140A encapsulates the frames it transmits according to the IEEE 802.3, clause 24. Receive frames are encapsulated according to the IEEE 802.3, clause 24.

The changes between a MAC frame (Section 6.3.1.1) and the encapsulation used when operating either in 100BASE-TX or 100BASE-FX mode are listed as follows:

- 1. The first byte of the preamble in the MAC frame is replaced with the JK symbol pair.
- 2. After the frame check sequence (FCS) byte of the MAC frame, the TR symbol pair is inserted.

6.3.1.1 Ethernet and IEEE 802.3 Frames

Ethernet is the generic name for the network type. An Ethernet frame has a minimum length of 64 bytes and a maximum length of 1518 bytes, exclusive of the preamble.


An Ethernet frame format consists of the following:

Preamble Start frame delimiter (SFD) Two address fields Type or length field Data field Frame check sequence (CRC value)

6.3.1.2 Ethernet Frame Format Description

Figure 6–1 shows the Ethernet frame format and Table 6–2 describes the byte fields.

Figure 6–1 Ethernet Frame Format



Numbers in parentheses indicate field length in bytes.

LJ-04098.AI

Field	Description
Preamble	A 7-byte field of 56 alternating 1s and 0s, beginning with a 0.
SFD — Start frame delimiter	A 1-byte field that contains the value 10101011; the most significant bit is transmitted and received first.
Destination address	A 6-byte field that contains either a specific station address, the broadcast address, or a multicast (logical) address where this frame is directed.
Source address	A 6-byte field that contains the specific station address where this frame originated.
Type/length	A 2-byte field that indicates whether the frame is in IEEE 802.3 format or Ethernet format (Table 6–3).
	A field greater than 1500 is interpreted as a type field, which defines the type of protocol of the frame.
	A field smaller than or equal to 1500 (05-DC) is interpreted as a length field, which indicates the number of data bytes in the frame.
Data	A data field consists of 46 to 1500 bytes of information that is fully transparent because any arbitrary sequence of bits can occur.
	A data field shorter than 46 bytes, which is specified by the length field, is allowed. Unless padding is disabled (TDES1<23>), it is added by the 21140A when transmitting to fill the data field up to 46 bytes.
CRC	A frame check sequence is a 32-bit cyclic redundancy check (CRC) value that is computed as a function of the destination address field, source address field, type field, and data field. The FCS is appended to each transmitted frame, and is used at reception to determine if the received frame is valid.

Table 6–2 Ethernet Frame Format

Table 6–3 lists the possible values for the frame format. The values are expressed in hexadecimal notation and the 2-byte field is displayed with a hyphen separating the 2 bytes. The byte on the left of the hyphen is the most significant byte and is transmitted first.

Frame Format	Length or Type	Hexadecimal Value
IEEE 802.3	Length field	00-00 to 05-DC
Ethernet	Type field	05-DD to FF-FF

The CRC polynomial, as specified in the Ethernet specification, is as follows:

$$FCS(X) = X^{31} + X^{26} + X^{23} + X^{22} + X^{16} + X^{12} + X^{11} + X^{10} + X^8 + X^7 + X^5 + X^4 + X^2 + X^1 + 1$$

The 32 bits of the CRC value are placed in the FCS field so that the X^{31} term is the right-most bit of the first octet, and the X^0 term is the left-most bit of the last octet. The bits of the CRC are thus transmitted in the order $X^{31},\,X^{30},\,\ldots,\,X^1,\,X^0.$

6.3.2 Ethernet Reception Addressing

The 21140A can be set up to recognize any one of the Ethernet receive address groups described in Table 6–4. Each group is separate and distinct from the other groups.

Table 6–4	Ethernet	Receive	Address	Groups
-----------	----------	---------	---------	--------

Group	Description
1	16-address perfect filtering
	The 21140A provides support for the perfect filtering of up to 16 Ethernet physical or multicast addresses. Any mix of addresses can be used for this perfect filter function of the 21140A. The 16 addresses are issued in setup frames to the 21140A.
2	One physical address, unlimited multicast addresses imperfect filtering
	The 21140A provides support for one, single physical address to be perfectly filtered with an unlimited number of multicast addresses to be imperfectly filtered. This case supports the needs of applications that require one, single physical address to be filtered as the station address, while enabling reception of more than 16 multicast addresses, without suffering the overhead of pass-all-multicast mode. The single physical address, for perfect filtering, and a 512-bit mask, for imperfect filtering using a hash algorithm, are issued in a setup frame to the 21140A. When hash hits are detected, the 21140A delivers the received frame (Section 4.2.3).
	(continued on next page

 Table 6–4 (Cont.)
 Ethernet Receive Address Groups

Group	Description
3	Unlimited physical addresses, unlimited multicast addresses imperfect filtering
	The 21140A provides support for unlimited physical addresses to be imperfectly filtered with an unlimited number of multicast addresses to be imperfectly filtered as well. This case supports applications that require more than one physical address to be filtered as the station address, while enabling the reception of more than 16 multicast addresses, without suffering the overhead of pass-all-multicast mode. A 512-bit mask, for imperfect filtering using a hash algorithm, is issued in a setup frame to the 21140A. When hash hits are detected, the 21140A delivers the received frame (Section 4.2.3).
4	Promiscuous Ethernet reception
	The 21140A provides support for reception of all frames on the network regardless of their destination. This function is controlled by a CSR bit. This group is typically used for network monitoring.
5	16-address perfect filtering and reception of all multicast Ethernet addresses
	This group augments the receive address Group 1 and also receives all frames on the Ethernet with a multicast address.
6	16-address inverse filtering
	In this mode, the 21140A applies the reverse filter of Group 1. The 21140A provides support for the rejection of up to 16 Ethernet physical or multicast addresses. Any mix of addresses may be used for this filter function of the 21140A. The 16 addresses are issued in setup frames to the 21140A.

6.3.3 Detailed Transmit Operation

This section describes the transmit operation in detail, as supported by the 21140A. This description includes the specific control register definitions, setup frame definitions, and a mechanism used by the host processor software to manipulate the transmit list (that is, the descriptors and buffers that can be found in Section 4.2).

6.3.3.1 Transmit Initiation

The host CPU initiates a transmit by storing the entire information content of the frame to be transmitted in one or more buffers in memory. The host processor software prepares a companion transmit descriptor, also in host memory, for the transmit buffer and signals the 21140A to take it. After the 21140A has been notified of this transmit list, the 21140A starts to move the data bytes from the host memory to the internal transmit FIFO.

When the transmit FIFO is adequately filled to the programmed threshold level, or when there is a full frame buffered into the transmit FIFO, the 21140A begins to encapsulate the frame.

The threshold level can be programmed with various quantities (Table 3–41). The lower threshold is for low bus latency systems and the high threshold is for high bus latency systems.

The transmit encapsulation is performed by the transmit state machine, which delays the actual transmission of the data onto the network until the network has been idle for a minimum interpacket gap (IPG) time.

6.3.3.2 Frame Encapsulation

The transmit data frame encapsulation stream consists of appending the 56 preamble bits together with the SFD to the basic frame beginning and the FCS (for example, CRC), to the basic frame end.

The basic frame read from the host memory includes the destination address field, the source address field, the type/length field, and the data field. If the data field length is less than 46 bytes, and padding (TDES1<23>) is enabled, the 21140A pads the basic frame with the pattern 00 for up to 46 bytes before appending the FCS field to the end.

While operating either in 100BASE-FX mode or 100BASE-TX mode, the 21140A encapsulates the frames it transmits according to IEEE 802.3, clause 24 and the receive frame is encapsulated as defined in IEEE 802.3, clause 24.

The changes between a MAC frame (Section 6.3.1) and the encapsulation used when operating either in 100BASE-TX or 100BASE-FX modes are listed as follows:

- 1. The first byte of the preamble in the MAC frame is replaced with the JK symbol pair.
- 2. After the FCS byte of the MAC frame, the TR symbol pair is inserted.

6.3.3.3 Initial Deferral

The 21140A constantly monitors the line and can initiate a transmission any time the host CPU requests it. Actual transmission of the data onto the network occurs only if the network has been idle for a 96-bit time period, and any backoff time requirements have been satisfied.

The IPG time is divided into two parts: IPS1 and IPS2.

- 1. IPS1 time (56- to 60-bit time): the 21140A monitors the network for an idle state. If a carrier is sensed on the serial line during this time, the 21140A defers and waits until the line is idle again before restarting the IPS1 time count.
- 2. IPS2 time (36- to 40-bit time): the 21140A continues to count time even though a carrier has been sensed on the network, and thus forces collisions on the network. This enables all network stations to have access to the serial line.

6.3.3.4 Collision

A collision occurs when concurrent transmissions from two or more Ethernet nodes take place. Depending on the mode of operation, the 21140A detects a collision event in one of the following ways:

- In serial mode, when **srl_clsn** asserts.
- In MII mode, when **mii/sym_clsn** asserts.
- In either 100BASE-TX or 100BASE-FX mode, when the receive input is active while the 21140A transmits.

When the 21140A detects a collision while transmitting, it halts the transmission of the data, and instead, transmits a jam pattern consisting of hexadecimal AAAAAAAA. At the end of the jam transmission, the 21140A begins the backoff wait period.

If the collision was detected during the preamble transmission, the jam pattern is transmitted after completing the preamble (if the 21140A is in 100BASE-FX or 100BASE-TX operating modes, this includes the JK symbol pair). This results in a minimum 96-bit fragment.

The 21140A scheduling of retransmission is determined by a controlled randomization process called truncated binary exponential backoff. The delay is an integer multiple of slot times. The number of slot times of delay before the nth retransmission attempt is chosen as a uniformly distributed random integer r in the range:

 $0 \le r < 2^k$ k = min (n, N) and N = 10

When 16 attempts have been made at transmission and all have been terminated by a collision, the 21140A sets an error status bit in the descriptor (TDES0<8>) and, if enabled, issues a normal transmit termination (CSR5<0>) interrupt to the host.

_____ Note _____

The jam pattern is a fixed pattern that is not compared with the actual frame CRC. This has the very low probability (0.5^{32}) of having a jam pattern equal to the CRC.

6.3.3.5 Terminating Transmission

A specific frame transmission is terminated by any of the following conditions:

- Normal—The frame has been transmitted successfully. When the last byte is serialized, the pad and CRC are optionally appended and transmitted, thus concluding frame transmission.
- Underflow—Transmit data is not ready when needed for transmission. The underflow status bits (TDES0<1> and CSR5<5>) are set, and the packet is terminated on the network with a bad CRC.
- Excessive collisions—If a collision occurs for the 15th consecutive retransmission attempt of the same frame, TDES0<8> is set.
- Jabber timer expired—If the timer expires (TDES0<14> sets) while transmission continues, the programmed interval transmission is cut off.
- Memory error—This generic error indicates either a host bus timeout or a host memory error.
- Late collision—If a collision occurs after the collision window (transmitting at least 64 bytes), transmission is cut off and TDES0<9> sets.

At the completion of every frame transmission, status information about the frame is written into the transmit descriptor. Status information is written into CSR5 if an error occurs during the operation of the transmit machine itself. If a normal interrupt summary (CSR7<16>) is enabled, the 21140A issues a normal transmit termination interrupt (CSR5<0>) to the host.

6.3.3.6 Transmit Parameter Values

Table 6–5 lists the transmit parameter values for both the 10Mb/s and 100Mb/s serial bit rates.

Parameter	Condition	Value
Defer time	IPS1+IPS2=96-bit time period	_
IPS1	_	60-bit time period
IPS2	_	36-bit time period
Slot time interval	_	512-bit time period
Network acquisition time	_	512-bit time period
Transmission attempts	_	16
Backoff limit	_	10
Jabber timer	Default	16000- to 20000-bit time period
Jabber timer	Programmable range	26000- to 32000-bit time period

Table 6–5 Transmit Parameter Values

6.3.4 Detailed Receive Operation

This section describes the detailed receive operation as supported by the 21140A. This description includes the specific control register definitions, setup frame definitions, and a mechanism used by the host processor software to manipulate the receive list (that is, the descriptors and buffers that can be found in Section 4.2).

6.3.4.1 Receive Initiation

The 21140A continuously monitors the network when reception is enabled. When activity is recognized, it starts to process the incoming data. Depending on the mode of operation, the 21140A detects activity in one of the following ways:

• In serial mode, when **srl_rxen** asserts.

- In MII mode, when both **mii_dv** and **mii_crs** assert.
- In either 100BASE-TX or 100BASE-FX mode, when the receive input is active.

After detecting receive activity on the line, the 21140A starts to process the preamble bytes based on the mode of operation.

6.3.4.2 Preamble Processing

Preamble processing varies depending on the 21140A operating mode. The next two subsections describe how this processing is handled.

6.3.4.2.1 MII or Serial Mode Preambles In either MII or serial mode, the preamble, as defined by Ethernet, can be up to 64 bits (8 bytes) long.

The 21140A allows any arbitrary preamble length. However, depending on the mode, there is a minimum preamble length.

- In MII/SYM mode, at least 8 bits are required to recognize a preamble.
- In SRL mode, at least 16 bits are required to recognize a preamble.


Recognition occurs as follows:

- In MII/SYM mode, the 21140A checks for the start frame delimiter (SFD) byte content of 10101011.
- In SRL mode:
 - 1. The first 8 preamble bits are ignored.
 - 2. The 21140A checks for the start frame delimiter (SFD) byte content of 10101011.

While checking for SFD, if the 21140A receives a 11 (before receiving 14 bytes in SRL mode or 6 bytes in MII mode) or a 00 (everywhere), the reception of the current frame is aborted. The frame is not received, and the 21140A waits until the network activity stops (Section 6.3.4.1) before monitoring the network activity for a new preamble.

Figure 6–2 shows the preamble recognition sequence bit fields.

Figure 6–2 Preamble Recognition Sequence in SRL Mode



6.3.4.2.2 100BASE-TX or 100BASE-FX Mode Preambles When operating in either 100BASE-TX or 100BASE-FX mode, the 21140A expects the frame to start with the symbol pair JK followed by the preamble, as specified in Section 6.3.4.2.1. If a JK symbol pair is not detected, the reception of the current frame is aborted (not received), and the 21140A waits until the network activity stops before monitoring the network activity for a new preamble.

6.3.4.3 Address Matching

Ethernet addresses consist of two 6-byte fields: one field for the destination address and one for the source address. The first bit of the destination address signifies whether it is a physical address or a multicast address (Table 6–6).

Bit 1	Address
0	Station address (physical)
1	Multicast address

Table 6–6 Destination Address Bit 1

The 21140A filters the frame based on the Ethernet receive address group (Section 6.3.2) filtering mode that has been enabled.

If the frame address passes the filter, the 21140A removes the preamble and delivers the frame to the host processor memory. If, however, the address does not pass the filter when the mismatch is recognized, the 21140A terminates its reception. In this case, no data is sent to the host memory nor is any receive buffer consumed.

6.3.4.4 Frame Decapsulation

The 21140A checks the CRC bytes of all received frames before releasing them to the host processor. When operating in either 100BASE-TX or 100BASE-FX mode, the 21140A also checks that the frame ends with the TR symbol pair: if not, the 21140A reports an FCS error in the packet reception status.

6.3.4.5 Terminating Reception

Reception of a specific frame is terminated when any of the following conditions occur:

- Normal termination—The network activity (Section 6.3.4.1) stops for the various operating modes.
- Overflow—The receive DMA cannot empty the receive FIFO into host processor memory as rapidly as it is filled, and an error occurs as frame data is lost. The overflow status bit (RDES0<0>) is set.
- Watchdog timer expired—If the timer expires (CSR5<9> and RDES0<4> both set) while reception is still in process, and reception is cut off.
- Collision—If a late collision occurs after the reception of 64 bytes of the packet, the collision seen status bit RDES0<6> is set.

6.3.4.6 Frame Reception Status

When reception terminates, the 21140A determines the status of the received frame and loads it into the receive status word in the buffer descriptor. An interrupt is issued if enabled. The 21140A may report the following conditions at the end of frame reception:

- Overflow—The 21140A receive FIFO overflowed.
- CRC error—The 32-bit CRC transmitted with the frame did not match the CRC calculated upon reception. The CRC check is always executed and is independent of any other errors. In addition, the 21140A reports a CRC error in any of the following cases:
 - The mii_err signal asserts during frame reception over the MII when operating in one of the MII operating modes.
 - The 21140A is operating in either the 100BASE-TX or 100BASE-FX mode and one of the following occur:
 - * An invalid symbol is received in the middle of the frame.
 - * The frame does not end with the symbol T followed by the symbol R.
 - * Between the JK and TR symbol pairs, the frame contains any symbol that does not belong to the data code groups defined in IEEE 802.3 clause 24.

- Dribbling bits error—This indicates the frame did not end on a byte boundary. The 21140A signals a dribbling bits error only if the number of dribbling bits in the last byte is 4 in MII/SYM operating mode, or at least 3 in 10Mb/s serial operating mode. Only *whole bytes* are run through the CRC check. This means that although up to 7 dribbling bits may have occurred and a framing error was signaled, the frame might nevertheless have been received correctly.
- Alignment error—A CRC error and a dribbling bit error occur together. This means that the frame did not contain an integral number of bytes and the CRC check failed.
- Frame too short (runt frame)—A frame containing less than 64 bytes was received (including CRC). Reception of runt frames is optionally selectable. The 21140A defaults to inhibit reception of runts.
- Frame too long—A frame containing more than 1500 bytes was received. Reception of frames too long completes with an error indication.
- Collision seen—A frame collision occurred after the 64 bytes following the start frame delimiter (SFD) were received. Reception of such frames is completed and an error bit is set in the descriptor.
- Descriptor error—An error was found in one of the receive descriptors, which disabled the correct reception of an incoming frame.

6.4 Loopback Operations

The 21140A supports two loopback modes: internal loopback and external loopback. The default value of the loopback data rate is 10Mb/s. When the MII/SYM port is enabled, the loopback data rate is 10/100Mb/s.

6.4.1 Internal Loopback Mode

Internal loopback mode is normally used to verify that the internal logic operations function correctly. Internal loopback mode is enabled according to CSR6<11:10>. Internal loopback mode includes all the internal functions. In loopback mode, the 21140A disengages from the Ethernet wire.

6.4.2 External Loopback Mode

External loopback mode is normally used to verify that the logic operations up to the Ethernet wire function correctly. External loopback mode is enabled according to CSR6<11:10>.

6.5 Full-Duplex Operation

6.5 Full-Duplex Operation

The 21140A activates the transmit and receive processes simultaneously. It also supports receive back-to-back packets with an interpacket gap (IPG) of 96-bit times in parallel with transmit back-to-back packets with an IPG of 96-bit times.

The 21140A implements a programmable full-duplex operating mode (CSR6<9>) bit that commands the MAC to ignore both the carrier and the collision detect signal.

The driver must take the following actions to enter full-duplex operation.

- 1. Stop the receive and transmit processes by writing 0 to CSR6<1> and CSR6<13> fields, respectively. The driver must wait for any previously scheduled frame activity to cease by polling the transmit process state (<22:20>) and receive process state (<19:17>) fields in CSR5.
- 2. Prepare appropriate transmit and receive descriptor lists in host memory. These lists can use the existing lists at the point of suspension, or can create new lists that must be identified to the 21140A by referencing the receive list base address in CSR3 and the transmit list base address in CSR4.
- 3. Set full-duplex mode (CSR6<9>).
- 4. Place the transmit and receive processes in the running state by using the start commands.
- 5. Resume normal processing. Execute any 21140A interrupts.

6.6 Capture Effect–A Value-Added Feature

As a value-added feature, the 21140A provides a complete solution to an unsolved Ethernet and IEEE 802.3 problem referred to as capture effect. This solution is not part of the IEEE 802.3 standard. A device implementing this feature deviates from the IEEE 802.3 standard backoff algorithm. Therefore, this feature is optional and can be enabled or disabled using the CSR6<17> control bit.

6.6 Capture Effect–A Value-Added Feature

6.6.1 What Is Capture Effect?

Consider two stations on the line, station A and station B. Each station has a significant amount of data ready to transmit. Each station is able to satisfy the minimum IPG rules (both from transmit-to-transmit and from receive-to-transmit operations). The following steps show how station A captures the line (Table 6–7):

- 1. Station A (with data A1) and station B (with data B1) both attempt to transmit simultaneously within a slot time of 51.2 μ s. Each station has an initial collision count set to 0.
- 2. The stations experience a collision. Both stations increment their collision count to 1.
- 3. Each station picks a backoff time value that is uniformly distributed from 0 to (2n)-1 slots. In this example, station B selects a backoff of 1 (a 50% probability), and station A selects a backoff of 0.
- 4. Station A successfully transmits its A1 data packet. Station B waits for data A1 to be transmitted before attempting to retransmit data B1.
- 5. Collision count at station B remains at 1, while collision count at station A is reset to 0.
- 6. If station A has another packet (data A2) ready to transmit while station B still wants to transmit its packet (data B1), the stations both contend for the line again.
- 7. If these stations collide, the backoff value available for station A is 0 or 1 slots. The backoff value available for station B is 0, 1, 2, or 3 slots because the collision count is now at 2 (station A's collision count is at 1). Station A is more likely to succeed and transmit data A2, while data B1 from station B begins the deferral of completing its backoff interval.
- 8. It is possible, with this type of behavior between stations, that in the 2-node Ethernet, a station can capture the channel for an unfair amount of time. One station can transmit a significant number of packets back to back, while the other station continues to backoff further and further.
- 9. This process could continue until station B reaches the maximum number of collisions, 16, while attempting to transmit data B1. At this time, station B would access the line and transmit data B1.

6.6 Capture Effect–A Value-Added Feature

_ Note ___

If station A completes the transmitting of a stream of packets during this type of capture, and station B is still in backoff, potentially for a long time, the line is idle for this period of time.

Table 6–7 Capture-Effect Sequence

			Collis	sion Count
Station A	Line	Station B	Α	В
Transmit packet A1	Collision	Transmit packet B1	0	0
Backoff 0, 1		Backoff 0, 1	1	1
Transmit packet A1	Packet A1	Backoff	0	1
Transmit packet A2	Collision	Transmit packet B1	0	1
Backoff 0, 1		Backoff 0, 1, 2, 3	1	2
Transmit packet A2	Packet A2	Backoff	0	2
Transmit packet A3	Collision	Transmit packet B1	0	2
Backoff 0, 1		Backoff 0, 1, 2, 7	1	3

6.6.2 Resolving Capture Effect

The 21140A generally resolves the capture effect by having the station use, after a successful transmission of a frame by a station, a 2–0 backoff algorithm on the next transmit frame. If the station senses a frame on the network before it attempts to transmit the next frame, regardless of whether the sensed frame destination address matches the station's source address, the station returns to use the standard truncated binary exponential backoff algorithm (Section 6.3.3.4).

When the station executes the 2–0 backoff algorithm, it always waits for a 2-slot period on the first collision, and for a 0-slot period on the second collision. For retransmission attempts greater than 2, it uses the standard truncated, binary exponential backoff algorithm.

6.6 Capture Effect–A Value-Added Feature

Table 6–8 summarizes the 2–0 backoff algorithm.

Retransmission Attempts	Backoff Period (Number of Slot Times)
n = 1	Backoff = 2 slots
n = 2	Backoff = 0 slots
n = 3 to 15	Backoff = $0 \le r < 2^k$
	k = min (n, N) and N = 10 r = uniformly distributed random integer

Table 6–8 2–0 Backoff Algorithm

6.6.3 Enhanced Resolution for Capture Effect

The 21140A offers an enhanced resolution for capture effect. The enhancement is made by incorporating a stopped backoff algorithm (with the 2-0 backoff algorithm) to reduce collision while maintaining the key properties of the 2-0 backoff algorithm.

When the enhanced resolution for the capture effect bit is set (CSR6<31>), the 21140A activates the stopped backoff algorithm as follows: in a back-to-back transmit, while in backoff after the first collision (n=1, where n is the retransmission attempts), the 21140A stops its backoff timer for the duration when the channel is busy. It continues its backoff timer when the channel is idle. For any other collision cases, the backoff timer is not stopped.

6.7 Power-Saving Modes

The 21140A incorporates two different power-saving modes: sleep mode and snooze mode. The following subsections describe these power-saving modes.

6.7.1 Sleep Power-Saving Mode

Sleep mode can be activated when the 21140A is not being used (for example, not connected to the network) and it is important to reduce its power dissipation. While in sleep mode, most of the circuitries are disabled. This includes the DMA machine, FIFOs, RxM, TxM, and the general-purpose timer. The PCI section is not affected and access to the 21140A configuration registers remains possible. Access to the 21140A CSRs is not allowed.

6.7 Power-Saving Modes

To enter sleep mode, the driver must take the following actions:

- 1. Stop the receive and transmit processes by writing 0 to the CSR6<1> and CSR6<13> fields, respectively. The driver must wait for any previously scheduled frame activity to cease. This is done by polling the transmit process state (CSR5<22:20>) and the receive process state (CSR5<19:17>).
- 2. Set the CFDD<31> bit.

To exit sleep mode, the driver must take the following actions:

- 1. Clear CFDD<31>.
- 2. Wait 10 ms.
- 3. Start the receive and transmit processes by writing 1 to the CSR6<1> and CSR6<13> fields respectively.

6.7.2 Snooze Power-Saving Mode

Snooze mode is a dynamic power-saving mode. When the snooze mode bit (CFDD<30>) is set, the 21140A reduces its power dissipation unless one or more of the following conditions is true:

- PCI slave or master access is conducted
- Transmit process is in the running state
- Receive process is in the running state but not waiting for a packet
- Receive FIFO is not empty
- MAC receive engine is not idle
- Carrier is sensed
- Link pass or link fail interrupt occurred

When none of these conditions is true, the 21140A disables all its internal circuitries except for the PCI interface (not including the Manchester decoder that uses the 100-MHz phases). The 21140A automatically and immediately reenables all its circuitries when at least one of the following occurs:

- PCI slave access is conducted
- Carrier is sensed
- Link pass or link fail interrupt occurred

This results in the 21140A dynamically getting into and out of low-power mode, and overall power dissipation is reduced.

6.7 Power-Saving Modes

To activate snooze mode, the driver should set CFDD<30>, which is the snooze mode bit. To stop snooze mode, the driver should clear CFDD<30>.

Note _

Snooze mode should not be used with boot ROM or serial ROM accesses. Also, snooze mode affects the general-purpose timer and the automatic poll demand functions and should not be used in this mode.

6.8 Jabber and Watchdog Timers

The jabber timer monitors the time of each packet transmission. The watchdog timer monitors the time of each packet reception. If a single packet transmission or reception exceeds a programmable value (Section 3.2.2.13), the jabber and watchdog circuitry automatically disables both the transmit and receive path. The transmit jabber timer provides the jabber function by cutting off transmission and asserting the collision signal to the MAC.

The packet descriptor closes with both transmit jabber timeout (TDES0<14>) and late collision (TDES0<9>) setting if the jabber timer expires on a transmit packet.

7 External Ports

This chapter describes the interface and operation of the boot ROM, the MicroWire serial ROM, the general purpose port, and the network activity LEDs. This chapter also describes how to connect an external register to the boot ROM port.

7.1 Overview

The 21140A provides a boot ROM interface that may be optionally used on the adapter. The boot ROM (expansion ROM) contains a code that can be executed for device-specific initialization and, possibly, a system boot function. During machine boot, the BIOS looks for bootable devices by searching a specific signature (55AA). Once found, the BIOS copies the code from the boot ROM to a shadow RAM in the host memory and executes the code from the RAM.

The boot ROM interface supports:

- 5-V or 12-V flash memory for code upgrade
- 120-ns EEPROM or faster
- Up to 256KB address space


The 21140A provides a software-controlled, serial port interface suitable for MicroWire and other common serial ROM devices. The serial ROM contains the IEEE address and, optionally, other system parameters.

7.2 Boot ROM and Serial ROM Connection

Figure 7–1 shows the connection of a 256KB boot ROM and the serial ROM. The two 9-bit edge trigger latches are used to latch the boot ROM addresses <17:2> and the **oe_l** and **we_l** control signals.



Figure 7–1 Boot ROM, Serial ROM, and External Register Connection

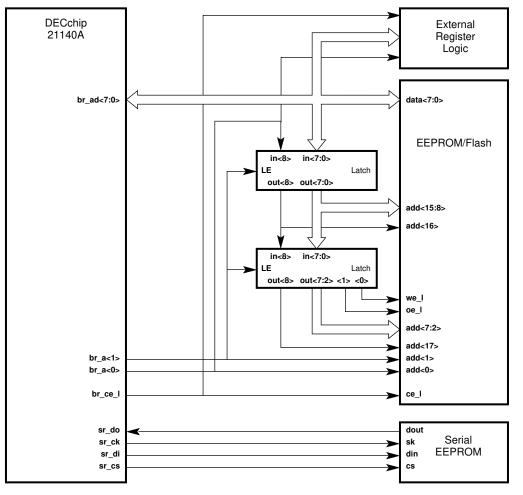

LJ03979B.AI5

7.3 Boot ROM Operations

Access to the boot ROM is done in two ways:

- Byte access (read/write) using CSR9 and CSR10.
- Dword (32-bit) read access from the PCI expansion ROM address space.

The following sections describe these accesses. For each, the boot ROM must be set to the desired mode (read or write) prior to the actual access for the read or write transaction. For additional information about how this is done, refer to the specific ROM device documentation.

Any mixture between byte access and Dword access is allowed, providing that byte access followed by Dword access will be separated by at least 15 PCI clock cycles.


7.3.1 Byte Read

Figure 7–2 shows the 21140A byte read cycle. It is executed as follows:

- 1. The host initiates a byte read cycle to the boot ROM by writing the boot ROM offset to CSR10 and by setting a read command in CSR9 (CSR9<14>) and CSR9<12> = 1.
- The 21140A drives the boot ROM address bits <7:2> and the signals oe_l and we_l on the br_ad lines, drives address bit 17 on the br_a<0> line, and sets br_a<1>. Signal br_a<1> is used as a latch_enable to latch the address, oe_l, and we_l in the upper edge trigger latch.
- 3. The 21140A clears **br_a<1>**.
- 4. The 21140A drives the boot ROM address bits <15:8> on the br_ad lines, drives address bit 16 on the br_a<0> line, and sets br_a<1>. Address bits <16:8> are latched in the upper edge trigger latch while the previous address bits (17, <7:2>) and the control signals (oe_l and we_l) are latched in the lower edge trigger latch.
- 5. The 21140A drives address bits <1:0> on **br_a<1>** and **br_a<0>** respectively and asserts the **br_ce_l** pin.
- 6. In response, the boot ROM drives the data on the **br_ad** lines.
- 7. The 21140A terminates the byte read cycle by sampling the data, by placing it in CSR9<7:0>, and by deasserting the **br_ce_l** signal.

8. The driver can read the data from CSR9 after at least 20 PCI clock cycles passed since this CSR was previously written. Note that the results of trying to read the data earlier are UNPREDICTABLE.

Figure 7–2 Boot ROM Byte Read Cycle

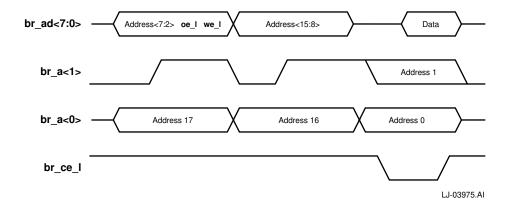

7.3.2 Byte Write


Before performing a write operation, all the boot ROM entries must be 1. This is achieved by using the erase command.

Figure 7–3 shows the 21140A byte write cycle. It is executed as follows:

- 1. The host initiates a byte write cycle to the boot ROM by writing the boot ROM offset to CSR10, setting a write command in CSR9 (CSR9<13> and CSR9<12> = 1), and by writing the data to CSR9<7:0>.
- 2. The 21140A drives the boot ROM address bits <7:2> and the signals **oe_l** and **we_l** on the **br_ad** lines, drives address bit 17 on the **br_a<0>** line, and sets **br_a<1>**. Signal **br_a<1>** is used as a **latch_enable** to latch the address, **oe_l**, and **we_l** in the upper edge trigger latch.
- 3. The 21140A clears **br_a<1>**.
- 4. The 21140A drives the boot ROM address bits <15:8> on the br_ad lines, drives address bit 16 on the br_a<0> line, and sets br_a<1>. Address bits <16:8> are latched in the upper edge trigger latch while the previous address bits (<17>, <7:2>) and the control signals (oe_l and we_l) are latched in the lower edge trigger latch.

- 5. The 21140A drives address bits <1:0> on **br_a<1>** and **br_a<0>** respectively, drives the data on the **br_ad** lines, and asserts the **br_ce_l** pin.
- 6. The boot ROM samples the data.
- 7. The 21140A terminates the byte write cycle by deasserting the **br_ce_l** signal.

Figure 7–3 Boot ROM Byte Write Cycle

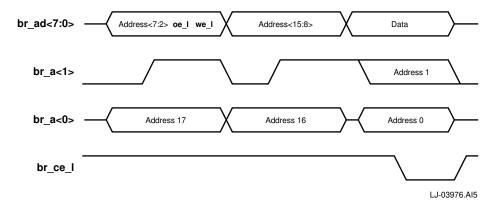


7.3.3 Dword Read

Figure 7–4 shows the Dword read cycle. The host initiates a Dword read cycle by executing a typical read cycle to the expansion ROM address space. The **ad** lines contain the expansion ROM address (base address and offset). Prior to the assertion of the **trdy_l** signal, the 21140A takes the following steps:

- The 21140A drives the boot ROM address bits <7:2> and the control signals oe_l and we_l on the br_ad lines, drives address bit 17 on the br_a<0> line, and sets br_a<1>. Signal br_a<1> is used as a latch_enable to latch the address, oe_l, and we_l in the upper edge trigger latch.
- 2. The 21140A clears **br_a<1>**.
- 3. The 21140A drives the boot ROM address bits <15:8> on the **br_ad** lines, drives address bit 16 on the **br_ad<0>** line, and sets **br_a<1>**. Address bits <16:8> are latched in the upper edge trigger latch while the previous address bits (17, <7:2>) and the control signals **oe_l** and **we_l** are latched in the lower edge trigger latch.

- 4. The 21140A remains **br_a<1>** high, drives **br_a<0>** to high, and asserts the **br_ce_l** pin.
- 5. In response, the boot ROM drives the data on the **br_ad** lines (byte 3).
- 6. The 21140A samples the data (byte 3).
- 7. The 21140A remains **br_a<1>** high, drives **br_a<0>** to low, and asserts the **br_ce_l** pin.
- 8. In response, the boot ROM drives the data on the **br_ad** lines (byte 2).
- 9. The 21140A samples the data (byte 2).
- 10. The 21140A drives **br_a<1>** to low, drives **br_a<0>** high, and asserts the **br_ce_l** pin.
- 11. In response, the boot ROM drives the data on the **br_ad** lines (byte 1).
- 12. The 21140A samples the data (byte 1).
- The 21140A remains br_a<1> low, drives br_a<0> to low, and asserts the br_ce_l pin.
- 14. In response, the boot ROM drives the data on the **br_ad** lines (byte 0).
- 15. The 21140A samples the data and deasserts the **br_ce_l** signal.
- 16. The 21140A assembles the 4 bytes, drives the data on the **ad** lines, and asserts **trdy_l**.

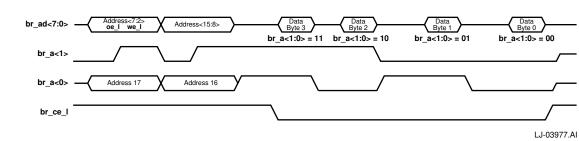



7.4 Serial ROM Operations

There are four serial ROM interface pins (Table 3–50):

Serial ROM data out (CSR9<3>) Serial ROM data in (CSR9<2>) Serial ROM serial clock (CSR9<1>) Serial ROM chip select (CSR9<0>)

All EEPROM access sequences and timing are handled by software. Serial ROM operations include the following: read and write. In addition, the erase EEPROM operation is also supported and is handled similarly to the read and write operations.

7.4.1 Read Operation


Read operations consist of three phases:

- 1. Command phase—3 bits (binary code of 110)
- 2. Address phase—6 bits for 256-bit to 1Kb ROMs, 8 bits for 2Kb to 4Kb ROMs.
- 3. Data phase—16 bits

Figure 7–5 and Figure 7–6 show a typical read cycle that describes the action steps that need to be taken by the driver to execute a read cycle. The timing (for example, 30 ns, 50 ns, and so on) specifies the minimum time that the driver must wait before advancing to the next action.

During both the address phase in Figure 7–5 and the data phase in Figure 7–6, 1 bit is handled during each phase cycle. Therefore, the address phase should be repeated 6 or 8 times depending on the address length and the data phase should be repeated 16 times. Note that the value DX is the current data bit.

Figure 7–5 Read Cycle (Page 1 of 2)

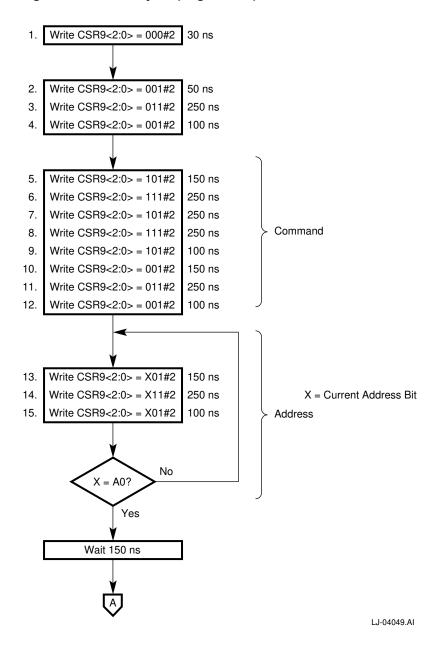


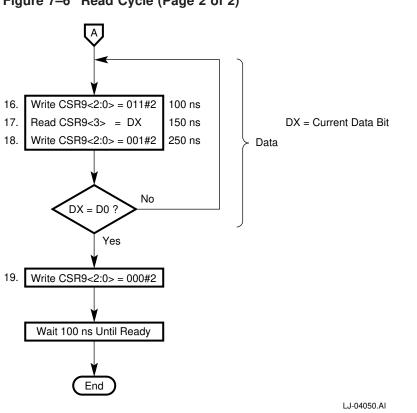


Figure 7–6 Read Cycle (Page 2 of 2)

Figure 7–7 shows the read operation timing of the address and data.



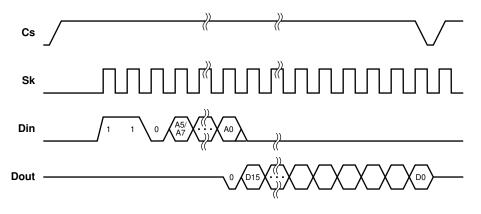

LJ-03994.AI

7.4.2 Write Operation

Write operations consist of three phases:

- 1. Command phase—3 bits (binary code of 101)
- 2. Address phase—6 bits for 256-bit to 1Kb ROMs, 8 bits for 2Kb to 4Kb ROMs.
- 3. Data phase—16 bits

Figure 7–8 and Figure 7–9 show a typical write cycle that describes the action steps that need to be taken by the driver to execute a write cycle. The timing (for example, 30 ns, 50 ns, and so on) specifies the minimum time that the driver must wait before advancing to the next action.

During both the address phase in Figure 7–8 and the data phase in Figure 7–9, 1 bit is handled during each phase cycle. Therefore, the address phase should be repeated 6 or 8 times depending on the address length and the data phase should be repeated 16 times.


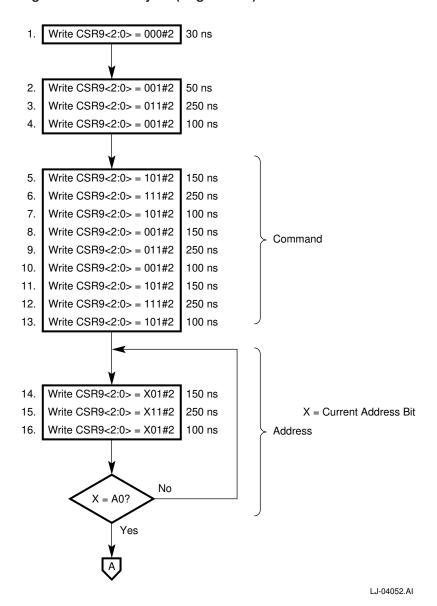



Figure 7–8 Write Cycle (Page 1 of 2)


Figure 7–9 Write Cycle (Page 2 of 2)

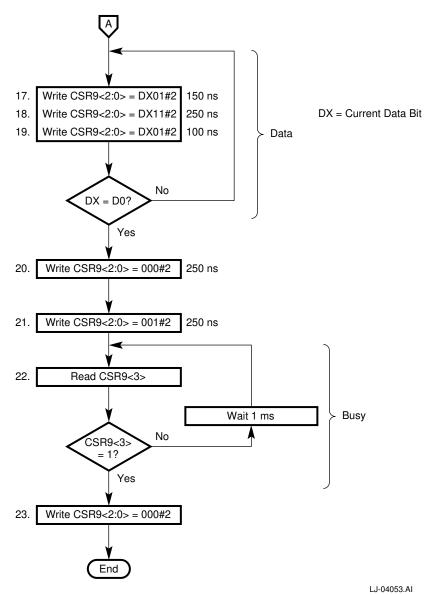

7-12 Preliminary—Subject to Change—October 1995

Figure 7–10 shows the write operation timing of the address and data. The time period indicated by twp is the actual write cycle time.



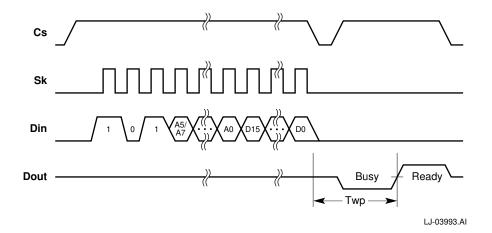

7.5 External Register Operation

The 21140A provides the ability to connect an external 8-bit register to the boot ROM port. Figure 7–1 illustrates the signals for this connection. For a detailed description of external register connection, refer to *Connecting the DECchip 21140A with Boot ROM, Serial ROM, and External Register: An Application Note.*

Note	

CSR10 must be 0 before any external register access is done.

To read from the external register, the driver should set the read command (CSR9<14>) and select the external register (CSR9<10>=1). The 21140A performs the same steps as described in Section 7.3.1. The only differences are that now the 21140A drives 1 on both the **we_l** and **oe_l** boot ROM inputs and drives 0 on **br_a<0>**. This, together with the assertion of **br_ce_l**, performs the actual read operation. The data is sampled by the 21140A and is placed in CSR9<7:0>.

7.5 External Register Operation

To write to the external register, the driver should set the write command (CSR<13>), select the external register (CSR9<10>=1), and write the data to CSR9<7:0>. The 21140A performs the same steps as described in Section 7.3.2. The only differences are that now the 21140A drives 1 on both the **we_l** and **oe_l** boot ROM inputs and drives 1 on **br_a<0>**. This, together with the assertion of **br_ce_l**, performs the actual write operation.

7.6 General-Purpose Port Register (CSR12)

The 21140A has an 8-pin general-purpose port that is controlled by CSR12.

Figure 7–11 shows the CSR12 bit fields and Table 7–1 describes the bit fields.

Figure 7–11 CSR12 General-Purpose Port Register

	31	30 2	29	28 2	72	6 25	5 24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
																									1	1	1				
GPC - General-Purpose Control																															
MD - General-Purpose Mode and Data																															

LJ-04706.AI5

7.6 General-Purpose Port Register (CSR12)

Table 7–1 CSR12 General-Purpose Port Register Description

Field	Description			
8	GPC — General-Purpose Control			
	Determines whether accessing CSR12<7:0> affects either the direction of each pin (input or output) or the data of each pin (1 or 0). The interaction of this bit and CSR12<7:0> is described in the following field.			
7:0	MD — General-Purpose Mode and Data			
	When CSR12<8> is set, the value that is written by the host to CSR12<7:0> sets the direction of each pin to be either an input pin or an output pin. For example, if CSR12<1> is 1, then gep<1> is an output pin. If CSR12<1> is 0, then gep<1> is an input pin.			
	When a hardware reset is initiated, all gep pins become input pins.			
	When $CSR12<8>$ is reset, any host write access to $CSR12<7:0>$ sets values on the pins that are configured as output pins. For example, if $CSR12<1>$ is 1 (and is defined as an output pin), then gep<1> is 1. If $CSR12<1>$ is 0 (and is defined as an output pin), then gep<1> is 0.			
	When CSR12<8> is reset, any host read access to CSR12<7:0> reflects the input values on any pins designated as input pins and output values on any pins designated as output pins.			
	The application of the general-purpose pins in board design should be correlated with the way the port driver software is using it.			
	Note			

Table 7–2 lists the access rules for CSR12.

Table 7–2 CSR12 A	Access	Rules
-------------------	--------	-------

Category	Description
Value after reset	FFFFFEXXH
Read access rules	—
Write access rules	_

7.7 LED Support

7.7 LED Support

The 21140A supports two network event LEDs. Table 7–3 describes the LEDs and pin connections.

Table 7–3 LED Connection

Signal	Pin Number	Description
rcv_match	122	Receive address match
sym_link	124	SYM port link

A Joint Test Action Group—Test Logic

This appendix describes the joint test action group (JTAG) test logic and the associated registers (instruction, bypass, and boundary scan).

A.1 General Description

JTAG test logic supports testing, observing, and modifying circuit activity during the components normal operation. As a PCI device, the 21140A supports the IEEE standard 1149.1 *Test Access Port and Boundary Scan Architecture*. The IEEE 1149.1 standard specifies the rules and permissions that govern the design of the 21140A JTAG test logic support. Inclusion of JTAG test logic allows boundary scan to be used to test both the device and the board where it is installed. The JTAG test logic consists of the following four signals to serially interface within the 21140A (Table 2–1):

tck — JTAG clock
tdi — Test data and instructions in
tdo — Test data and instructions out
tms — Test mode select

Note

If JTAG test logic is not implemented, the **tck** pin should be connected to ground, and both the **tms** and **tdi** pins should be connected high. The **tdo** signal should remain unconnected.

These test pins operate in the same electrical environment as the 21140A PCI I/O buffers.

The system vendor is responsible for the design and operation of the 1149.1 serial chains (rings) required in the system. Typically, an 1149.1 ring is created by connecting one device's **tdo** pin to another device's **tdi** pin to create a serial chain of devices. In this application, the 21140A receives the same **tck** and **tms** signals as the other devices. The entire 1149.1 ring is connected to

A.1 General Description

either a motherboard test connector for test purposes or to a resident 1149.1 controller.

Note _

To understand the description of the 21140A JTAG test logic in this section, the system designer should be familiar with the IEEE 1149.1 standard.

A.2 Registers

In JTAG test logic design, three registers are implemented through the 21140A pads:

Instruction register Bypass register Boundary-scan register

A.2.1 Instruction Register

The 21140A JTAG test logic instruction register is a 3-bit (IR<2:0>) scan-type register that is used to direct the JTAG machine to the appropriate operating JTAG mode (Table A–1). Its contents are interpreted as test instructions. The test instructions select the boundary-scan registers for serial transfer of test data by using the **tdi** and **tdo** pins. These instructions also control the operation of the selected test features.

Table A–1 Instr	uction	Register
-----------------	--------	----------

IR<2>	IR<1>	IR<0>	Description
0	0	0	EXTEST mode (mandatory instruction) allows testing of the 21140A board-level interconnections. Test data is shifted into the boundary-scan register of the 21140A and then is transferred in parallel to the output pins.
0	0	1	Sample-preload mode (mandatory instruction) allows the 21140A JTAG boundary-scan register to be initialized prior to selecting other instructions such as EXTEST. It is also possible to capture data at system pins while the system is running, and to shift that data out for examination.
0	1	0	Reserved.
			(continued on next next)

(continued on next page)

A.2 Registers

IR<2>	IR<1>	IR<0>	Description
0	1	1	Reserved.
1	0	0	Reserved.
1	0	1	Tristate mode (optional instruction) allows the 21140A to enter power-saving mode. When this occurs, the PCI and serial ROM port pads are tristated. The MII and SRL ports continue to operate normally without any power reduction.
1	1	0	Continuity mode (optional instruction) allows the 21140A continuity test while in production.
1	1	1	Bypass mode (mandatory instruction) allows the test features on the 21140A JTAG test logic to be bypassed. This instruction selects the bypass register to be connected between tdi and tdo .
			When the bypass mode is selected, the operation of the test logic has no effect on the operation of the system logic.
			Bypass mode is selected automatically when power is applied.

Table A–1 (Cont.) Instruction Register

A.2.2 Bypass Register

The bypass register is a 1-bit shift register that provides a single-bit serial connection between the **tdi** and **tdo** signals when either no other test data register in the 21140A JTAG test logic registers is selected, or the test logic in the 21140A JTAG is bypassed. When power is applied, JTAG test logic resets and then is set to bypass mode.

A.2.3 Boundary-Scan Register

The JTAG boundary-scan register consists of cells located at the PCI and serial ROM pads. This register provides an interconnections test. It also provides additional control and observation of the 21140A pins during the testing phases. For example, the 21140A boundary-scan register can observe the output enable control signals of the I/O pads: **ad_oe**, **cbe_oe**, and so on. When these signals are programmed to be 1 during EXTEST mode, data is applied to the output from the selected boundary-scan cells.

A.2 Registers

The following listing contains the order of the boundary-scan register pads:

-> tdi	-> int_l	-> rst_l	-> pci_clk	-> gnt_l
-> req_l	-> ad_oe	-> ad<31:24>	-> cbe_oe	-> c_be_1<3>
-> idsel	-> ad<23:16>	-> c_be_1<2>	-> frame_oe	-> frame_l
-> irdy_oe	-> irdy_l	-> trdy_oe	-> trdy_l	-> devsel_oe
-> devsel_l	-> stop_oe	-> stop_l	-> perr_oe	-> perr_l
-> serr_l	-> par_oe	-> par	-> c_be_l<1>	-> ad<15:8>
-> c_be_1<0>	-> ad<7:0>	-> do\$pd	-> di\$sr	-> sk\$sr
-> cs\$sr	-> br_ad<0>	-> br_ad<1>	-> br_ad<2>	-> br_ad<3>
-> br_ad<4>	-> br_ad<5>	-> br_ad_oe	-> br_ad<6>	-> br_ad<7>
-> br_ce_l	-> br_a<0>	-> br_a<1>	-> tdo	

A.2.4 Test Access Port Controller

The test access port (TAP) controller interprets IEEE P1149.1 protocols received on the **tms** pin. The TAP controller generates clocks and control signals to control the operation of the test logic. The TAP controller consists of a state machine and control dispatch logic. The 21140A fully implements the TAP state machine as described in the IEEE P1149.1 standard.

B

DNA CSMA/CD Counters and Events Support

This appendix describes the 21140A features that support the driver when implementing and reporting the specified counters and events.¹ CSMA/CD² specified events can be reported by the driver based on these features. Table B–1 lists the counters and features.

Counter	21140A Feature
Time since creation counter	Supported by the host driver.
Bytes received	Driver must add the frame length (RDES0<30:16>) fields of all successfully received frames.
Bytes sent	Driver must add the buffer 1 size (TDES1<10:0>) and buffer 2 size (TDES1<21:11>) fields of all successfully transmitted buffers.
Frames received	Driver must count the successfully received frames in the receive descriptor list.
Frames sent	Driver must count the successfully transmitted frames in the transmit descriptor list.
Multicast bytes received	Driver must add the frame length (RDES0<30:16>) fields of all successfully received frames with multicast frame (RDES0<10>) set.
Multicast frames received	Driver must count the successfully received frames with multicast frame (RDES<10>) set.
	(continued on next page)

Table B–1 CSMA/CD Counters

¹ As specified in the DNA Maintenance Operations (MOP) Functional Specification, Version T.4.0.0, 28 January 1988.

² Carrier-sense multiple access with collision detection

Counter	21140A Feature
Frames sent, initially deferred	Driver must count the successfully transmitted frames when deferred (TDES0<0>) is set.
Frames sent, single collision	Driver must count the successfully transmitted frames when the collision count (TDES0<6:3>) is equal to 1.
Frames sent, multiple collisions	Driver must count the successfully transmitted frames when the collision count (TDES0<6:3>) is greater than 1.
Send failure, excessive collisions	Driver must count the transmit descriptors when the excessive collisions (TDES0<8>) bit is set.
Send failure, carrier check failed	Driver must count the transmit descriptors when both late collision (TDES0<9>) and loss of carrier (TDES0<11>) are set.
Send failure, short circuit	There were two successive transmit descriptors when the no_carrier flag (TDES0<10>) is set. This indicates a short circuit.
Send failure, open circuit	There were two successive transmit descriptors when the excessive_collisions flag (TDES0<8>) is set. This indicates an open circuit.
Send failure, remote failure to defer	Flagged as a late collision (TDES0<9>) in the transmit descriptors.
Receive failure, block check error	Driver must count the receive descriptors when CRC error (RDES0<1>) is set and dribbling bit (RDES0<2>) is cleared.
Receive failure, framing error	Driver must count the receive descriptors when both CRC error (RDES0<1>) and dribbling bit (RDES0<2>) are set.
Receive failure, frame too long	Driver must count the receive descriptors when frame too long (RDES0<7>) is set.
Unrecognized frame destination	Not applicable.
Data overrun	Driver must count the receive descriptors when (RDES0<0>) is set.
System buffer unavailable	Reported in the missed frame counter CSR8<15:0> (Section 3.2.2.8).
User buffer unavailable	Maintained by the driver.
	(continued on next page)

Table B-1 (Cont.) CSMA/CD Counters

Table B–1 (Cont.) CSMA/CD Counters Counter 21140A Feature

Counter	21140A Feature
Collision detect check failed	Driver must count the transmit descriptors when heartbeat fail (TDES0<7>) is set.

Hash C Routine

This appendix provides examples of a C routine that generates the hash index for a given Ethernet address. The bit position in the hash table is taken from the CRC32 checksum derived from the first 6 bytes.

There are two C routines that follow: the first is for the little endian architecture and the second is for big endian architecture.

```
1. Little endian architecture Hash C routine.
#define CRC32_POLY 0xEDB88320UL /* CRC-32 Poly -- Little Endian*/
#define HASH_BITS 9 /* Number of bits in hash */
unsigned
crc32_mchash(
    unsigned char *mca)
{
    u_int idx, bit, data, crc = 0xFFFFFFFUL;
    for (idx = 0; idx < 6; idx++)
        for (data = *mca++, bit = 0; bit < 8; bit++, data >>=1)
            crc = (crc >> 1) ^ (((crc ^ data) & 1) ? CRC32_POLY : 0);
    return crc & ((1 << HASH_BITS) - 1) /* return low bits for hash */
}</pre>
```

2. Big endian architecture Hash C routine.

#include <stdio>
unsigned HashIndex (char *Address);

```
main (int argc, char *argv[]) {
   int Index;
   char m[6];
    if (argc < 2) {
      printf("usage: hash xx-xx-xx-xx-xx\n");
       return;
    }
    sscanf(argv[1],"%2X-%2X-%2X-%2X-%2X-%2X",
       &m[0],&m[1],&m[2],
       &m[3],&m[4],&m[5]);
    Index = HashIndex(&m[0]);
    printf("hash_index = %d byte: %d bit: %d\n",
            Index, Index/8, Index%8);
}
unsigned HashIndex (char *Address) {
    unsigned Crc = 0xfffffff;
    unsigned const POLY 0x04c11db6
    unsigned Msb;
    int BytesLength = 6;
    unsigned char CurrentByte;
    unsigned Index;
    int Bit;
    int Shift;
     for (BytesLength=0; BytesLength<6; BytesLength++) {</pre>
        CurrentByte = Address[BytesLength];
        for (Bit=0; Bit<8; Bit++) {</pre>
            Msb = Crc >> 31;
            Crc <<= 1;
            if ( Msb ^ (CurrentByte & 1)) {
                 Crc ^= POLY;
                 Crc |= 0x0000001;
            CurrentByte >>= 1;
        }
     }
```

```
/* the hash index is given by the upper 9 bits of the CRC
* taken in decreasing order of significance
* index<0> = crc<31>
* index<1> = crc<30>
* ...
* index<9> = crc<23>
*/
for (Index=0, Bit=23, Shift=8;
    Shift >= 0;
    Bit++, Shift--) {
    Index |= ( ( (Crc>>Bit) & 1 ) << Shift );
}
return Index;</pre>
```

}

D

Technical Support and Ordering Information

D.1 Technical Support

If you need technical support or help deciding which literature best meets your needs, call the Digital Semiconductor Information Line:

United States and Canada1-800-332-2717Outside North America+1-508-628-4760

D.2 Ordering Digital Semiconductor Products

To order the DECchip 21140A PCI Fast Ethernet LAN Controller and for more information about an Evaluation Board kit, contact your local distributor.

You can order the following semiconductor product from Digital:

Product	Order Number
DECchip 21140A PCI Fast Ethernet LAN Controller	21140–AC

D.3 Ordering Associated Literature

The following table lists some of the available Digital Semiconductor literature. For a complete list, contact the Digital Semiconductor Information Line.

Title	Order Number
DECchip 21140A PCI Fast Ethernet LAN Controller Product Brief	EC-QN7MA-TE

D.3 Ordering Associated Literature

Title	Order Number
DECchip 21140A PCI Fast Ethernet LAN Controller Data Sheet	EC-QN7PA-TE
Using the DECchip 21140A with Boot ROM, Serial ROM and External Register: An Application Note	EC-QPQWA-TE

D.4 Ordering Third-Party Literature

You can order the following third-party literature directly from the vendor:

Title	Vendor
PCI Local Bus Specification Revision 2.1 PCI BIOS Specification Revision 2.1	PCI Special Interest Group 1–800–433–5177 (U.S.) 1–503–797–4207 (International) 1–503–234–6762 (FAX)

Index

Α

Alignment error description, 6–19 Alpha documentation, D–1 Arbitration bus, 3–19 scheme, 4–30 timing, 5–7 Associated literature, D–1

В

100BASE-FX implementation, 6-2 100BASE-T definition, 6-1 100BASE-T4 implementation, 6-1 100BASE-TX implementation, 6-1 100BASE-X implementation, 6-1 Block diagram, 1-5 Boot ROM byte read, 7–3 byte write, 7-4 Dword read, 7-5 interface, 3-42 overview, 7-1 pointer, 3-45 select, 3-44

Boot ROM, serial ROM, and MII management register See CSR9 Boot ROM programming address register See CSR10 Bus commands, 5-2 error bits, 3-27 runt frames, 1-1 unsupported transactions, 5-3 Bus master, 5–1 enabling, 3-5 operations, 5-6 Bus mode register See CSR0 Bus slave, 5-1 operations, 5-2 Byte ordering big endian, 3-18 little endian, 3-18

С

Capture effect 2-0 backoff algorithm, 6-23 definition, 6-20 enable, 3-31 example, 6-21 resolution, 6-22 sequence, 6-22 special enable, 3-30 Carrier-sense multiple access with collision detection See CSMA/CD CBER, 3-11 to 3-12 mapping, 3-12 ROM enable bit, 3–12 CBIO, 3-8 to 3-9 address, 3-9 CBMA, 3-9 to 3-10 address, 3-10 CFCS, 3-3 to 3-6 CFDD, 3-14 to 3-15 CFID, 3-2 to 3-3 CFIT, 3-12 to 3-14 CFLT, 3-7 to 3-8 CFRV, 3-6 to 3-7 Command and status configuration register See CFCS Configuration base I/O address register See CBIO Configuration base memory address register See CBMA Configuration driver area register See CFDD Configuration ID register See CFID Configuration interrupt register See CFIT Configuration latency timer register See CFLT Configuration registers mapping, 3-1 purpose, 3-1 Configuration revision register See CFRV Control and status registers See CSRs CRC See also Frame check sequence error, 6-18 CSMA/CD counters, B-1

CSR0, 3-17 to 3-20 CSR1, 3-20 CSR10, 3-45 CSR11, 3-45 to 3-47 expired, 3-25 value, 3-46 CSR12, 3-47 to 3-48 8-pin implementation, 3-47, 7-14 CSR13 reserved, 3-17 CSR14 reserved, 3-17 CSR15, 3-48 to 3-51 CSR2, 3-20 to 3-21 CSR3, 3-21 to 3-23 CSR4. 3-21 to 3-23 CSR5, 3-23 to 3-28 CSR6, 3-28 to 3-37 CSR7, 3-37 to 3-41 CSR8, 3-41 to 3-42 CSR9, 3-42 to 3-45 CSRs access to, 3-15 mapping, 3-16 Cyclic redundancy check See CRC

D

Data communications, 4–1 Descriptor error, 6–19 list addresses, 3–21 missed frame counter, 3–41 skip length, 3–18 Descriptor list address registers *See* CSR3; CSR4 Destination address bit 1, 6–17 Device select timing, 3–5 DMA data transfers, 1–3 programmable burst length, 3–18 Documentation, D-1 Dribbling bit, 4-8, 6-19

Ε

Encoder/decoder See ENDEC ENDEC front-end decoder, 1-1 Error system, 3-4 Ethernet frame format, 6–8 imperfect filtering, 6-10 inverse filtering, 6-11 perfect filtering, 6-10 promiscuous reception, 6-11 receive addresses, 6-10 Expansion ROM base address register See CBER External register operation, 7-13 select, 3-44

F

Fast transactions back-to-back, 3–5 FIFO purpose, 1–3 store and forward, 3–31 Frame check sequence computation, 6–10 Frame format description, 6–9 Frame too long description, 6–19 Full-duplex mode, 3–32 Full-duplex operations, 6–20

G

General-purpose port register See CSR12 General-purpose timer register See CSR11

Η

Hash C routine examples, C-1
Heartbeat collision pulse fail, 4-14
Host communication data buffers, 4-1 descriptor lists, 4-1 descriptor ring and chain structures, 4-1 receive descriptor format, 4-3 transmit descriptor format, 4-11

I/O space access to, 3-6 ID device, 3-3 manufacturer, 3-3 **IEEE 802.3** signals, 6-2 Interpacket gap See IPG Interrupt enable register See CSR7 Interrupts abnormal, 3-25 early receive, 3-25 enabling, 3-37 list, 4-31 multiple events, 4-31 normal, 3-25 pin definition, 3-13 IPG IPS1 duration, 6-13

IPG (cont'd) IPS2 duration, 6–13

J

Jabber timer interval, 3–50 purpose of, 6–25 Joint test action group See JTAG JTAG description, A–1 instruction register, A–2 registers, A–2 boundary scan, A–3 bypass, A–3 instruction, A–2

L

Latency timer count, 3–8 LED connection, 7–16 Link fail test fail, 4–14 Literature, D–1, D–2 Loopback modes, 6–19 external, 6–19 internal, 6–19 Loopback operation mode, 3–35

Μ

MAC, 6-5 to 6-15 reception, 6-6 transmission, 6-5
Media access control *See* MAC
Media-independent interface *See* MII
Memory controller terminations, 5-11

Memory space access to, 3-4, 3-6 MII characteristics, 6-2 error, 4-7 location, 6-1 management, 3-42 MII/SYM operating modes, 6-4 port, 6-1 port select, 3-31 signals, 6–2 Missed frame counter register See CSR8 Modes descriptor byte ordering, 3-18 filtering, 3-36 force collision, 3–32 imperfect address filtering, 3-33 inverse filtering, 3-33 pass bad frames, 3-33 perfect address filtering, 3-34 promiscuous, 3-33 sleep, 3–15 snooze, 3-15 symbol, 3-30

Ν

Network events LEDs, 7–16

0

Operation mode register See CSR6 Ordering products, D–1

Ρ

Packets IPG, 6–20 Parity disable checking, 3–5 error, 5–16 Parity error (cont'd) detection, 3-4 generation, 5-16 software reset, 3-27 status, 3-5 Parking, 5-17 Parts ordering, D-1 PCI interface functions, 1-3 purpose, 5-1 PCS implementation, 6-1 support features, 1-1Peripheral component interconnect See PCI PHY layer timing, 2-6 Physical coding sublayer See PCS Physical layer medium dependent See PMD Physical medium attachment See PMA Pinout diagram, 2-1 PMA, 6-1 PMD, 6-1 Port data rate, 3-35 Power-saving modes, 6-23 sleep, 3-15 snooze, 3-15 Preamble recognition sequence, 6-17

R

RDES0, 4-3 to 4-8 RDES1, 4-8 to 4-9 RDES2, 4-9 RDES3, 4-10 Read cycle configuration, 5-5 memory, 5-9 slave, 5-3

Receive all packets, 3-30 buffer 1 address. 4-9 buffer 2 address, 4-10 data buffer 1 byte size, 4–9 data buffer 2 byte size, 4–9 data type, 4–6 descriptor status validity, 4-11 DMA conditions, 4-30 end of ring, 4-9 error summary, 4–5 first descriptor, 4–6 frame length, 4–5 frame too long, 4-7 frame type, 4–7 last descriptor, 4-6 multicast frame, 4-6 OWN bit, 4-5 process state, 3-28 second address chained, 4-9 start of list, 3-22 Receive descriptor 0 See RDES0 Receive descriptor 1 See RDES1 Receive descriptor 2 See RDES2 Receive descriptor 3 See RDES3 Receive descriptors, 4-2 to 4-10 See also specific receive descriptor entries Receive poll demand register See CSR2 Receive process, 4-32 to 4-35 buffer unavailable, 3-26 descriptor acquisition, 4-33 frame processing, 4-33 start, stop, 3-34 state transitions, 4-34 when suspended, 4-34 window, 4-31

Receiving operation, 6-15 to 6-19 address matching, 6-17 frame conditions. 6–18 frame decapsulation, 6-17 initiation, 6-16 preamble processing, 6–16 terminating, 6-18 Registers, 3-1 to 3-51 See also specific register entries Related documentation, D-1 Reset hardware, 4-29 software, 4-29 Revision number, 3-7 Runt frame size, 6-19 RxM receive path, 1-4

S

Semiconductor Information Line, D-1 Serial port See SRL port Serial ROM interface, 3-42 overview, 7-1 read operation, 7-7 select, 3-44 write operation, 7-10 Setup frame imperfect filtering format, 4-22 perfect filtering format, 4-21 size, 4-19 Shielded twisted-pair See STP Signal pins, 2–3 Sleep mode, 3-15, 6-23 Snooze mode, 3-15, 6-24 SRL port, 3-31, 6-1 SSID, 3-10 to 3-11 subsystem ID, 3-11 subsystem vendor ID, 3-11

Startup procedure, 4–32 Status CSR5, 3–23 Status register See CSR5 STP, 1–1, 6–1 Subsystem ID register See SSID System error enabling, 3–5

Т

Target disconnect termination, 5-14 Target retry data transaction, 5-15 TDES0, 4–12 to 4–14 TDES1, 4-14 to 4-17 TDES2, 4-17 to 4-18 TDES3, 4-18 Technical support, D-1 Terminations, 5–11 master abort, 3-4 target abort, 3-4 Third-party documentation, D-2 Transmit automatic polling, 3-19 buffer 1 address, 4-18 buffer 2 address, 4-18 collision counter, 4-14 CRC disable, 4-16 data buffer 1 byte size, 4–16 data buffer 2 byte size, 4–16 defer, 4-14 descriptor status validity, 4-19 DMA conditions, 4–30 end of ring, 4–16 error summary, 4-13 filtering types, 4–17 first segment, 4–15 interrupt on completion, 4-15 last segment, 4–15

Transmit (cont'd) OWN bit, 4-13 padding disable, 4–16 process state, 3-27 second address chained, 4-16 start of list, 3-23 threshold, 3-34 Transmit descriptor 0 See TDES0 Transmit descriptor 1 See TDES1 Transmit descriptor 2 See TDES2 Transmit descriptor 3 See TDES3 Transmit descriptors, 4-11 to 4-19 See also specific transmit descriptor entries Transmit jabber timer timeout, 3-26 Transmit poll demand register See CSR1 Transmit process, 4-35 to 4-38 buffer unavailable, 3-26 frame processing, 4–36 polling suspended, 4-36 state transitions, 4-37 window, 4-30 Transmit threshold 10Mb/s or 100Mb/s, 3-30 Transmitting operation, 6-11 to 6-15 collision, 6–13 initial deferral, 6-13 initiation, 6-12 parameters, 6-15 termination, 6-14 TxM transmit path, 1-3

W

Watchdog timer line status, 3-26 purpose of, 6-25 receive, 4-7 Watchdog timer (cont'd) receive disable, 3-50 receive release, 3-50 Watchdog timer register *See* CSR15 Write cycle memory, 5-10 slave, 5-4